

SNL G-503

GROUP 18—BODY (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				1801—BODY MOUNTING PARTS		
			WO-A-4415	LINER, body sill, thick	2	
			WO-A-4414	LINER, body sill, thin	2	
				1802—BODY PILLARS		
			WO-A-2815	PILLAR, cowl, left	1	
			WO-A-2816	PILLAR, cowl, right	1	
			WO-52863	BOLT, hex-hd., S., $\frac{3}{8}$ -16NC-2 x 1 $\frac{1}{2}$ (pillar to floor)	2	
			WO-5544	NUT, hex., S., $\frac{3}{8}$ -16NC-2	2	
			WO-5010	WASHER, lock, reg., S., cd-pltd., $\frac{3}{8}$ in.	2	
			WO-5455	WASHER, plain, S., $\frac{3}{8}$ in.	4	
				1802A—BODY PANELS		
			WO-A-2138	BOLT, eye, safety strap (S., $\frac{3}{8}$ -16NC-2)	2	.099
			WO-5544	NUT, hex., S., $\frac{3}{8}$ -16NC-2 (bolt to body)	2	
			WO-5010	WASHER, lock, reg., S., $\frac{3}{8}$ in.	2	
			WO-A-2853	BRACKET, engine crank retaining clamp, assembly	2	
			WO-A-2940	BRACKET, retaining, engine crank	1	
			WO-A-2950	FILLER, rear floor pan cross sill (wood)	1	
			WO-A-2311	GUSSET, front floor toe board to frame, left, assembly	1	
			WO-A-2312	GUSSET, front floor toe board to frame, right, assembly	1	
			WO-50163	BOLT, hex-hd., S., $\frac{3}{8}$ -24NF-2 x $\frac{3}{4}$	2	
			WO-53135	WASHER, lock, S., external teeth, $\frac{3}{8}$ in.	2	
			WO-53026	WASHER, lock, internal, external teeth, $\frac{3}{8}$ in. (GM-178551)	2	
			WO-50921	WASHER, plain, S., $\frac{3}{8}$ in.	2	
			WO-A-2933	NUT, clinch, special, S. ($\frac{1}{4}$ in. pipe tap, std.) (for $\frac{1}{4}$ in. drain plug in floor)	2	
			WO-A-2278	NUT, clinch, S., $\frac{1}{4}$ -20NC-2 (transmission cover)	7	
			WO-A-2375	NUT, clinch, S., $\frac{3}{16}$ -24NF-2 (transmission cover and accelerator pedal)	1	.0064
			WO-A-2263	NUT, clinch, S., $\frac{3}{8}$ -16NC-2 (front floor rear cross sill, assembly)	1	.0125
			WO-662010	NUT, clinch, S., $\frac{3}{16}$ -18NC-2 (cowl side panel for front fender)	6	.0032
			WO-A-2466	NUT, wing, S., $\frac{3}{16}$ -18NC-2 (crank retaining brkt.)	1	
			WO-A-12003	PAN, front floor	1	
			WO-51545	BOLT, hex-hd., S., $\frac{3}{8}$ -16NC x 1 $\frac{1}{4}$ (through left front cross sill)	2	
			WO-51954	BOLT, hex-hd., S., $\frac{3}{8}$ -16NC x 2 (through front cross sills to frame brkt.)	2	
			WO-5544	NUT, hex., S., $\frac{3}{8}$ -16NC-2	4	
			FM-33799-S			
			FM-GPW-1102396			
			FM-33799-S2			
			FM-34807-S2			
			FM-GPW-1140449			
			FM-GPW-1140441			
			FM-GPW-1110895			
			FM-20349-S2			
			FM-355909-S2			
			FM-350976-S2			
			FM-351015-S			
			FM-353202-S			
			FM-33896-S2			
			FM-GPW-1111140			
			FM-20514-S2			

FM-356016-S	WO-52893	NUT, hex., S., stamped, $\frac{3}{8}$ -16NC-2	4	.0032
FM-34907-S7	WO-53135	WASHER, lock, S., cd-pltd., external teeth, $\frac{3}{8}$ in.	4	
FM-356200-S7	WO-53026	WASHER, lock, S., cd-pltd., internal, external teeth, $\frac{3}{8}$ in.	4	
	WO-50921	WASHER, plain, S., $\frac{3}{8}$	8	
FM-GPW-1111218	WO-A-12017	PAN, rear floor	1	
FM-20514-S2	WO-51405	BOLT, hex-hd., S., $\frac{3}{8}$ -16NC x 1 (to frame, left side)	1	
FM-356016-S	WO-51954	BOLT, hex-hd., S., $\frac{3}{8}$ -16NC-2 x 2 (to frame, right side)	1	.0032
FM-33799-S	WO-52893	NUT, hex., S., $\frac{3}{8}$ -16NC-2 (stamped)	1	
FM-34907-S7	WO-5544	NUT, hex., S., $\frac{3}{8}$ -16NC-2	1	
FM-356200-S7	WO-53135	WASHER, lock, S., cd-pltd., external teeth, $\frac{3}{8}$ in.	3	
	WO-53026	WASHER, lock, S., cd-pltd., internal, external teeth, $\frac{3}{8}$ in.	3	
	WO-50921	WASHER, plain, S., $\frac{3}{8}$ in.	2	
FM-GPW-1127847	WO-A-2756	PANEL, body, left side	1	
FM-GPW-1127846	WO-A-2757	PANEL, body, right side	1	
FM-GPW-1140324	WO-A-2758	PANEL, body, rear	1	
	WO-52857	BOLT, hex-hd., S., $\frac{5}{16}$ -18NC-2 x $1\frac{1}{2}$	2	
	WO-52845	NUT, hex., S., $\frac{5}{16}$ -18NC-2 (stamped)	2	
	WO-6167	NUT, hex., S., $\frac{5}{16}$ -18NC-2	2	
FM-356309-S7	WO-53025	WASHER, lock, S., cd-pltd., internal, external teeth, $\frac{3}{8}$ in.	4	
	WO-A-4116	WASHER, plain, S., $\frac{3}{8}$ in.	4	
FM-GPW-1102039	WO-A-12011	PANEL, cowl, left side	1	
FM-GPW-1102038	WO-A-12010	PANEL, cowl, right side	1	
FM-GPW-1102015	WO-A-12105	PANEL, cowl, top	1	
	WO-A-12025	PANEL, dash, assembly	1	
FM-GPW-1127851	WO-A-12023	PANEL, rear left wheel house, inner	1	
FM-GPW-1127849	WO-A-2771	PANEL, rear left wheel house, top	1	
FM-GPW-1127850	WO-A-12024	PANEL, rear right wheel house, inner	1	
FM-GPW-1127848	WO-A-2772	PANEL, rear right wheel house, top	1	
FM-GPW-1103446-A	WO-A-2939	PLATE, tapping, ax clamp	1	
FM-GPW-1111238	WO-A-2879	PLATE, tapping, driver's seat, front floor	1	
FM-GPW 1102130	WO-A-2190	PLATE, tapping, hood hinge (on cowl)	1	
FM-GPW-1128242	WO-A-2940	PLATE, tapping, shovel clamp	2	
FM-358019-S	WO-A-5120	PLUG, body drain hole cover (pipe, slotted, $\frac{1}{4}$ in.)	2	
FM-GPW-1162606	WO-A-3144	REST, foot, rear floor assembly	2	
FM-20326-S2	WO-51485	BOLT, hex-hd., S., $\frac{5}{16}$ -18NC x $\frac{5}{8}$ (to wheel house panel)	3	
FM-20346-S2	WO-51523	BOLT, hex-hd., S., $\frac{5}{16}$ -18NC x $\frac{3}{4}$ (to floor pan)	1	
FM-33797-S	WO-6167	NUT, hex., S., $\frac{5}{16}$ -18NC-2	4	
FM-34806-S2	WO-51840	WASHER, lock, reg., S., $\frac{5}{16}$ in.	4	
FM-34746-S2	WO-52274	WASHER, plain, S., $\frac{5}{16}$ in.	4	
FM-GPW-1140447	WO-A-2470	RETAINER, engine crank	2	
FM-GPW-1111155	WO-A-3222	RISER, front to rear floor pan, assembly	1	
	WO-51406	BOLT, hex-hd., S., $\frac{3}{8}$ -16NC-2 x $1\frac{1}{4}$	2	
FM-356016-S	WO-52893	NUT, hex., S., $\frac{3}{8}$ -16NC-2 (stamped)	2	
FM-33799-S	WO-5544	NUT, hex., S., $\frac{3}{8}$ -16NC-2	2	
FM-34907-S7	WO-53135	WASHER, lock, S., cd-pltd., external teeth, $\frac{3}{8}$ in.	4	
FM-356200-S7	WO-53026	WASHER, lock, S., cd-pltd., internal, external teeth, $\frac{3}{8}$ in.	4	
	WO-50921	WASHER, plain, S., $\frac{3}{8}$ in.	4	

H001-1518008

GROUP 18—BODY (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
1802A—BODY PANELS (Cont'd)						
		FM-27068-S	WO-52236	SCREW, mach., fl-hd., S, No. 10 (0.190)-24NC-2 x 3/8 (footman loop hole plug cap)	2	
		FM-GPW-1128244	WO-A-2968	SHEATH, ax	1	
			WO-A-2837	SILL, cross, front floor pan, left, assembly (Willys only)	1	
		FM-GPW-1110610	WO-A-2838	SILL, cross, front floor pan, right, assembly	1	
		FM-GPW-1110625	WO-A-2935	SILL, cross, front floor pan, rear, assembly	1	
		FM-GPW-1110750	WO-A-2948	SILL, cross, front floor pan	1	
		FM-GPW-1128286	WO-A-2325	STRAINER, body side panel to wheel house	1	
		FM-GPW-1144620	WO-A-3120	SUPPORT, rear body to frame, inner	2	
		FM-GPW-1144606	WO-A-2336	SUPPORT, rear body to frame, outer	2	
1803—FLOOR MATS AND SEALS						
		FM-GPW-1112110	WO-A-2982	COVER, floor, transmission	1	
		FM-24308-S2	WO-52170	BOLT, hex-hd., S, 1/4-20NC x 1/2 (to floor pan)	7	.0117
H001-1518007		FM-34805-S2	WO-52706	WASHER, lock, reg, S, 1/4 in.	7	
		FM-GPW-1112115	WO-A-2990	COVER, inspection, floor, brake cylinder	1	
		FM-24308-S2	WO-52170	BOLT, hex-hd., S, 1/4-20NC x 1/2	5	
		FM-34805-S2	WO-52706	WASHER, lock, reg, S, 1/4 in.	5	
H001-1518007		FM-GPW-1111331	WO-A-2759	COVER, rear floor pan, left, shock absorber, assembly	1	
		FM-GPW-1111330	WO-A-2760	COVER, rear floor pan, right, shock absorber, assembly	1	
		FM-GPW-1111162	WO-A-4592	COVER, trailer electric plug housing (after Willys serial 200679)	1	
		FM-GPW-1101735-A	WO-A-3784	GROMMET, floor, transfer shift lever (rubber)	1	.358
			WO-12055	PLATE, floor seal, dimmer switch (Willys only)	1	
		FM-GPW-1112119	WO-A-2919	RING, floor, gearshift lever housing cover	1	
		FM-20344-S2	WO-52167	BOLT, hex-hd., S, 1/4-20NC-2 x 3/4	1	
		FM-32866-S2	WO-52142	SCREW, binding hd., S, No. 10 (0.190) x 5/8	3	
		FM-GPW-1112158	WO-A-2917	RING, floor seal, steering column	1	
		FM-32924-S7	WO-52809	SCREW, binding hd., S, cd-pltd., No. 10 (0.190) x 1/2	4	
		FM-GPW-1112117	WO-A-2918	RING, floor, transmission shift lever grommet	1	
		FM-20344-S2	WO-52167	BOLT, hex-hd., S, 1/4-20NC-2 x 3/4	2	
		FM-32866-S2	WO-52142	SCREW, binding hd., S, No. 10 (0.190) x 5/8	3	
		FM-GPW-1111520-A	WO-A-3782	SEAL, floor, accelerator pedal rod	1	.179
		FM-GPW-1111137-A	WO-A-2932	SEAL, floor brake cylinder inspection cover	1	.0202
		FM-GPW-1111299-A	WO-A-3116	SEAL, floor, fuel line hole	1	.043
		FM-GPW-1111286-A	WO-A-3783	SEAL, floor gearshift lever housing cover (rubber)	1	.285
			WO-A-12054	SEAL, floor, headlight foot switch (Willys only)	1	

	FM-GPW-11514-A	WO-A-2992	SEAL, floor, starter switch.	1	.0049
	FM-GPW-1101698-A	WO-A-2931	SEAL, floor, steering column.	1	.0134
	FM-GPW-9082-A	WO-A-3207	SEAL, fuel tank stone guard, front.	1	
	FM-GPW-9085-A	WO-A-3208	SEAL, fuel tank stone guard, left.	1	
	FM-GPW-9083-A	WO-A-3209	SEAL, fuel tank stone guard, rear.	1	
	FM-GPW-9071	WO-A-3206	SEAL, fuel tank stone guard, right.	1	
	FM-GPW-1112116-A	WO-A-2994	SEAL, floor, transmission cover.	1	.0823
	FM-GPW-1102330-A	WO-A-3943	SEAL, glove compartment door (after serial 120697).	1	
	FM-GPW-8155	WO-A-3173	SEAL, radiator side air deflector, left (before Willys serial 125809).	1	
		WO-A-3575	SEAL, radiator side air deflector to radiator (after Willys serial 125809) (Willys only).	1	
		WO-A-3182	SEAL, radiator side air deflector to radiator, right (before Willys serial 125809) (Willys only).	1	
	FM-GPW-8222	WO-A-2979	SEAL, radiator top air deflector (before Willys serial 125809).	1	
	FM-GPW-8166	WO-A-3574	SEAL, radiator top air deflector to radiator (after Willys serial 125809).	1	
	FM-355569-S2	WO-A-2983	BOLT, anchor, safety strap ($\frac{3}{8}$ -16NC-2).	2	.0833
	FM-33799-S2	WO-6169	NUT, hex, S, $\frac{3}{8}$ -16NC-2.	2	
	FM-34807-S2	WO-51304	WASHER, lock, reg., S, $\frac{3}{8}$ in.	2	
	FM-GPW-1162552	WO-A-2453	BRACKET, front seat pivot (passenger).	2	
	FM-60375-S	WO-51561	RIVET, rd-hd., S, $\frac{3}{8}$ x $\frac{9}{16}$.	2	
	FM-GPW-1160314	WO-A-2515	BRACKET, front seat, rear stop.	2	
	FM-GPW-1162414	WO-A-2833	BRACKET, pivot, rear seat frame.	2	
	FM-GPW-1162402	WO-A-2787	BRACKET, retaining, rear seat back frame.	2	
	FM-33795-S2	WO-52217	NUT, hex, S, $\frac{1}{4}$ -20NC-2 (brkt. to body).	4	
	FM-34805-S2	WO-52706	WASHER, lock, reg., S, $\frac{1}{4}$ in.	4	
	FM-34745-S	WO-52702	WASHER, plain, S, $\frac{1}{4}$ in.	4	
	FM-GPW-1160327-B	WO-A-2886	FRAME, front seat, assembly (driver).	1	
	FM-24407-S	WO-5922	BOLT, hex-hd., S, $\frac{5}{16}$ -24NFC-2 x $1\frac{1}{8}$ (frame to wheel house top panel).	1	
	FM-20346-S2	WO-51523	BOLT, hex-hd., S, $\frac{5}{16}$ -18NC-2 x $\frac{3}{4}$ (frame to floor).	2	
	FM-33797-S	WO-6167	NUT, hex, S, $\frac{5}{16}$ -18NC-2 (frame to floor).	3	
	FM-34806-S2	WO-15840	WASHER, lock, reg., S, $\frac{5}{16}$ in.	1	
	FM-34706-S2	WO-5437	WASHER, plain, S, $\frac{5}{16}$ in.	1	
	FM-351370-S2	WO-71633	WASHER, S (special), $\frac{5}{16}$ in. (frame to floor).	1	.0012
	FM-GPW-1160326	WO-A-2925	FRAME, front seat, back assembly (passenger).	2	
	FM-20346-S2	WO-51523	BOLT, hex-hd., S, $\frac{5}{16}$ -18NC-2 x $\frac{3}{4}$ (to floor pan).	1	
	FM-33797-S	WO-6167	NUT, hex, S, $\frac{5}{16}$ -18NC-2.	2	
	FM-34806-S2	WO-51840	WASHER, lock, reg., S, $\frac{5}{16}$ in.	2	
	FM-351370-S2	WO-71633	WASHER, S (special), $\frac{5}{16}$ in.	2	.0012
	FM-GPW-1161326	WO-A-2782	FRAME, rear seat, assembly.	1	
	FM-GPW-1161300	WO-A-2783	FRAME, rear seat back, assembly.	1	
	FM-355965-S2	WO-A-2607	NUT, tee, S, $\frac{5}{16}$ -24NFC-2 (in driver's seat frame).	1	
	FM-33896-S2	WO-A-2466	NUT, wing, S, $\frac{5}{16}$ -18NC-2 x 1 (on rear seat for tire pump) (after Willys serial 193040).	1	
	FM-GPW-1162181	WO-A-2910	PANEL, front seat body side crash pad, left, assembly.	1	

1804—SEATS

GROUP 18—BODY (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				1804—SEATS (Cont'd)		
		FM-GPW-1162180	WO-A-2911	PANEL, front seat body side crash pad, right, assembly	1	
		FM-355900-S2	WO-654934	NUT, tee, S, 1/4-20NF-2 (on crash pads)	8	
		FM-36868-S2	WO-51539	SCREW, mach., rd-hd., 1/4-20NC-2 x 3/4 (pads to side panels)	8	
	H001-1518007	FM-34805-S2	WO-52706	WASHER, lock, reg., S, 1/4 in.	8	
		FM-GPW-1162410	WO-A-2945	RETAINER, rear seat pivot tube	2	
		FM-20308-S2	WO-52170	BOLT, hex-hd., S, 1/4-20NC-2 x 1/2	2	
		FM-33799-S2	WO-52217	NUT, hex, S, 1/4-20NC-2	2	
	H001-1518007	FM-34805-S2	WO-52706	WASHER, reg., S, 1/4 in.	2	
		FM-GPW-17055	WO-A-4518	RETAINER, tire pump handle (after Willys serial 19340)	1	
		FM-GPW-17079	WO-A-4516	RETAINER, tire pump foot (after Willys serial 193040)	1	
		FM-GPW-1161302	WO-A-2830	SPRING, retaining, rear seat frame	2	.127
		FM-20308-S2	WO-52170	BOLT, hex-hd., S, 1/4-20NC-2 x 1/2 (spring to wheel house panel)	4	
		FM-33795-S2	WO-52217	NUT, hex, S, 1/4-20NC-2	4	
	H001-1518007	FM-34805-S2	WO-52031	WASHER, lock, reg., S, 1/4 in.	4	
		FM-GPW-1131414	WO-A-2883	STRAP, safety, assembly	2	1.102
			WO-A-3029	SUPPORT, rear seat frame to wheel house (Willys only)	2	
				1804A—CUSHIONS		
			WO-A-11729	BACK, front seat, assembly	2	
			WO-A-11931	BACK, rear seat, assembly	1	
			WO-A-2986	CUSHION, front seat, assembly (driver and passenger) (superseded by CUSHION, assembly, WO-A-11730)	2	
			WO-A-11730	CUSHION, front seat, assembly (supersedes CUSHION, assembly, FM-GPW-1162900-B, WO-A-2986)	2	
		FM-355836-S7	WO-52651	NUT, mach-screw, hex, S, cd-pltd., No. 10 (0.190)-24NC-2	10	
			WO-50814	SCREW, mach., fl-hd., S, No. 10 (0.190)-24NC-2 x 1/2	10	
		FM-34803-S2	WO-52221	WASHER, lock, reg., S, No. 10 (0.190)	10	
	H001-1518005		WO-A-11732	CUSHION, rear seat, assembly	1	
			WO-52990	SCREW, ck., ov-hd., S, No. 10 (0.190) x 1/2	32	
			WO-52968	WASHER, ck., S, No. 10 (0.190)	34	
			WO-A-2788	FRAME, rear seat cushion, assembly	1	
		FM-GPW-1160780	WO-A-3114	PAD, crash, front seat body side, left, assembly	1	
		FM-GPW-1166401	WO-A-3114	PAD, crash, front seat body side, right, assembly	1	
		FM-GPW-1166400	WO-A-3115	SEAT, trimmed, front, assembly	1	
		FM-GPW-1160016B	WO-A-3107	SEAT, trimmed, rear, assembly	1	
		FM-GPW-1160026	WO-A-3108			

18-1

	WO-A-3980	SPRING, front seat back assembly	2
	WO-A-3984	SPRING, front seat body side crash pad, left, assembly	1
	WO-A-3985	SPRING, front seat body side crash pad, right, assembly	1
	WO-A-3981	SPRING, front seat cushion, assembly (driver and passenger)	2
	WO-A-3982	SPRING, rear seat back, assembly	1
	WO-A-3983	SPRING, rear seat cushion, assembly	1
	1809—INSTRUMENT PANEL AND MOUNTING PARTS		
	WO-A-3155	BRACE, instrument panel, circuit breaker, w/BRACKET, assembly	1
	WO-5247	RIVET, rd-hd., S., $\frac{1}{4}$ x $\frac{3}{8}$	2
	WO-A-1765	PAD, dash panel	1
	WO-A-3005	PANEL, dash, assembly	1
	WO-A-3578	PANEL, instrument, assembly	1
	1809A—COMPARTMENT AND PARTS		
	WO-A-3536	BOLT, glove compartment lock (after 20,700 Willys trucks up to 37,914 Willys trucks)	1
	WO-A-3531	CASE, glove compartment lock, assembly (after 20,700 Willys trucks up to 37,914 Willys trucks)	1
	WO-A-3652	CUP, retaining, glove compartment door lock (after 20,700 Willys trucks up to 37,914 Willys Trucks)	1
	WO-53020	SCREW, mach., fil-hd., S., cd-pltd., No. 6 (0.138)-32NC-2 x $\frac{5}{16}$ cup to lock) (after 37,914 Willys trucks)	2
	WO-52614	WASHER, lock, reg., S., cd-pltd., No. 6 (0.138)	2
	WO-A-3532	CYLINDER, glove compartment lock, assembly (after 20,700 Willys trucks up to 37,914 Willys trucks)	1
	WO-A-3434	DOOR, glove compartment, w/HINGE, assembly (after Willys serial 120698, up to serial Willys 137909)	1
	WO-A-3835	DOOR, glove compartment, w/HINGE, assembly (after Willys serial 137909)	1
	WO-A-3436	HINGE, glove compartment door, assembly (after Willys serial 120698)	1
	WO-6352	NUT, mach-screw, S., cd-pltd., No. 10 (0.190)-24NC-2	3
	WO-5182	SCREW, mach., rd-hd., S., No. 10 (0.190)-24NC-2 x $\frac{3}{8}$ (hinge to panel)	3
	WO-52221	WASHER, lock, reg., S., No. 10 (0.190)	3
	WO-A-3823	LOCK, glove compartment door, assembly (after 37,914 Willys trucks)	1
	WO-A-3537	NUT, glove compartment door lock (hex., S., cd-pltd., thin, $\frac{3}{4}$ -28NF) (after 20,700 Willys trucks up to 37,914 Willys trucks)	1
	WO-A-3538	PLATE, tapping, glove compartment hinge (after Willys serial 120697)	1
	WO-A-3818	STRIKER, glove compartment door lock (after Willys serial 137909)	1
	WO-5182	SCREW, mach., rd-hd., S., No. 10 (0.190)-24NC-2 x $\frac{3}{8}$	1
	WO-52221	WASHER, lock, reg., S., No. 10 (0.190)	1
	WO-52220	WASHER, plain, S., No. 10 (0.190)	1
	1811—WINDSHIELD ASSEMBLY		
	WO-A-2235	ARM, adjusting, windshield	2
	WO-A-2485	BOLT, windshield clamp bracket (hex-hd., S., $\frac{1}{4}$ -20NC-2 x $1\frac{1}{16}$) (AN-X-1754)	4
	FM-GPW-1103302		
	FM-24454-S2		
	FM-GPW-1106085		
	FM-GPW-1106084-B		
	FM-356123-S7		
	FM-GPW-1106050		
	FM-GPW-355836-S7		
	FM-GPW-355158-S2		
	FM-34803-S2		
	FM-GPW-1106084-B		
	FM-356123-S7		
	FM-GPW-1106064		
	FM-355158-S2		
	FM-34803-S2		
	FM-GPW-1103302		
	FM-24454-S2		

GROUP 18—BODY (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				1811—WINDSHIELD ASSEMBLY (Cont'd)		
		FM-GP-1103310	WO-A-4300	BRACKET, windshield adjusting arm, w/BUSHING, assembly	2	.16
		FM-GPW-1103050	WO-A-2798	BRACKET, windshield mounting clamp catch	2	.0098
		FM-36046-S2	WO-52963	SCREW, fl-hd., S, 1/4-20NC-2 x 3/4	4	
		FM-GPW-1103162	WO-A-2213	BRACKET, windshield pivot, assembly	2	.161
		FM-355449-S2	WO-51485	BOLT, hex-hd., S, 5/16-18NC-2 x 5/8 (to cowl)	4	.125
		FM-33797-S2	WO-6167	NUT, hex, S, 5/16-18NC-2	4	
		FM-34807-S2	WO-51840	WASHER, lock, reg., S, 5/16 in.	4	
	H001-1518008	FM-GPW-1103304	WO-A-2232	BRACKET, windshield swing arm, w/STUD (5/16-18NC-2)	2	.168
			WO-A-2989	CATCH, hold-down, windshield, assembly (before Willys serial 103545) (Willys only)	2	
	3320-GPW-1103027	FM-GPW-1103027	WO-A-3197	CATCH, hold-down, windshield, assembly (after Willys serial 103545)	2	.128
		FM-20324-S2	WO-52168	BOLT, hex-hd., S, 1/4-20NC-2 x 5/8 (catch to hood top panel)	4	
		FM-33795-S2	WO-52217	NUT, hex, S, 1/4-20NC-2	4	
		FM-34805-S2	WO-52706	WASHER, lock, reg., S, 1/4 in.	4	
		FM-34745-S2	WO-52702	WASHER, plain, S, 1/4 in.	4	
		FM-GPW-1103488	WO-A-2791	CATCH, windshield clamp (to instrument board)	2	.0446
		FM-GPW-1151289	WO-A-2501	CHAIN, windshield thumb screw	2	.0116
		FM-GP-1103482-A	WO-A-2227	CLAMP, windshield, assembly	2	.798
		FM-352692-S15	WO-A-4120	FASTENER, windshield curtain (top to windshield) (CNC-519)	10	
			WO-A-12759	FRAME, windshield, w/GLASS, assembly (Note 1)	1	
	3320-GP-1103014	FM-GP-1103014	WO-A-2226	FRAME, windshield, w/GLASS, assembly	1	
		FM-34176-S2	WO-A-2481	NUT, mach. screw, hex, br., No. 10 (0.190)-32NPF-2 (std. acorn) (AN-X-1751)	3	
		FM-38192-S2	WO-A-2482	SCREW, mach. rd-hd., I., No. 8 (0.164)-32NC-2 x 1/16 (AN-X-598)	4	
		FM-38259-S2	WO-A-2480	SCREW, mach. special, rd-hd., S, No. 10 (0.190)-32NPF-2 x 1/8 (AN-X-1750)	3	
		FM-34802-S2	WO-52705	WASHER, lock, reg., S, No. 8 (0.164)	4	
			WO-A-2478	GLASS, windshield	2	
	H001-1518004	FM-GP-1103100	WO-A-4303	HANDLE, windshield frame	1	.0833
	3320-GP-1103100	FM-GP-1103350	WO-A-2238	KNOB, windshield adjusting arm (5/16-18NC-2)	2	.0559
		FM-B-45482-C	WO-A-2234	LOOP, hold-down, windshield	2	
		FM-GP-1103334	WO-A-2481	NUT, windshield frame screw (hex, br., No. 10 (0.190)-32NPF-2 std. acorn) (AN-X-1751)	3	
		FM-34176-S2	WO-A-2481	PANEL, windshield, outer (before Willys serial 103544)	1	
			WO-A-2301	PANEL, windshield, outer (after Willys serial 103544)	1	
			WO-A-3190	PIECE, windshield frame upper cross, assembly (Note 1)	1	
			WO-A-12756	PLATE, tapping, windshield clamp catch	2	
		FM-GPW-1103446-A	WO-A-2939	RETAINER, windshield hold-down catch (BA-B-194) (after Willys serial 103545)	2	
		FM-GPW-1103028	WO-A-3203	RETAINER, windshield hold-down catch (before Willys serial 103545)	2	
		FM-GPW-16892	WO-A-2386	BOLT, hex-hd., S, cd-pltd., 1/4-20NC-2 x 5/8 (retainer to hood)	4	
		FM-20308-S7	WO-51514			

18-1

H001-1518007	FM-33795-S	WO-5790	NUT, hex., S, 1/4-20NC-2	4
	FM-34745-S2	WO-52702	WASHER, plain, S, 1/4 in.	4
	FM-34805-S2	WO-52706	WASHER, lock, reg, S, 1/4 in.	4
	FM-GPW-1151297	WO-A-3189	RING, windshield thumb screw chain	4
	FM-81W-811189		SCREW, pivot, windshield adjusting arm (rd-hd., S, 1/4-28NF-2 x 0.47) (superseded by SCREW, FM-C8T-8103074-B, WO-A-2239)	2
3320-81W-811189	FM-C8T-8103074-B	WO-A-2239	SCREW, pivot, windshield adjusting arm (AN-X-1747) (supersedes SCREW, FM-81W-811189)	2
	FM-33249-S2	WO-A-2487	SCREW, windshield bracket (ov-ck-hd., S, No. 10 (0.190) x 1/2, type "Z") (AN-X-1755)	4
	FM-38259-S2	WO-A-2480	SCREW, windshield frame (special, rd-hd., S, No. 10 (0.190)-32NF-2 x 1/8) (AN-X-1750)	4
	FM-38192-S2	WO-A-2482	SCREW, windshield frame, corner (rd-hd., I, No. 8 (0.164)-32NC x 1/16) (AN-X-598)	4
	FM-355449-S2	WO-A-2214	SCREW, windshield pivot, thumb (mall. I., 3/8-24)	2
	FM-99W-8103311	WO-A-2483	SPACER, windshield adjusting arm (S, 2 1/8 O.D. x 2 9/16 I.D.) (AN-S-384)	2
	FM-356361-S	WO-A-4260	WASHER, spring, windshield adjusting arm (S, 0.56 O.D. x 0.34 I.D.) (AN-S-1044)	4
	FM-356286-S	WO-A-2490	WASHER, windshield adjusting arm (0.688 O.D. x 0.349 I.D. x 0.067 thk.) (AN-X-1637)	6
	FM-34805-S2	WO-52706	WASHER, windshield clamp bracket screw (lock, reg, S, 1/4 in.) (AN-X-1700)	4
	FM-356373-S2	WO-A-2220	WASHER, windshield pivot spring (S, 1 in. O.D. x 2 1/8 I.D. x 0.015 thk., 3/8 crown)	4
		WO-A-2796	WINDSHIELD, assembly (before Willys serial 103545) (includes: ARMS, BRACKETS, CLAMPS, GLASS and ATTACHING PARTS)	1
	FM-GP-1103010	WO-A-3210	WINDSHIELD, assembly (after Willys serial 103545) (includes: ARMS, BRACKETS, CLAMPS, GLASS and ATTACHING PARTS)	1
3320-GP-1103106	FM-GPW-1103030	WO-A-12761	FRAME, windshield, assembly (Note 1)	1
	FM-GP-1103020	WO-A-2246	FRAME, windshield, lower, assembly	1
		WO-A-2255	FRAME, windshield, upper, assembly	1
	FM-GPW-1103268	WO-A-2776	FRAME, windshield, tubular (before Willys serial 103545) (Willys only)	1
		WO-A-3204	FRAME, windshield, tubular (after Willys serial 103545)	1
		WO-A-12760	FRAME, windshield, tubular, assembly (Note 1)	1
	FM-GP-1103106	WO-A-2479	PADDING, windshield glass (Everseal, 1 1/8 in. x 73 in.)	2
	FM-GP-1103110	WO-A-2250	WEATHERSTRIP, windshield	1
	FM-GPW-1103080-A	WO-A-2476	WEATHERSTRIP, windshield frame to cowl	1
	FM-33184-S2	WO-A-2489	SCREW, windshield to cowl weatherstrip (S, binding hd., sheet metal type "Z" No. 10 (0.190) x 1/2)	15
G503-7002982	FM-GP-17535	WO-A-12865	ARM, adjustable, windshield wiper, assembly (Note 1)	2
		WO-663369	NUT, windshield wiper arm to shaft (Note 1)	2
		WO-A-2512	ARM, windshield wiper, w/BLADE, assembly (includes RIVET)	2
		WO-A-11519	ARM, windshield wiper, w/CLIP, assembly	2
	FM-GP-17528	WO-A-4687	BLADE, windshield wiper	2
G503-7002981		WO-A-12864	BLADE, windshield wiper (B-209586-B) (Note 1)	2
	FM-GPW-13434-A	WO-345961	GROMMET, rubber, windshield wiper tube through cowl	1
	FM-GP-17531	WO-A-2513	HANDLE, windshield wiper, inner, w/KNOB, assembly	2

Note 1—For vehicles equipped with vacuum windshield wiper.

GROUP 18—BODY (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
18-1	G503-7036573	FM-GPW-17526 FM-34054-S2 FM-34824-S2 FM-351303-S2 FM-63848-S FM-GP-17500 FM-GPW-17500	WO-A-11432 WO-A-2588 WO-A-2587 WO-A-2584 WO-53243 WO-A-2586 WO-A-11433	1811D—WINDSHIELD WIPER ARMS AND BLADES (Cont'd)		
				HANDLE, windshield wiper, w/tie ROD, assembly (TRI-80540)	2	
				NUT, hex, S, No. 12 (0.216)-24NF-2	2	
				WASHER, lock, S, No. 12 (0.216) (266 I.D. x 1/2 thk.) (TRI-2328)	2	
				WASHER, windshield wiper handle to frame (S, 1 1/2 O.D. x 3/8 I.D. x 0.032 thk.)	2	.0508
				RIVET, S, tubular, ov-hd., type "A" (blade to arm)	2	
				WIPER, windshield, assembly	2	
				WIPER SET, windshield (tandem) (includes: ARM w/BLADE, assembly, HANDLE w/ROD, assembly, NUT, and WASHERS)	1	1.26
				1811D-1—VACUUM WINDSHIELD WIPER		
				BUSHING, reducing, 1/4 to 1/8, 1/8 pipe thd. (in intake manifold)	1	
				CLIP, 1/4 in., wiper tubing to windshield frame	6	
				SCREW, sheet metal, rd-hd., S, No. 10 (.190) x 1/2	6	
				DRIVER, windshield wiper arm, knurled	2	
				HOSE, windshield wiper tubing to tee (3 in. lgh.)	2	
				HOSE, windshield wiper tubing to tee (5 1/4 in. lgh.)	2	
		FM-GPW-1146132	WO-A-12753 WO-663365 WO-663366 WO-52213 WO-52221 WO-384568 WO-A-12751 WO-A-12750 WO-A-12755 WO-640527 WO-387891	HOSE, windshield wiper tubing to engine (15 1/2 in. lgh.)	1	
				MOTOR, vacuum, windshield wiper	2	
				SCREW, rd-hd., mach., S, No. 10 (.190)-32NF-2 x 1/2 (motor to frame)	4	
				WASHER, lock, S, No. 10 (.190)	4	
				NUT, 1/4 inverted flared tube, windshield wiper tube to manifold	1	
				TEE, windshield wiper motor connecting	1	
				TUBING, windshield wiper, upper	1	
				TUBING, windshield wiper	1	
				TUBING, windshield wiper, intake manifold, assembly	1	
				UNION, 1/4 in. inverted flared tube connector, 1/8 pipe thread	1	
				1817—TOOL BOX		
				BRACKET, tool compartment lock, assembly	1	
				FRAME, tool compartment, left	1	
				FRAME, tool compartment, right	1	
				HINGE, tool compartment lid, assembly (before Willys serial 118599)	4	
				HINGE, tool compartment lid, assembly (after Willys serial 118599)	4	
				LID, tool compartment, w/HINGE, assembly (before Willys serial 118599)	2	1.21

				LID, tool compartment, w/HINGE, assembly (after Willys serial 118599).....	2
				NUT, mach-screw, hex, S, cd-pltd., No. 10 (0.190)-24NC-2.....	6
				SCREW, mach., rd-hd., S, No. 10 (0.190)-24NC-2 x $\frac{3}{8}$	6
				WASHER, lock, reg., S, No. 10 (0.190).....	6
				LOCK, tool compartment lid, assembly (TA-OP-528).....	2
				NUT, mach-screw, hex, S, cd-pltd., No. 10 (0.190)-24NC-2.....	4
				SCREW, mach., rd-hd., S, No. 10 (0.190)-24NC-2 x $\frac{3}{8}$	4
				WASHER, lock, reg., S, No. 10 (0.190).....	4
				SEAL, tool compartment lid (short).....	2
				SEAL, tool compartment lid (long).....	2
				STRIKER, tool compartment lid lock.....	2
				1817A—SPARE GASOLINE CARRIER	
				BRACKET, spare gas line can, assembly.....	1
				BOLT, hex-hd., S, $\frac{3}{8}$ -16NC-2 x $\frac{3}{4}$ (brkt. to rear panel) (GM-122122).....	4
				NUT, hex, S, $\frac{3}{8}$ -16NC-2 (GM-123228).....	4
				WASHER, lock, reg., S, $\frac{3}{8}$ in.....	4
				STRAP, spare gasoline can, w/BUCKLE, assembly.....	1
				RIVET, tubular, $\frac{3}{4}$ x $1\frac{1}{2}$	8
				WASHER, plain, S, $\frac{1}{16}$ O.D. x $\frac{5}{8}$ I.D.....	8
				STRAP, spare gasoline can, w/TIP, assembly.....	1
				1820—GUN HOLDERS	
				BRACKET, support, rifle holder to windshield, left, assembly.....	1
				BRACKET, support, rifle holder to windshield, right, assembly.....	1
				BUMPER, rifle holder retainer clamp, assembly (BUE-505285).....	1
				CAM, rifle holder retainer handle (Ford only).....	1
				RIVET, ov-hd., tubular, $\frac{1}{4}$ x $1\frac{3}{8}$ (Ford only).....	1
				CASE, rifle, w/HOLDER, assembly.....	1
				HANDLE, rifle holder retainer, w/CAM, assembly (BUE-505284).....	1
				HOLDER, rifle, assembly (BUE-505275).....	1
				BOLT, step, S, $\frac{5}{16}$ -18NC-2 x $\frac{3}{4}$ (holder to windshield).....	2
				NUT, reg., hex, S, $\frac{5}{16}$ -18NC-2 (holder to windshield bolt).....	2
				WASHER, flat, S, $\frac{3}{8}$ in. (holder to windshield bolt) (Willys only).....	2
				WASHER, flat, S, $\frac{5}{16}$ in. (holder to windshield bolt) (Ford only).....	2
				WASHER, lock, reg., S, $\frac{5}{16}$ in. (holder to windshield bolt).....	2
				PLATE, rifle holder retainer clamp handle (BUE-505288).....	1
				SCREW, mach., rd-hd., No. 12 (0.216)-24NC-2 x $\frac{3}{8}$ (Ford only).....	4
				WASHER, lock, reg., S, No. 12 (0.216) (Ford only).....	4
				SPRING, retaining, rifle holder, assembly (BUE-505282).....	1
				SPRING, rifle holder retainer handle cam (BUE-505287).....	1
				1817A—SPARE GASOLINE CARRIER	
				BRACKET, spare gas line can, assembly.....	1
				BOLT, hex-hd., S, $\frac{3}{8}$ -16NC-2 x $\frac{3}{4}$ (brkt. to rear panel) (GM-122122).....	4
				NUT, hex, S, $\frac{3}{8}$ -16NC-2 (GM-123228).....	4
				WASHER, lock, reg., S, $\frac{3}{8}$ in.....	4
				STRAP, spare gasoline can, w/BUCKLE, assembly.....	1
				RIVET, tubular, $\frac{3}{4}$ x $1\frac{1}{2}$	8
				WASHER, plain, S, $\frac{1}{16}$ O.D. x $\frac{5}{8}$ I.D.....	8
				STRAP, spare gasoline can, w/TIP, assembly.....	1
				1820—GUN HOLDERS	
				BRACKET, support, rifle holder to windshield, left, assembly.....	1
				BRACKET, support, rifle holder to windshield, right, assembly.....	1
				BUMPER, rifle holder retainer clamp, assembly (BUE-505285).....	1
				CAM, rifle holder retainer handle (Ford only).....	1
				RIVET, ov-hd., tubular, $\frac{1}{4}$ x $1\frac{3}{8}$ (Ford only).....	1
				CASE, rifle, w/HOLDER, assembly.....	1
				HANDLE, rifle holder retainer, w/CAM, assembly (BUE-505284).....	1
				HOLDER, rifle, assembly (BUE-505275).....	1
				BOLT, step, S, $\frac{5}{16}$ -18NC-2 x $\frac{3}{4}$ (holder to windshield).....	2
				NUT, reg., hex, S, $\frac{5}{16}$ -18NC-2 (holder to windshield bolt).....	2
				WASHER, flat, S, $\frac{3}{8}$ in. (holder to windshield bolt) (Willys only).....	2
				WASHER, flat, S, $\frac{5}{16}$ in. (holder to windshield bolt) (Ford only).....	2
				WASHER, lock, reg., S, $\frac{5}{16}$ in. (holder to windshield bolt).....	2
				PLATE, rifle holder retainer clamp handle (BUE-505288).....	1
				SCREW, mach., rd-hd., No. 12 (0.216)-24NC-2 x $\frac{3}{8}$ (Ford only).....	4
				WASHER, lock, reg., S, No. 12 (0.216) (Ford only).....	4
				SPRING, retaining, rifle holder, assembly (BUE-505282).....	1
				SPRING, rifle holder retainer handle cam (BUE-505287).....	1

Key	Part Name	Willlys Part No.	Group Number
A	WINCH, assembly.....	WO-A-9215.....	2000
B	ROD.....	WO-A-9196.....	2003
C	SPACER.....	WO-A-10285.....	1601B
D	CLIP.....	WO-A-8578.....	1602
E	SPRING, assembly.....	WO-A-8463.....	1601
F	BRACKET.....	WO-A-10282.....	2001
G	SCREW.....	WO-A-10397.....	2001

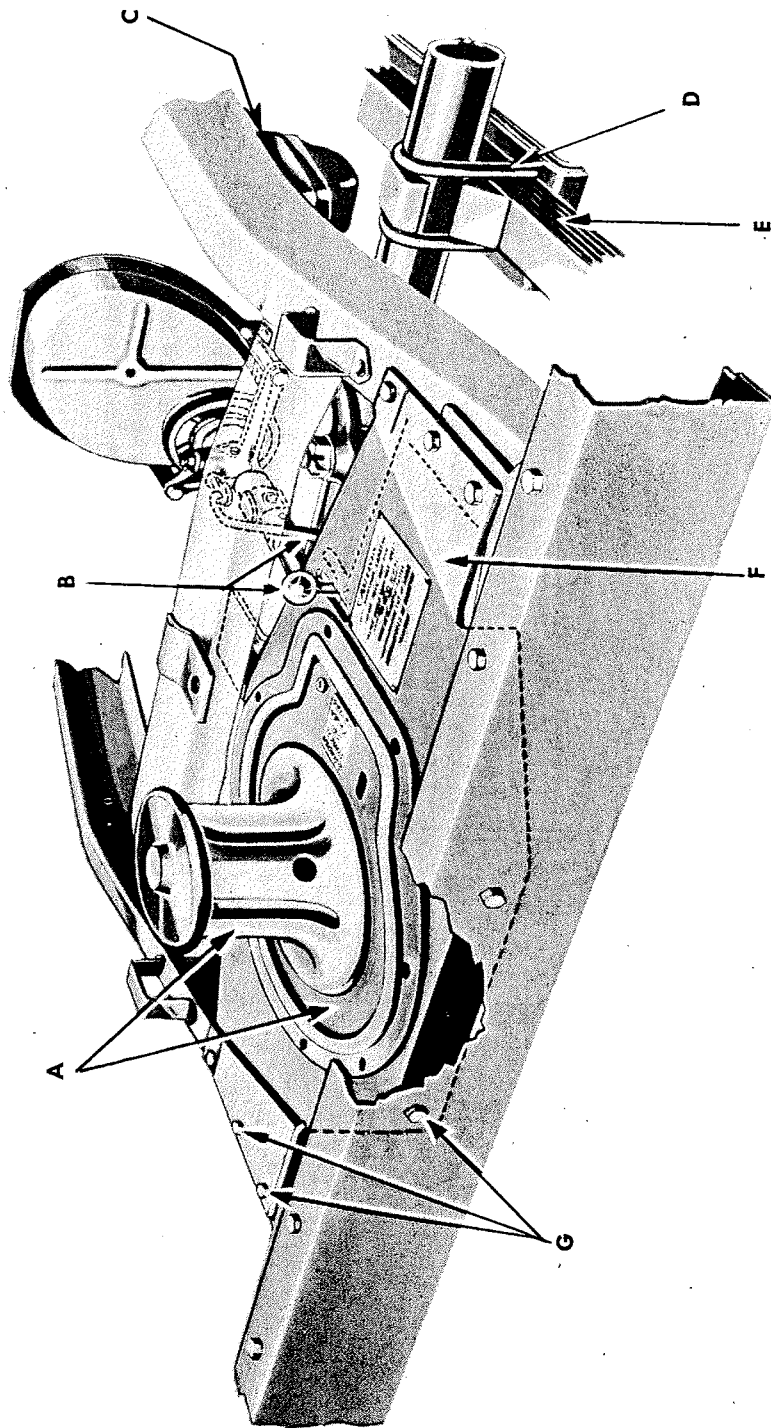


FIGURE 20-1—CAPSTAN WINCH—INSTALLED VIEW

GROUP 20—CAPSTAN WINCH

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				GROUP 20—CAPSTAN WINCH 2000—WINCH ASSEMBLY		
				KIT, field, capstan winch.	1	
				(Consists of:		
			WO-A-9232	1 BAG, winch spare parts		
			WO-A-5113	4 BOLT, axle bumper spacer (hex-hd., $\frac{5}{16}$ -24NF-2 x $1\frac{3}{4}$)		
			WO-50922	3 BOLT, mounting, winch support bracket (hex-hd., $\frac{3}{8}$ -24NF-2 x $\frac{7}{8}$)		
			WO-53038	8 BOLT, mounting, winch plate (hex-hd., S., $\frac{3}{8}$ -24NF-2 x $1\frac{3}{8}$)		
			WO-A-10397	1 BRACKET, mounting, winch, assembly		
			WO-A-10282	1 BRACKET, support, winch drive, assembly		
			WO-A-10284	3 CLIP, front spring (see Group 1601)		
			WO-A-8578	1 CLIP, front spring (see Group 1601)		
			WO-A-8289	1 CRANK, bell, drag link, front (see group 1401)		
			WO-A-5691	1 CRATE, shipping, capstan winch field kit		
			WO-A-9233	1 HANDLE, winch shift rod		
			WO-A-971	1 HUB, winch drive shaft, assembly		
			WO-A-9211	1 INSTRUCTION, installation, capstan winch field kit		
			WO-A-10394	1 KEY, Woodruff, No. 7		
			WO-53356	1 qt. LUBRICANT, winch drive		
			WO-A-10312	1 NUT, engine crankshaft pulley		
			WO-638513	8 NUT, winch plate mounting bolt (hex. $\frac{3}{8}$ -24NF-2)		
			WO-52542	8 NUT, winch, bracket mounting screw (hex. $\frac{1}{4}$ -20NC-2)		
			WO-52217	2 PIN, cotter, $\frac{3}{32}$ x $\frac{7}{8}$		
			WO-5152	1 PIN, cotter, $\frac{1}{8}$ x $1\frac{1}{2}$ (drag link bell crank)		
			WO-52527	4 PIN, cotter, $\frac{1}{8}$ x $1\frac{1}{2}$ (spare drive shaft shear pins)		
			WO-5397	1 PIN, cotter, $\frac{3}{32}$ x $\frac{3}{4}$ (winch shift rod)		
			WO-50968	1 PIN, shaft, assembly to winch, assembly		
	9680-A-9201		WO-A-9201	1 PULLEY, drive, fan		
	9680-A-9205		WO-A-9205	1 ROD, shift, winch		
	9680-A-9196		WO-A-9196	100 ft. ROPE, $\frac{3}{4}$ in.		
			WO-A-102866	1 SCREW, set, hex., socket type		
			WO-53355	8 SCREW, mounting, winch mounting bracket (fl-hd., $\frac{1}{4}$ -20NC-2 x $\frac{7}{8}$)		
			WO-51986	1 SHAFT, drive, winch, assembly		
			WO-A-9202	1 SHAFT, winch spline		
			WO-A-9214	2 SPACER, axle bumper		
	9680-A-9214		WO-A-10285	2 SPACER, front bumper gusset		
			WO-A-1120			

GROUP 20—CAPSTAN WINCH (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
20-1, 2 20-1	9680-A-9194 3320-GPW-5311-B 3320-GPW-5310-B	FM-GPW-5311-B FM-GPW-5310-B	WO-A-10370 WO-A-9194 WO-A-8463 WO-A-8464 WO-A-10339 WO-53084 WO-52046 WO-53032 WO-A-9215 WO-A-10287 WO-A-9215 WO-A-10287 WO-52217 WO-51986 WO-53084	2000—WINCH ASSEMBLY (Cont'd) KIT, field capstan winch (Cont'd) 6 SPACER, mounting plate to frame (use with Ford installation) 3 SPACER, winch drive 1 SPRING, front left, assembly (see Group 1601) 1 SPRING, front right, assembly (see Group 1601) 1 TAG, caution, winch lubrication 8 WASHER, winch mounting bracket mounting screw (1/4 in.) 11 WASHER, winch plate to frame screw (3/8 in.) 2 WASHER, plain 3/8 in. (use with Ford installation) 1 WINCH, capstan, assembly (as furnished by U.S. ORDNANCE) 1 WINCH, capstan, w/drive SHAFT, assembly WINCH, capstan, assembly (as furnished by U.S. ORDNANCE and re-worked by Willys) WINCH, capstan, w/drive SHAFT, assembly (includes worm GEAR and thrust WASHERS) NUTS, hex., S., 1/4-20NC-2 (winch to bracket screw) SCREW, fl.-hd., mach., S., 1/4-20NC-2 x 1/2 (winch to bracket) WASHER, lock, S., 1/4 in. (winch to bracket screw)	1 1 8 8 8	
20-2	9680-A-9210 H001-5421245 9680-A-9208		WO-635838 WO-A-10282 WO-A-10397 WO-52542 WO-52046 WO-A-10284 WO-9210 WO-53038 WO-52046 WO-A-9208 WO-638792 WO-640038 WO-A-9211 WO-A-10315	2001—WINCH PARTS AND WINCH DRIVE SHAFTS BALL, poppet, winch drive support bracket BRACKET, mounting, capstan winch, assembly BOLT (hex.-hd., S., 3/8-24NPF-2 x 1 3/4) NUT, hex., S., 3/8-24NPF-2 WASHER, lock, S., 3/8 in. BRACKET, support winch drive, w/BUSHING, assembly (includes: poppet BALL, Alemite FITTINGS, shift FORK, shift RAIL and poppet SPRING) BRACKET, support winch drive, w/BUSHING, assembly BOLT, hex.-hd., S., 3/8-24NPF-2 x 7/8 WASHER, lock, S., 3/8 in. BUSHING, winch shaft FITTING, Alemite, winch drive support bracket FITTING, Alemite, winch drive support bracket HUB, winch drive shaft, w/hub PIN, assembly GASKET, housing, winch drive	1 1 8 8 8 1 1 3 3 2 1 1 1 1 1	
20-2	9680-A-9211 9680-A-10315				1	

GROUP 20—CAPSTAN WINCH (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
20-2, 3 20-2	9680-A-9203 9680-A-10308			2001—WINCH PARTS AND WINCH DRIVE SHAFTS (Cont'd)		
				SHAFT, spline, capstan winch.....	1	
				SPACER, capstan winch drive.....	1	
				SPACER, mounting plate to frame (use for Ford installation).....	6	
				SPRING, poppet, capstan winch.....	1	
				WASHER, thrust, capstan winch (bronze).....	1	
				WASHER, thrust, capstan winch, w/PIN, assembly (S.).....	1	
				WASHER, plain, S., $\frac{3}{8}$ in. (use for Ford installation).....	2	
				2002—CABLES AND ROPES		
				ROPE, $\frac{3}{4}$ in. x 100 ft.....	1	
				2003—WINCH CONTROL PARTS		
				FORK, shift, capstan winch.....	1	
				HANDLE, winch shift rod.....	1	
				RAIL, shift, capstan winch.....	1	
				NUT, hex., S., $\frac{5}{16}$ -24NF-2.....	1	
				WASHER, lock, S., $\frac{5}{16}$ in. (GM-138485).....	1	
				ROD, shift, capstan winch.....	1	
20-1, 2	9680-A-9206 H001-7017651			GROUP 21—BUMPERS AND GUARDS		
				2101—BUMPERS		
				BAR, bumper, front.....	1	
				BOLT, hex-hd., S., $\frac{5}{8}$ -24NF-2 x $4\frac{1}{2}$ (bar to frame).....	4	.0217
				NUT, hex., S., $\frac{5}{8}$ -24NF-2.....	4	
				WASHER, lock, reg., S., $\frac{5}{16}$ in.....	4	
				BUMPERETTE, rear.....	2	
				BOLT, hex-hd., S., $\frac{3}{8}$ -24NF-2 x $\frac{3}{4}$ (bumperette to frame).....	8	
				NUT, hex., S., $\frac{3}{8}$ -24NF-2.....	8	
				WASHER, lock, reg., S., $\frac{3}{8}$ in.....	8	
				FILLER, front bumper bar, wood.....	1	
				SPACER, front bumper gusset (Note 1).....	2	
				FM-GPW-17750		
				FM-355456-S		
				FM-33798-S2		
				FM-34806-S2		
				FM-GPW-17775		
				FM-24349-S2		
				FM-33800-S		
				FM-34807-S		
				FM-GPW-17751		
				WO-A-1117		
				WO-51823		
				WO-5910		
				WO-51833		
				WO-A-1157		
				WO-50163		
				WO-5901		
				WO-5010		
				WO-A-1147		
				WO-A-1120		

GROUP 21—BUMPERS AND GUARDS (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		ITEM	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willlys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				2103—RADIATOR GUARDS (Cont'd)		
				GUARD, radiator, assembly (Cont'd)		
			WO-5437	WASHER, plain, S, cd-pltd., $\frac{5}{16}$ in.	6	
			WO-51833	WASHER, lock, reg., S, $\frac{5}{16}$ in.	6	
			WO-A-3094	LINER, radiator guard hood, center.	1	
			WO-A-3095	LINER, radiator guard hood, side.	2	
			WO-51182	RIVET, split, $\frac{3}{4}$ x $\frac{5}{16}$ (5 used center, 6 used sides—Willlys) (4 used center, 7 used sides—Ford)	11	
			WO-A-3549	RETAINER, radiator guard to fender nut (after Willlys serial 125809) (Willlys only)	6	
				2103A—LAMP GUARDS		
				GUARD, blackout driving lamp, w/SUPPORT, assembly (after Willlys serial 163750)	1	
			WO-A-4118	BOLT, hex-hd., S, cd-pltd., $\frac{5}{16}$ -24NF-2 x 1 (GM-112657) (after Willlys serial 163750)	1	
			WO-53050	BOLT, hex-hd., S, cd-pltd., $\frac{5}{16}$ -24NF-2 x $\frac{3}{4}$ (GM-118772)	2	
			WO-53048	NUT, hex., S, cd-pltd., $\frac{5}{16}$ -24NF-2 (GM-115729)	3	
			WO-50802	WASHER, lock, S, cd-pltd., $\frac{5}{16}$ in.	1	
			WO-53047	WASHER, lock, S, cd-pltd., shakeproof, $\frac{5}{16}$ in.	4	
			WO-53025	WASHER, plain S, cd-pltd., $1\frac{3}{16}$ O.D. x $1\frac{1}{8}$ I.D. (Willlys only)	1	
			WO-A-4116			
				GROUP 22—MISCELLANEOUS BODY, CHASSIS AND ACCESSORIES		
				2201—TARPAULINS		
				COVER, headlight.	2	
			WO-A-3070	COVER, windshield, assembly (before Willlys serial 103545)	1	
			WO-A-3073	COVER, windshield, assembly (after Willlys serial 103545)	1	
			WO-A-3211	PAULIN, deck top, assembly (before Willlys serial 103545) (Willlys only)	1	
			WO-A-2909	PAULIN, deck top, assembly (after Willlys serial 103545)	1	
			WO-A-3216			
				2201A—BOWS		
				BOW, top, assembly (includes bow, top front, assembly)	1	
			WO-A-2897	RIVET, rd-hd., $\frac{5}{16}$ x 1 (bow to pivot)	2	
			WO-5216			

H001-1518008	FM-GPW-1151272	WO-A-2898	BOW, top front, assembly.....	1	
	FM-GPW-1129069	WO-A-2744	BRACKET, left hand rail, front, assembly.....	1	.184
	FM-GPW-1129068	WO-A-2745	BRACKET, right hand rail, front, assembly.....	1	.184
	FM-24310-S	WO-51391	BOLT, hex-hd., S., $\frac{5}{16}$ -18NC-2 x $\frac{1}{2}$ (bracket to body).....	2	
	FM-33797-S2	WO-52350	NUT, hex., S., $\frac{5}{16}$ -18NC-2.....	2	
	FM-34806-S2	WO-51833	WASHER, lock, reg., S., $\frac{5}{16}$ in.....	2	.136
	FM-GPW-1153030	WO-A-2754	BRACKET, top bow pivot.....	2	
	FM-20326-S2	WO-51495	BOLT, hex-hd., S., $\frac{5}{16}$ -18NC-2 x $\frac{5}{8}$ (bracket to body).....	2	
	FM-33797-S2	WO-52350	NUT, hex., S., $\frac{5}{16}$ -18NC-2.....	6	
	FM-24650-S2	WO-52987	SCREW, fl-hd., S., $\frac{5}{16}$ -18NC-2 x $\frac{5}{8}$	4	
H001-1518008	FM-34806-S2	WO-51833	WASHER, lock, reg., S., $\frac{5}{16}$ in.....	6	
	FM-348148-S	WO-A-3113	EYELET, curtain fastener (CNC-O).....	16	
	FM-95633-S	WO-A-3112	FASTENER, single post type, curtain (rivet, tubular) (CNC-12).....	11	
	FM-GPW-1154810	WO-A-2168	LOOP, footman.....	10	.028
	FM-355836-S7	WO-6352	NUT, mach. screw, hex., S., cd-pltd., No. 10 (0.190)-24NC-2.....	20	
	FM-355162-S2	WO-6290	SCREW, mach., fl-hd., S., No. 10 (0.190)-24NC-2 x $\frac{1}{2}$ (loop to body).....	20	
	FM-34803-S7	WO-52221	WASHER, lock, reg., S., cd-pltd., No. 10 (0.190).....	20	
	FM-GPW-1151270	WO-A-2901	PIVOT, top bow, assembly.....	2	.354
	FM-20328-S2	WO-52189	BOLT, hex-hd., S., $\frac{3}{8}$ -16NC-2 x $\frac{5}{8}$ (pivot to bracket).....	2	
	FM-34807-S2	WO-51304	WASHER, lock, reg., S., $\frac{3}{8}$ in.....	2	
H001-1518009	FM-34747-S	WO-5455	WASHER, plain, S., $\frac{3}{8}$ in.....	2	
	FM-GPW-1153142	WO-A-2900	PIVOT, top bow front.....	2	
	FM-353104-S	WO-A-3111	PLATE, back, clincher (CNC-58).....	11	
	FM-GPW-1150498	WO-A-2214	SCREW, thumb, top bow, assembly ($\frac{3}{8}$ -24NPF).....	2	
	FM-95705-S	WO-A-3051	SOCKET, curtain fastener (CNC-515).....	14	
	FM-GPW-1152730	WO-A-3109	STRAP, hold-down, top, rear, assembly.....	6	
	FM-GPW-1152720	WO-A-3110	STRAP, top lock, assembly.....	2	
	FM-GPW-1152950	WO-A-3141	STRAP, top roll, assembly.....	2	
	FM-356522-S2	WO-A-2639	WASHER, anti-rattle, top bow pivot.....	2	.0258
	FM-95627-S	WO-A-3054	WASHER, curtain eyelet fastener (CNC-98).....	32	
3320-GP-17723-A	FM-351370-S2	WO-A-2902	WASHER, top bow, front pivot (S., 1 in. O.D. x $\frac{21}{64}$ I.D.).....	2	.0012
			2201F—SIDE CURTAINS		
	FM-GPW-1120041	WO-A-2998	CURTAIN, left, side, assembly.....	1	
	FM-GPW-1120040	WO-A-2999	CURTAIN, right, side, assembly.....	1	
	FM-95626-S	WO-A-3052	FASTENER, side curtain (male, flush type) (CNC-50).....	14	
	FM-95628-S	WO-A-3053	WASHER, side curtain fastener (CNC-60).....	14	
			2202—REAR VIEW MIRRORS		
	FM-GP-17723-A		MIRROR, rear view, assembly (superseded by MIRROR assembly, FM-21CS-17718).....	1	.342
	FM-21CS-17682-B	WO-A-2934	MIRROR, rear view, assembly (includes bracket).....	1	
	FM-34054-S2	WO-6989	NUT, mach. screw, hex., S., No. 12 (0.216)-24NC-2.....	6	
3320-GP-17723-A	FM-36845-S2	WO-6988	SCREW, machine, rd-hd., S., No. 12 (0.216)-24NC-2 x $\frac{5}{8}$	6	
	FM-34804-S2	WO-51969	WASHER, lock, reg., S., No. 12 (0.216).....	6	

18-1

GROUP 22—MISCELLANEOUS BODY, CHASSIS AND ACCESSORIES (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		I T E M	Quant. Req'd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
18-1	3320-21CS-17718-A	FM-21CS-17718-A	WO-A-11850	2202—REAR VIEW MIRRORS (Cont'd)	1	
			WO-A-11862			
			WO-A-11861			
18-1		FM-GPW-1101621-A FM-GPW-1101629-A FM-GPW-1101627-A FM-357016-S19	WO-A-1330 WO-A-11757 WO-A-17344 WO-A-1331 WO-53013 WO-53014	2203—IDENTIFICATION AND CAUTION PLATES	1 1 1 1 12 12 12	
18-1	H017-0506101 H001-1518007	FM-GPW-13380-A FM-33796-S FM-36825-S FM-34805-S	WO-A-1306 WO-5914 WO-52834 WO-52706	2203A—REFLECTORS	4 8 8 8	.277
18-1	H001-1518005 G503-0384600 G121-0389650	FM-GPW-13434-A2 FM-GPW-14561 FM-355836-S7 FM-355130-S7 FM-34803-S2 FM-GPW-17262	WO-A-8242 WO-A-8126 WO-345961 WO-A-5449 WO-6352 WO-5064 WO-52221 WO-A-1344 WO-A-5734	2204—SPEEDOMETER AND PARTS	1 1 1 2 2 2 2 1 1	.0212 .0041 .326

GROUP 22—MISCELLANEOUS BODY, CHASSIS AND ACCESSORIES (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		I T E M	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
	G503-7032689			2208—AIR COMPRESSOR (TIRE PUMP). (Cont'd) (Only for vehicles modified by MWO-ORD G503-W9)	1	
				PISTON, air compressor assembly (WBK-185944).....		
				(Consists of:		
				2 CUP, packing (WBK-520610)		
				2 FOLLOWER, piston (WBK-185906)		
				1 PISTON (WBK-185903)		
	9680-A-6414		WO-A-6414	PULLEY, crankshaft (ORD 7044165).....	1	
	G503-7032697			PULLEY, air compressor flywheel, assembly (WBK-185921).....	1	
				(Consists of:		
				2 BEARING, face (WBK-186019)		
				1 LATCH (WBK-185924)		
				1 PIN, clutch (WBK-185919)		
				1 PIN, clutch stop (WBK-185962)		
				1 PIN, latch pivot (WBK-185928)		
				1 PLUG, clutch pin (WBK-185920)		
				1 PULLEY, flywheel (WBK-186058)		
				1 SPRING, clutch pin (WBK-185923)		
				1 SPRING, latch (WBK-185927)		
	G503-7032694			RING, retaining, air compressor piston pin (WBK-185912).....	1	
	G503-7032692			ROD, connecting, air compressor (WBK-185907).....	1	
				SEAL, air compressor crankshaft bearing sleeve (WBK-522645)	1	
	G503-7032696			SLEEVE, bearing, air compressor crankshaft (WBK-185914)	1	
	G503-7032687			SPRING, air compressor charge valve (WBK-503628)	2	
	G503-7032698			SPRING, air compressor latch (WBK-185927) (also part of PULLEY, assembly, WBK-185921).....	1	
	G503-7032700			STRAINER, air intake, air compressor, assembly (WBK-185934)	1	
				STUD, air compressor cylinder, w/NUT, assembly (3/8 x 5 1/8) (WBK-186007)	2	
				STUD, air compressor cylinder head (C7044153)	2	
				NUT, air compressor cylinder head stud (A7044072)	2	
				TEE, air compressor (1/4 in.) (WBK-186033)	2	
	G503-7032686			VALVE, discharge, air compressor (WBK-92235)	2	
	G503-7032699			WHEEL, air compressor clutch (WBK-185929)	1	
				KEY, Woodruff, No. 6 (WBK-136157)	1	
				NUT, 3/4-16NF (WBK-521671)	1	

PARTS

2306—TIRES AND TUBES

2603—RADIO SUPPRESSION SYSTEM PARTS

GROUP 26—RADIO

2603—RADIO SUPPRESSION SYSTEM PARTS

06-12

Note 1—Only for vehicles modified by MWO ORD G503-W9.

GROUP 26—RADIO (Cont'd)

Figure Number	Official Stock Number	Piece Mark or Part Number		I T E M	Quant. Reqd. per Unit Assy.	Unit Price
		Ford No.	Willys No.			
Col. 1	Col. 2	Col. 3	Col. 4	Col. 5	Col. 6	Col. 7
				2603—RADIO SUPPRESSION SYSTEM PARTS (Cont'd)		
3320-GPW-18874	FM-GPW-18874	WO-A-5036	STRAP, bond No. 11 (engine front plate to frame left)		1	.0961
3320-GPW-18854	FM-GPW-18854	WO-A-5027	STRAP, bond No. 12 (exhaust pipe ground connection to frame)		1	.228
3320-GPW-18853	FM-GPW-18859	WO-A-5032	STRAP, bond No. 13 and No. 14 (radiator stud, right, to frame, and radiator stud, left, to frame)		2	
	FM-33798-87	WO-A-1532	NUT, reg., hex., S., cd-pltd., $\frac{5}{16}$ -24NF-2		2	
3320-GPW-18872	FM-GPW-18872	WO-A-5031	STRAP, bond No. 15 (rear engine support to frame cross member stud)		1	.0815
	FM-33798-S7	WO-A-1632	NUT, reg., hex., S., cd-pltd., $\frac{5}{16}$ -24NF-2		2	
3320-GPW-18871	FM-GPW-18871	WO-A-5030	STRAP, bond No. 16 (transfer case to body floor stud)		1	.101
	FM-33798-S7	WO-A-1532	NUT, reg., hex., S., cd-pltd., $\frac{5}{16}$ -24NF-2		2	
3320-GPW-18852	FM-GPW-18852	WO-A-1699	STRAP, bond No. 21 and No. 22 (hood to brush guard right, and hood to brush guard, left)		2	.0505
		WO-A-1285	SUPPRESSOR, ignition (superseded by SUPPRESSOR, FM-GPW-18825, WO-A-6320)		4	
3320-GPW-18825-B	FM-GPW-18825-B	WO-A-6320	SUPPRESSOR, ignition (supersedes SUPPRESSOR, WO-A-1285)		4	

INDEXES

TABLE OF CONTENTS

	<i>Page</i>
FIGURE INDEX	224
ALPHABETICAL INDEX	225
ORDNANCE PART NUMBER INDEX	238
MANUFACTURERS' PART NUMBER INDEX	239
OFFICIAL STOCK NUMBER INDEX	275

FIGURE INDEX

FIGURE	TITLE	PAGE	FIGURE	TITLE	PAGE
A	Truck, 1/4-Ton, 4 x 4 Command Reconnaissance— 3/4 Right Front View.....	8	06-6	Distributor Assembly (Dustproof Type)—Ex- ploded View.....	105
B	Truck, 1/4-Ton, 4 x 4 Command Reconnaissance— 3/4 Left Front View.....	9	06-7	Lighting Switch (Rotary Type).....	110
C	Truck, 1/4-Ton, 4 x 4 Command Reconnaissance— Right Side View.....	10	06-8	Headlight Assembly.....	114
D	Truck, 1/4-Ton, 4 x 4 Command Reconnaissance— 3/4 Right Rear View.....	11	06-9	Blackout Driving Light Assembly.....	118
E	Truck, 1/4-Ton, 4 x 4 Command Reconnaissance— Front View.....	12	06-10	Marker Light Assembly.....	119
01-1	Engine Assembly—Left Side View.....	13	06-11	Tail and Stop Light Assembly.....	120
01-2	Engine Assembly—Right Side View.....	14	06-12	Wiring Installation.....	122
01-3	Engine Assembly—Transverse Sectional View ..	15	07-1	Transmission Assembly—Sectional View.....	125
01-4	Engine Assembly—Longitudinal Sectional View	16	07-2	Transmission Assembly—Exploded View.....	126
01-5	Timing Chain Cover, Cylinder Block and Fly- wheel Housing—Exploded View.....	19	08-1	Transfer Case Assembly—Sectional View.....	133
01-6	Crankshaft and Bearings.....	21	08-2	Transfer Case Assembly—Exploded View.....	134
01-7	Piston and Connecting Rod—Exploded View....	27	09-1	Propeller Shafts and Universal Joints.....	140
01-8	Camshaft, Timing Chain and Valve Mechanism— Exploded View.....	30	09-2	Rear Propeller Shaft and Universal Joint.....	141
01-9	Valve Cover and Ventilator Parts—Exploded View.....	31	10-1	Front Axle Assembly and Steering Linkage.....	143
01-10	Oil Pump Assembly—Exploded View.....	35	10-2	Differential Assembly—Sectional View.....	145
01-11	Manifold Assembly—Exploded View.....	38	10-3	Front Axle Housing, Shaft and Related Parts...	147
01-12	Oil Filter Assembly—Exploded View.....	39	10-4	Front Axle Steering Knuckle, Universal Joint and Related Parts—Sectional View.....	151
02-1	Clutch Assembly—Sectional View.....	43	10-5	Front Axle Steering Knuckle and Related Parts— Exploded View.....	152
02-2	Clutch Pressure Plate and Disk—Exploded View	44	10-6	Front Axle Universal Joints.....	155
02-3	Clutch Linkage and Controls.....	46	11-1	Rear Axle Assembly—Exploded View.....	158
03-1	Fuel Tank Assembly and Related Parts.....	49	12-1	Brake Assembly—Exploded View.....	164
03-2	Carburetor Assembly—Exploded View.....	52	12-2	Hand Brake (External Contracting Type)— Exploded View.....	165
03-3	Air Cleaner Assembly—Exploded View.....	59	12-3	Hand Brake (Internal Expanding Type).....	168
03-4	Fuel Pump Assembly—Exploded View.....	61	12-4	Brake Master Cylinder Assembly—Exploded View.....	172
03-5	Fuel Strainer Assembly—Exploded View.....	67	12-5	Brake Wheel Cylinder Assembly—Exploded View.....	175
04-1	Exhaust System.....	69	12-6	Brake System.....	176
05-1	Water Pump Assembly—Exploded View.....	73	14-1	Steering Connecting Rod—Exploded View.....	181
06-1	Generator Assembly (Bearing Type)—Exploded View.....	76	14-2	Steering Gear Assembly—Exploded View.....	184
06-2	Generator Assembly (Bushing Type)—Exploded View.....	82	15-1	Pintle Hook.....	189
06-3	Generator Regulator Assembly.....	89	16-1	Front Spring Assembly (with Torque Reaction Spring).....	191
06-4	Cranking Motor Assembly—Exploded View....	94	18-1	Front Compartment and Instrument Panel....	198
06-5	Distributor Assembly (Open Type)—Exploded View.....	102	20-1	Capstan Winch—Installed View.....	210
			20-2	Capstan Winch Mounting Bracket and Drive Shaft.....	213
			20-3	Capstan Winch Drive Shaft Assembly.....	215

ALPHABETICAL INDEX

Attaching parts are not included in this index. They are listed in alphabetical order below the parts which they attach.

Item	Group	Item	Group
A			
ABSORBER, shock, assembly	1603	BEARING, cranking motor	0602
ADAPTER, instrument light	0605C	BEARING, cranking motor, commutator end	0602
ADAPTER, speedometer	0810	BEARING, cranking motor, intermediate,	
AMMETER, assembly	0605	assembly	0602
ANTISQUEAK, apron to frame	1702	BEARING, distributor, absorbent bronze	0603
ANTISQUEAK, front fender to cowl side panel	1701	BEARING, engine clutch release	0203
ANTISQUEAK, fuel tank	0300	BEARING, engine connecting rod	0104A
ANTISQUEAK, fuel tank hold down strap	0300	BEARING, engine crankshaft	0102A
APRON, splash, front fender, assembly	1702	BEARING, engine heat control valve shaft	0108C
ARM, adjustable, windshield wiper, assembly	1811D	BEARING, generator commutator end	0601-1
ARM, adjusting, windshield	1811	BEARING, roller, transmission main drive gear	
ARM, advance control, distributor, assembly	0603	pilot	0703
ARM, breaker, distributor, assembly	0603	BEARING, steering bell crank	1401
ARM, carburetor pump, assembly	0301	BEARING, steering column, wheel end, assembly	1403A
ARM, carburetor throttle shaft, assembly	0301	BEARING, transfer case intermediate shaft gear	0804
ARM, generator brush	0601	BEARING, transmission main drive gear	0703
ARM, rocker, fuel pump, assembly	0302	BEARING, universal joint, assembly	0902
ARM, steering gear	1403A	BEARING, water pump, assembly	0503
ARM, steering knuckle	1006	BEARING SET, engine connecting rod	0104A
ARM, windshield wiper, assembly	1811D	BEARING SET, engine crankshaft	0102A
ARMATURE, cranking motor, assembly	0602	BELLOWS, water pump seal	0503
ARMATURE, generator, assembly	0601	BELT, drive, air compressor	2208
ARMATURE, generator current regulator,		BELT, drive, fan and generator	0503B
assembly	0601B	BLADE, windshield wiper	1811D
ARMATURE, generator cut-out relay	0601B	BLOCK, adjusting, accelerator throttle rod	0303
ARMATURE, generator voltage regulator,		BLOCK, cylinder, assembly	0101
assembly	0601B	BLOCK, junction	0606E
AXLE, front, assembly	1000	BODY, air cleaner, assembly	0301C
AXLE, rear, assembly	1100	BODY, assembly	1800
B		BODY, engine crankcase ventilator, assembly	0107N
BACK, front seat, assembly	1804A	BODY, engine oil pump	0107
BACK, rear seat, assembly	1804	BODY, fuel pump, assembly	0302
BAFFLE, engine crankcase ventilator	0107N	BODY, water pump	0503
BAIL, fuel pump strainer, assembly	0302	BOLT, adjusting, hand brake	1201
BALL, fulcrum, transmission gearshift lever	0706A	BOLT, anchor, safety strap	1804
BALL, poppet, transfer case shift rod	0805	BOLT, brake master cylinder outlet fitting	1205
BALL, poppet, transmission gearshift rail	0706B	BOLT, crankshaft bearing cap	0102A
BALL, poppet, winch drive support bracket	2001	BOLT, differential case bearing cap	1003
BALL, steering gear worm	1403A		1104
BALL, transfer case shift lever handle	0805B	BOLT, engine connecting rod bearing cap	0104
BALL, transmission gearshift lever	0706A	BOLT, eye, brake master cylinder to pedal	1205
BALL, universal joint	1007	BOLT, eye, safety chain	0606F
BAND, cover, generator	0601-2		1502
BAND, cranking motor head, assembly	0602	BOLT, eye, safety strap	1802A
BAND, generator, head	0601	BOLT, fitting, front wheel brake hose, cylinder	
BAND, hand brake, assembly	1201	end	1209B
BAR, bumper, front	2101	BOLT, front spring, center, assembly	1601
BAR, tie, brake master cylinder	1205	BOLT, generator brace to bracket	0601A-1
BASE, air cleaner, assembly	0301C	BOLT, generator terminal	0601-2
BASE, distributor, assembly	0603	BOLT, glove compartment lock	1809A
BASE, dustproof distributor, assembly	0603-1	BOLT, hand brake band anchor clip	1201
BATTERY, dry charged	0610	BOLT, hold-down, headlight support, assembly	0607
BATTERY, moist uncharged	0610	BOLT, lock, engine piston pin	0103B
BEARING, ball, air compressor flywheel pulley	2208	BOLT, mounting, generator	0601A-1
BEARING, ball, generator	0601	BOLT, mounting, headlight	0607
BEARING, ball, generator commutator end	0601-2	BOLT, pivot, generator brace	0601A
BEARING, ball, generator drive end	0601-2	BOLT, pivot, spring shackle	1601C
BEARING, ball, transfer case output clutch shaft	0803		1602
BEARING, ball, transmission main drive gear	0703	BOLT, rear spring, center, assembly	1601A
BEARING, ball, transmission main shaft, rear		BOLT, socket to body	0606F
end	0704	BOLT, steering knuckle stop	1006
		BOLT, support, transfer case	0809
		BOLT, terminal clamp, assembly	0610B

ALPHABETICAL INDEX (Cont'd)

Item	Group	Item	Group
BOLT, through, generator	0601-2	BRACKET, stationary, generator cut-out relay, assembly	0601B
BOLT, torque reaction spring shackle	1601C	BRACKET, support, air cleaner, assembly	0301C
BOLT, welding battery holder to fender	1701	BRACKET, support, body	1500
BOLT, wheel divided rim	1301	BRACKET, support, engine oil filler tube	0107G
BOLT, wheel hub	1302A	BRACKET, support, exhaust pipe extension	0401-1
BOLT, windshield clamp bracket	1811	BRACKET, support, muffler front clamp	0401-1
BOLT, wing, air cleaner cover	0301C	BRACKET, support, muffler rear clamp	0401-1
BOW, top, assembly	2201A	BRACKET, support, radiator	1500
BOWL, fuel pump	0302	BRACKET, support, radiator grille guard	1500
BOWL, fuel strainer, assembly	0306B	BRACKET, support, radiator guard	1500
BOOT, brake master cylinder	1205	BRACKET, support, rifle holder to windshield, assembly	1820
BOOT, wheel cylinder	1207	BRACKET, support, spare tire, assembly	1505
BRACE, air cleaner support bracket	0301C	BRACKET, support, spare wheel, assembly	1505
BRACE, front fender	1701	BRACKET, support, winch drive, assembly	2001
BRACE, generator, assembly	0601A	BRACKET, tool compartment lock, assembly	1817
BRACE, instrument panel, circuit breaker, assembly	1809	BRACKET, top bow pivot	2201A
BRACE, machine gun mounting plate	1500	BRACKET, windshield adjusting arm, assembly	1811
BRACE, mounting, voltage regulator	1702	BRACKET, windshield mounting clamp catch	1811
BRACKET, accelerator cross shaft	0303	BRACKET, windshield pivot, assembly	1811
BRACKET, adjusting generator current and voltage regulator coil, assembly	0601B	BRACKET, windshield swing arm	1811
BRACKET, air compressor	2208	BRAKE, assembly	1200
BRACKET, battery hold-down	0610A	BRAKE, hand, assembly	1201
BRACKET, brake axle tee	1209D	BRAKE, hand, internal expanding type, assembly	1201-1
BRACKET, brake pedal retracting spring	1500	BREAKER, circuit	0606D
BRACKET, engine clutch control lever	0204	BREATHER, transfer case, assembly	0801
BRACKET, engine crank retaining clamp, assembly	1812A	BRUSH, cranking motor	0602-1
BRACKET, engine support	1500	BRUSH, generator	0601
BRACKET, front and rear spring pivot	1500	BRUSH, grounded, cranking motor	0602
BRACKET, front and rear spring shackle, assembly	1500	BRUSH, horn wire contact	0609B
BRACKET, front brake hose	1209D	BRUSH, insulated, cranking motor	0602
BRACKET, front cross member	1500	BRUSH SET, cranking motor	0602
BRACKET, front seat	1804	BRUSH SET, generator	0601
BRACKET, front seat pivot	1804	BUMPER, front and rear axle	1601B
BRACKET, fuel tank hold-down	0300	BUMPER, hood top windshield assembly	1704
BRACKET, generator brace	0601A-1	BUMPER, rifle holder retainer clamp, assembly	1820
BRACKET, hand brake adjusting screw	1201-1	BUMPERETTE, rear	2101
BRACKET, hand brake handle tube, assembly	1201	BUSHING, air cleaner tube to carburetor	0301C
BRACKET, hand brake ratchet tube, assembly	1201-1	BUSHING, dustproof distributor terminal post	0603-1
BRACKET, hood catch	1704	BUSHING, engine camshaft	0106A
BRACKET, horn, assembly	0609	BUSHING, front axle shaft	1007
BRACKET, ignition coil	0604	BUSHING, front spring eye	1601
BRACKET, master cylinder, assembly	1500	BUSHING, front wheel spindle	1006
BRACKET, mounting, ammeter	0605	BUSHING, fuel strainer inlet and outlet	0304
BRACKET, mounting, brake hose	1500	BUSHING, generator armature terminal insulator	0601-2
BRACKET, mounting, capstan winch, assembly	2001	BUSHING, generator field terminal insulator	0601-2
BRACKET, mounting, engine	0110	BUSHING, hand brake operating lever	1201-1
BRACKET, mounting, engine oil filter, assembly	0107E	BUSHING, insulating, cranking motor terminal post	0602
BRACKET, mounting, fuel gage	0605	BUSHING, insulating, generator field terminal	0601
BRACKET, mounting, generator regulator resistance	0601B	BUSHING, intake manifold	1811D-1
BRACKET, mounting, oil pressure gage and heat indicator	0605	BUSHING, locking, generator brace	0601A
BRACKET, mounting, speedometer	2204	BUSHING, pilot, clutch shaft	0205
BRACKET, pivot, rear seat frame	1804	BUSHING, rear spring eye	1601A
BRACKET, radiator	1500	BUSHING, shock absorber mounting pin, rubber	1603
BRACKET, rail, assembly	2201A	BUSHING, spark plug cable support	0604A
BRACKET, reinforcement, engine front support	0110	BUSHING, speedometer drive gear, transfer case	0810
BRACKET, retaining, engine crank	1802A	BUSHING, spring shackle, assembly	1602
BRACKET, retaining, rear seat back frame	1804	BUSHING, steering column support	1405
BRACKET, shock absorber, assembly	1500	BUSHING, steering gear housing	1403A
BRACKET, spare gas line can, assembly	1817A	BUSHING, torque reaction spring leaf	1601C
		BUSHING, transfer case output clutch shaft pilot	0803
		BUSHING, transmission countershaft gear	0704C

ALPHABETICAL INDEX (Cont'd)

Item	Group	Item	Group
BUSHING, transmission main shaft second speed gear	0704	CHAIN, safety, air compressor, assembly	2208
BUSHING, transmission reverse idler gear	0704C	CHAIN, timing engine camshaft	0106C
BUSHING, winch shaft	2001	CHAIN, windshield thumb screw	1811
BUTTON, horn	0609B	CHECK, carburetor fuel intake, assembly	0301
C		CHECK, carburetor pump discharge, assembly	0301
CABLE, battery ground	0610B-1	CLAMP, axle brake tube	1209C
CABLE, battery to cranking motor switch	0610B	CLAMP, carburetor air horn	0301C
CABLE, battery to starting switch, positive	0610B	CLAMP, carburetor and air cleaner horn	0301C
CABLE, blackout driving light, assembly	0607D	CLAMP, carburetor tube	0301
CABLE, blackout driving light connector to switch	0606B	CLAMP, engine crankcase ventilator hose to oil filler tube	0107G
CABLE, blackout taillight to connector	0608	CLAMP, engine oil filter, assembly	0107E
CABLE, coil	0604A	CLAMP, exhaust pipe extension	0401
CABLE, engine clutch control	0203	CLAMP, exhaust pipe extension support strap	0401-1
CABLE, filter, battery to starting switch	0606B	CLAMP, exhaust pipe to exhaust pipe extension	0401-1
CABLE, filter, coil primary to function block	0606B	CLAMP, exhaust pipe to muffler	0401
CABLE, filter, regulator to junction block	0606B	CLAMP, fuel pump valve	0302
CABLE, fuel gage to circuit breaker	0606B	CLAMP, fuel tank hold-down, assembly	0300
CABLE, generator regulator to generator	0606B	CLAMP, hand brake cable tube	1201
CABLE, generator regulator to junction box	0606B	CLAMP, hand brake conduit	1201-1
CABLE, ground headlight	0607	CLAMP, hose	0301C
CABLE, hand brake handle, assembly	1201		0505
CABLE, horn, assembly	0609	CLAMP, muffler	0401-1
CABLE, horn to junction block	0609B	CLAMP, muffler tail pipe	0401
CABLE, ignition switch to ammeter to blackout switch	0606B	CLAMP, radiator surge tank connecting hose	0501C
CABLE, instrument panel fuel gage to fuel tank unit	0606B	CLAMP, steering column, assembly	1405
CABLE, spark plug	0604A	CLAMP, steering column support	1405
CABLE, starting switch to cranking motor	0610B	CLAMP, steering knuckle tie rod socket	1402
CABLE, trailer, coupling socket to body ground	0606F	CLAMP, support, oval type muffler	0401
CAGE, front axle universal joint	1007	CLAMP, support, round type muffler	0401
CAM, brake shoe anchor pin	1203	CLAMP, windshield, assembly	1811
CAM, operating, hand brake	1201	CLEANER, air, assembly	0301C
CAM, rifle holder retainer handle	1820	CLEVIS, adjustable, hand brake	1201-1
CAMSHAFT, engine	0106	CLIP, brake tube	1209C
CAP, distributor, assembly	0603	CLIP, distributor breaker arm spring	0603
CAP, dust, propeller shaft sleeve yoke	0902	CLIP, front rest to floor pan bolt	0606B
CAP, dustproof distributor, assembly	0603-1	CLIP, front left spring to axle housing	1602
CAP, filler, brake master cylinder, assembly	1205	CLIP, front spring leaf	1601
CAP, filler, radiator, assembly	0501	CLIP, hand brake cable conduit to flywheel housing	1201-1
CAP, fuel tank	0300	CLIP, lock, spring, brake hose to frame bracket	1209C
CAP, fuel tank well drain	0300	CLIP, mounting, speedometer cable	2204
CAP, generator commutator end plate	0601-2	CLIP, rear spring leaf	1601A
CAP, king pin bearing, assembly	1006	CLIP, rear spring to axle housing	1602
CAP, spark plug insulator	0604B	CLIP, support, hand brake cable tube	1201
CAP, transfer case output shaft bearing, assembly	0801	CLIP, throttle rod retracting spring	0303
CAP, transmission gearshift lever housing	0706A	CLIP, torque reaction spring	1601C
CAP, wheel hub	1302	CLIP, tube to floor pan cross sill, tube to fender splashers, tube to dash	0304
CAP SET, pneumatic tube valve	2306	CLIP, tube to front engine plate	0304
CARBURETOR, assembly	0301	CLIP, wiper tubing to windshield frame	1811D-1
CARRIER, engine clutch release bearing	0203	COCK, drain, engine cylinder water jacket	0101
CASE, differential	1003	COCK, drain, radiator	0501
	1004	COIL, cranking motor field	0602
CASE, engine oil filter, assembly	0107E	COIL, field, assembly	0601-2
CASE, glove compartment lock, assembly	1809A	COIL, field, cranking motor, assembly	0602-1
CASE, rifle, assembly	1820	COIL, field, generator, assembly	0601
CASE, transfer	0801	COIL, generator current regulator, assembly	0601B
CASE, transfer, assembly	0800		0601B-1
CASE, transmission, assembly	0701	COIL, generator cut-out relay, assembly	0601B
CATCH, hold-down, windshield, assembly	1811		0601B-1
CATCH, hood, assembly	1704	COIL, generator voltage regulator, assembly	0601B
CATCH, windshield clamp	1811		0601B-1
		COIL, ignition, assembly	0604
		COLLAR, distributor drive shaft	0603

ALPHABETICAL INDEX (Cont'd)

Item	Group
COLUMN, steering, assembly	1403A
COMPRESSOR, air, assembly	2208
CONDENSER, cranking motor switch and regulator terminal	0606
CONDENSER, distributor	0603
CONE and ROLLERS, differential case bearing	1003 1104
CONE and ROLLERS, differential drive pinion bearing	1104
CONE and ROLLERS, differential drive pinion inner bearing	1003
CONE and ROLLERS, king pin bearing	1006
CONE and ROLLERS, transfer case output shaft bearing	0803
CONE and ROLLERS, wheel bearing	1301A
CONNECTION, accelerator pedal	0303
CONNECTION, flexible, fuel line	0304
CONNECTOR, battery, series	0610B-1
CONNECTOR, cranking motor field coil	0602
CONNECTOR, dustproof distributor terminal post, assembly	0603-1
CONNECTOR, fuel strainer	0304
CONNECTOR, generator regulator series coil	0601B
CONNECTOR, tube to oil filter	0107J
CONTACT, breaker, distributor, assembly	0603
CONTROL, carburetor choke or throttle, assembly	0303A
CONTROL, lockout, lighting switch, assembly	0606
CORE, radiator, assembly	0501
CORE SET, pneumatic tube valve	2306
COUNTERSHAFT, transmission	0704C
COVER, assembly	0606F
COVER, axle housing	1001 1101
COVER, carburetor bowl, assembly	0301
COVER, distributor terminal slot	0603
COVER, dust, steering knuckle tie rod socket	1402
COVER, engine clutch	0202
COVER, engine oil filter, assembly	0107E
COVER, engine oil pump, assembly	0107
COVER, engine timing chain, assembly	0106D
COVER, engine valve spring	0105C
COVER, floor, transmission	1803
COVER, fuel pump, assembly	0302
COVER, generator commutator end, assembly	0601-1
COVER, generator commutator end cap	0601
COVER, generator regulator	0601B
COVER, headlight	2201
COVER, inspection, floor, brake cylinder	1803
COVER, mounting, fuel strainer	0306B
COVER, rear floor pan shock absorber, assembly	1803
COVER, steering column oil hole	1403A
COVER, steering gear housing, assembly	1403A
COVER, terminal	0606F
COVER, trailer electric plug housing	1803
COVER, transfer case	0801
COVER, transmission gearshift lever housing	0706A
COVER, wick, generator commutator end	0601-1
COVER, windshield, assembly	2201
CRANK, bell, steering drag link	1401
CRANK, hand brake cable, assembly	1201
CRANKSHAFT, air compressor	2208
CRANKSHAFT, engine, assembly	0102
CUP, brake master cylinder	1205
CUP, brake master cylinder check valve	1205

Item	Group
CUP, brake wheel cylinder	1207
CUP, differential case bearing	1003 1104
CUP, differential drive pinion bearing	1003 1104
CUP, engine clutch pressure spring	0202
CUP, horn button spring	0609B
CUP, king pin bearing	1006
CUP, oil, air cleaner	0301C
CUP, oil retaining, transmission second and high speed gearshift rail	0706B
CUP, packing, air compressor piston	2208
CUP, retaining, glove compartment door lock	1809A
CUP, retaining, transfer case insulator	1500
CUP, retaining, transfer case support insulator	0809
CUP, steering gear worm ball	1403A
CUP, transfer case output shaft bearing	0803
CUP, wheel bearing	1301A
CURTAIN, side, assembly	2201F
CUSHION, front seat, assembly	1804A
CUSHION, rear seat, assembly	1804A
CYLINDER, glove compartment lock, assembly	1809A
CYLINDER, master, brake, assembly	1205
CYLINDER, wheel, assembly	1207

D

DECK TOP	1800B
DIAPHRAGM, fuel pump, assembly	0302
DIFFERENTIAL, assembly	1003 1104
DISK, carburetor metering rod	0301
DISK, engine oil pump rotor	0107
DISTRIBUTOR, assembly	0603
DISTRIBUTOR, dustproof, assembly	0603-1
DOOR, blackout driving light, assembly	0607D
DOOR, blackout tail and service tail and stop light, assembly	0608
DOOR, blackout tail and blackout stop light	0608
DOOR, glove compartment, assembly	1809A
DOOR, headlight, assembly	0607
DOOR, marker light, assembly	0607D
DRIVE, Bendix, cranking motor, assembly	0602
DRIVER, windshield wiper arm, knurled	1811D-1
DRUM, hand brake	1201

E

ECCENTRIC, brake shoe	1203
ELBOW, air compressor	2208
ELBOW, engine crankcase ventilator to tube	0107N
ELBOW, engine crankcase ventilator tube to valve	0107N
ELBOW, engine cylinder head water outlet	0505
ELBOW, flexible connection to engine and tube to cylinder block	0107J
ELBOW, flexible connection to fuel pump	0304
ELBOW, fuel pump inlet and outlet	0304
ELECTROLYTE, battery	0610
ELEMENT, air cleaner, assembly	0301C
ELEMENT, engine oil filter, assembly	0107E
END, steering knuckle tie rod, assembly	1402
ENGINE, assembly	0100
EXTENSION, exhaust pipe	0401-1
EXTENSION, fuel tank filler neck	0300
EXTENSION, hand brake ratchet tube, assembly	1201-1
EYELET, curtain fastener	2201A

ALPHABETICAL INDEX (Cont'd)

Item	Group	Item	Group
F			
FACING, engine clutch	0201A	GASKET, brake master cylinder filler cap	1205
FACING SET, engine clutch disk	0201A	GASKET, brake master cylinder outlet fitting	1205
FAN, assembly	0503A	GASKET, brake master cylinder outlet fitting bolt	1205
FASTENER, side curtain	2201F	GASKET, carburetor body flange to main body	0301
FASTENER, single post type, curtain	2201A	GASKET, carburetor bowl cover	0301
FASTENER, windshield curtain	1811	GASKET, carburetor metering rod jet and plug	0301
FENDER, front, assembly	1701	GASKET, carburetor needle seat and plug	0301
FERRULE, insulating, horn button	0609B	GASKET, carburetor nozzle	0301
FILLER, front bumper bar, wood	2101	GASKET, carburetor strainer plug	0301
FILLER, front fender brace, wood	1701	GASKET, carburetor to intake manifold	0301A
FILLER, rear floor pan cross sill	1802A	GASKET, cover, generator commutator end	0601-1
FILTER, oil, engine, assembly	0107E	GASKET, differential drive pinion shaft oil seal	1103 1104
FILTER, voltage regulator	2603	GASKET, engine crankcase ventilator to valve spring cover	0107N
FILTER-GROUP, assembly	2603	GASKET, engine crankshaft oil slinger	0102
FILTER-UNIT, generator ground to armature circuit	2603	GASKET, engine cylinder block to timing chain cover plate	0106D
FILTER-UNIT, generator regulator	2603	GASKET, engine cylinder head	0101A
FILTER-UNIT, generator regulator field	2603	GASKET, engine cylinder head water outlet elbow	0505
FITTING, alemite, winch drive support bracket	2001	GASKET, engine intake and exhaust manifold	0108
FITTING, grease, transfer case shift lever pivot pin	0805B	GASKET, engine intake to exhaust manifold	0108
FITTING, lubricating, brake pedal shaft	1204	GASKET, engine oil filler cap	0107H
FITTING, lubricating, hydraulic type, ball seal	1602	GASKET, engine oil filter cover	0107E
FITTING, outlet, brake master cylinder	1205	GASKET, engine oil filter cover bolt	0107E
FLANGE, carburetor body, assembly	0301	GASKET, engine oil pan	0107A
FLANGE, companion, transfer case output shaft	0803	GASKET, engine oil pan drain plug	0107A
FLANGE, drive, front axle shaft	1007	GASKET, engine oil pump cover	0107
FLANGE, exhaust pipe	0401	GASKET, engine oil pump cover to body screw	0107
FLAP, tire	2306	GASKET, engine oil pump oil relief spring retainer	0107
FLOAT, carburetor, assembly	0301	GASKET, engine oil pump shaft	0107
FLOAT, oil strainer, engine assembly	0107A-1	GASKET, engine oil pump to cylinder block	0107
FLYWHEEL, engine, assembly	0109	GASKET, engine oil strainer float support	0107A-1
FOLLOWER, air compressor piston	2208	GASKET, engine timing chain cover	0106D
FORK, shift, capstan winch	2003	GASKET, engine valve spring cover	0105C
FORK, shift, transmission low speed and reverse gear	0706C	GASKET, engine valve spring cover bolt	0105C
FORK, shift, transmission second and high speed gear	0706C	GASKET, exhaust pipe flange	0401
FORK, transfer case shift rod	0805A	GASKET, fuel pump bowl	0302
FRAME, assembly	1500	GASKET, fuel pump to block	0302A
FRAME, front seat, assembly	1804	GASKET, fuel pump valve	0302
FRAME, hold-down, battery	0610A	GASKET, fuel strainer bowl	0306B
FRAME, radiator guard, assembly	2103	GASKET, fuel strainer cover cap screw	0306B
FRAME, rear seat, assembly	1804	GASKET, fuel strainer unit	0306B
FRAME, rear seat back, assembly	1804	GASKET, fuel tank cap	0300
FRAME, rear seat cushion, assembly	1804A	GASKET, fuel tank gage	0300A
FRAME, tool compartment	1817	GASKET, generator commutator end bearing cap	0601-2
FRAME, windshield, assembly	1811 1811B	GASKET, generator commutator end cap cover	0601
FRAME, windshield, tubular, assembly	1811B	GASKET, generator commutator end cover oil guard	0601-1
FULCRUM, engine clutch release lever	0203	GASKET, generator commutator end plate cap	0601-2
G		GASKET, generator regulator cover	0601B
GAGE, fuel, assembly	0605	GASKET, generator regulator terminal	0601B
GAGE, fuel, tank unit, assembly	0300A	GASKET, hand brake backing plate to rear bearing cap	1201-1
GAGE, oil pressure, assembly	0605	GASKET, housing, winch drive	2001
GASKET, air cleaner body	0301C	GASKET, insulator, carburetor and intake manifold diffuser, assembly	0301A
GASKET, air cleaner oil cup	0301C	GASKET, marker light door	0607D
GASKET, axle housing cover	1001 1101	GASKET, propeller shaft universal joint trunnion	0902
GASKET, blackout light door	0607D	GASKET, radiator filler cap	0501
GASKET, brake hose fitting	1209B	GASKET, rear axle shaft	1102
GASKET, brake hose fitting bolt	1209B	GASKET, spark plug	0604B

ALPHABETICAL INDEX (Cont'd)

Item	Group	Item	Group
GASKET, steering gear housing side cover	1403A	GUSSET, front bumper	1500
GASKET, steering knuckle oil seal	1006	GUSSET, front floor toe board to frame, assembly	1802A
GASKET, transfer case cover	0801		
GASKET, transfer case output shaft front and rear bearing cap	0803		
GASKET, transfer case output shaft front bearing cap	0801		
GASKET, transfer case to transmission	0801		
GASKET, transmission case to flywheel housing	0701		
GASKET, transmission gearshift lever housing	0706A		
GASKET, water pump to cylinder block	0503		
GASKET SET, carburetor	0301		
GASKET SET, engine manifold	0108		
GASKET SET, engine oil pan	0107A		
GASKET SET, engine overhaul	0101		
GASKET SET, engine, valve, regrind	0101		
GASKET SET, front axle	1000		
GASKET SET, fuel strainer	0306B		
GASKET SET, rear axle	1100		
GASKET SET, service engine oil pump	0107		
GASKET SET, transfer case overhaul	0800		
GASKET SET, transmission	0701		
GEAR, cluster, transmission countershaft, assembly	0704C		
GEAR, clutch, transfer case output shaft	0803		
GEAR, differential	1003		
GEAR, differential, side	1104		
GEAR, drive, differential	1003		
	1104		
GEAR, drive, speedometer, transfer case	0810		
GEAR, drive, transfer case	0802		
GEAR, driven, engine oil pump	0107		
GEAR, driven, speedometer, transfer case	0810		
GEAR, main drive, transmission, assembly	0703		
GEAR, ring, engine flywheel	0109B		
GEAR, sliding, transfer case output shaft	0803		
GEAR, steering, assembly	1403A		
GEAR, transfer case intermediate shaft	0804		
GEAR, transfer case output shaft	0803		
GEAR, transmission main shaft, assembly	0704		
GEAR, transmission reverse idler, assembly	0704C		
GEAR, worm, capstan winch	2001		
GEAR SET, speedometer drive, transfer case	0810		
	0601		
GENERATOR, assembly	0601-2		
GLASS, windshield	1811		
GROMMET, engine oil filter bracket	0107E		
GROMMET, floor, transfer shift lever	1803		
GROMMET, heat indicator tube through dash	0605		
GROMMET, rubber, windshield wiper tube through cowl	1811D		
GROMMET, trailer coupling socket cable through floor pan	0606B		
GROMMET, transfer case shift levers	0805B		
GROMMET, wiring harness through dash	0606B		
GUARD, blackout driving lamp, assembly	2103A		
GUARD, exhaust pipe	1500		
GUARD, front wheel brake hose, assembly	1209B		
GUARD, oil, generator	0601		
GUARD, oil, generator commutator end cover	0601-1		
GUARD, radiator, assembly	2103		
GUIDE, adjusting generator brace	0601A		
GUIDE, engine exhaust valve stem	0105		
GUIDE, engine intake valve stem	0105		
GUIDE, rear axle shaft	1102		
		H	
		HANDLE, body	1800A
		HANDLE, hand brake	1201
		HANDLE, hand brake, assembly	1201-1
		HANDLE, ignition switch	0604C
		HANDLE, lighting and blackout driving rotary switch	0606
		HANDLE, operating, hand brake	1201-1
		HANDLE, rifle holder retainer, assembly	1820
		HANDLE, winch shift rod	2003
		HANDLE, windshield frame	1811
		HANDLE, windshield wiper, assembly	1811D
		HARNESSE, wiring, body	0606B
		HARNESSE, wiring, chassis	0606B
		HARNESSE, wiring, generator to generator regulator	0606B
		HARNESSE, wiring, generator to voltage regulator	0606B
		HARNESSE, wiring, headlight	0606B
		HEAD, cranking motor Bendix drive	0602
		HEAD, cylinder, engine	0101A
		HEAD, generator, commutator end, assembly	0601
		HEAD, generator, drive end, assembly	0601
		HINGE, accelerator pedal	0303
		HINGE, glove compartment door, assembly	1809A
		HINGE, headlight support	0607
		HINGE, hood, assembly	1704
		HINGE, tool compartment lid, assembly	1817
		HOLDER, cranking motor brush	0602
		HOLDER, generator brush, assembly	0601-2
		HOLDER, rifle, assembly	1820
		HOOD, assembly	1704
		HOOK, pintle	1502
		HORN, air, carburetor, assembly	0301
		HORN, air cleaner	0301C
		HORN, assembly	0609
		HOSE, air cleaner tube to cleaner	0301C
		HOSE, air cleaner tube to oil filler tube	0301C
		HOSE, air compressor, assembly	2208
		HOSE, connecting, radiator surge tank tube	0501C
		HOSE, flexible, engine crankcase ventilator to oil filler tube	0107G
		HOSE, front brake at axle tee, assembly	1209B
		HOSE, front brake to axle, assembly	1209B
		HOSE, radiator inlet	0505
		HOSE, radiator inlet and outlet	0503
		HOSE, radiator water outlet	0505
		HOSE, rear brake at axle tee, assembly	1209B
		HOSE, windshield wiper tubing to engine	1811D-1
		HOSE, windshield wiper tubing to tee	1811D-1
		HOUSING, blackout driving light, assembly	0607D
		HOUSING, cranking motor Bendix drive pinion, assembly	0602
		HOUSING, engine flywheel	0109C
		HOUSING, front axle, assembly	1001
		HOUSING, headlight, assembly	0607
		HOUSING, marker light, assembly	0607D
		HOUSING, rear axle, assembly	1101
		HOUSING, steering gear, assembly	1403A
		HOUSING, tail and stop light, assembly	0608
		HOUSING, transmission gearshift lever, assembly	0706A
		HUB, front and rear wheel, assembly	1302

ALPHABETICAL INDEX (Cont'd)

Item	Group	Item	Group
HUB, transmission main shaft second and high speed clutch.....	0704	KIT, repair, generator cutout relay.....	0601B
HUB, winch drive shaft, assembly.....	2001	KIT, repair, generator field coil.....	0601
I		KIT, repair, generator voltage regulator.....	0601B
IMPELLER, water pump.....	0503	KIT, repair, horn button.....	0609B
INDICATOR, engine oil level, assembly.....	0107H	KIT, repair, ignition wiring.....	0604A
INDICATOR, heat, assembly.....	0605	KIT, repair, propeller shaft universal joint.....	0902
INSULATION, cranking motor field coil.....	0602-1	KIT, repair, shock absorber.....	1603
INSULATION, cranking motor field connection.....	0602	KIT, repair, steering connecting rod.....	1401
INSULATION, dustproof distributor terminal post.....	0603-1	KIT, repair, water pump.....	0503
INSULATION, generator regulator cut-out relay stationary bracket.....	0601B	KIT, repair, water pump seal.....	0503
INSULATION, generator regulator terminals.....	0601B	KIT, repair, wiring harness.....	0606B
INSULATOR, carburetor main body to body flange.....	0301	KNOB, blackout driving lamp switch, assembly.....	0606
INSULATOR, engine front support, assembly.....	0110	KNOB, carburetor choke or throttle, assembly.....	0303A
INSULATOR, engine rear support.....	0110	KNOB, instrument panel light switch, assembly.....	0606
INSULATOR, exhaust pipe extension.....	0401-1	KNOB, lighting switch, assembly.....	0606
INSULATOR, generator armature terminal post.....	0601	KNOB, windshield adjusting arm.....	1811
INSULATOR, generator brush holder.....	0601-2	KNUCKLE, steering.....	1006
INSULATOR, generator brush holder rivet.....	0601-2	L	
INSULATOR, generator field coil connecting wire.....	0601-2	LAMP, electric.....	0607B
INSULATOR, generator field connection.....	0601	LAMP-UNIT, blackout driving headlight, assembly.....	0607A
INSULATOR, generator field terminal post.....	0601	LAMP-UNIT, blackout stop, assembly.....	0607A
INSULATOR, generator support.....	0601A	LAMP-UNIT, blackout tail, assembly.....	0607A
INSULATOR, generator terminal screw.....	0601-2	LAMP-UNIT, headlight, assembly.....	0607A
INSULATOR, muffler support.....	0401	LAMP-UNIT, service tail and stop, assembly.....	0607A
INSULATOR, transfer case support.....	0809	LEAD, generator armature terminal, assembly.....	0601
INTERLOCK, transfer case shift rod.....	0805	LEAD, generator voltage regulator armature to base.....	0601B
J		LEAF, front spring.....	1601
JET, carburetor idle well.....	0301	LEAF, rear spring.....	1601A
JET, carburetor low speed, assembly.....	0301	LEAF, torque reaction spring.....	1601C
JET, carburetor metering rod, assembly.....	0301	LEVER, accelerator cross shaft, assembly.....	0303
JET, carburetor pump.....	0301	LEVER, cam, hand brake.....	1201-1
JOINT, universal, axle shaft, assembly.....	1007	LEVER, carburetor choke, assembly.....	0301
JOINT, universal, winch drive shaft, assembly.....	2001	LEVER, carburetor choke control, assembly.....	0301
JOURNAL, universal joint, assembly.....	0902	LEVER, counterweight engine heat control valve.....	0108C
K		LEVER, engine clutch control, assembly.....	0204A
KEY, engine heat control valve lever.....	0108C	LEVER, engine clutch pressure spring.....	0202
KEY, ignition switch.....	0604C	LEVER, engine clutch release.....	0203
KIT, field, capstan winch.....	2000	LEVER, operating, carburetor pump, assembly.....	0301
KIT, repair, axle shaft and universal joint.....	1007	LEVER, operating, hand brake, assembly.....	1201-1
KIT, repair, brake master cylinder.....	1205	LEVER, shift, transfer case.....	0805B
KIT, repair, brake wheel cylinder.....	1207	LEVER, transmission gearshift, assembly.....	0706A
KIT, repair, carburetor.....	0301	LID, tool compartment, assembly.....	1817
KIT, repair, cranking motor.....	0602	LIGHT, blackout tail and blackout stop, assembly.....	0608
KIT, repair, cranking motor Bendix drive.....	0602	LIGHT, blackout tail and service tail and stop, assembly.....	0608
KIT, repair, cranking motor field coil.....	0602	LIGHT, driving, blackout, assembly.....	0607D
KIT, repair, differential case gears.....	1003	LIGHT, head, service, assembly.....	0607
	1104	LIGHT, marker, assembly.....	0607D
	1104	LINER, body sill.....	1800B
KIT, repair, differential drive gear and pinion.....	1003	LINER, radiator guard hood.....	2103
	1104	LINING, brake shoe.....	1202
	0603	LINING, hand brake.....	1201
KIT, repair, distributor.....	0603-1	LINING SET, brake shoe.....	1201-1
KIT, repair, dustproof distributor.....	0603-1	LINING SET, hand brake.....	1201
KIT, repair, engine clutch cover.....	0202	LINK, carburetor choke.....	0301
KIT, repair, engine oil pump.....	0107		0303
KIT, repair, front axle universal joint.....	1007		0301
KIT, repair, fuel pump.....	0302	LINK, connecting, accelerator pedal.....	0303
KIT, repair, fuel pump bowl.....	0302	LINK, connector, carburetor pump.....	0301
KIT, repair, generator.....	0601	LINK, fuel pump rocker arm.....	0302
KIT, repair, generator current regulator.....	0601B	LINK, hand brake cable crank.....	1201

ALPHABETICAL INDEX (Cont'd)

Item	Group
LINK, hand brake cam to transfer case	1201
LINK, hand brake operating lever	1201-1
LINK, hand brake retracting spring	1201-1
LOCK, engine valve spring retainer	0105
LOCK, glove compartment door, assembly	1809A
LOCK, spring shackle bolt, assembly	1602
LOCK, tool compartment lid, assembly	1817
LOOP, footman	1800A
LOOP, hold-down, windshield	2201A
	1811
M	
MANIFOLD, engine intake and exhaust, assembly	0108
MANIFOLD, exhaust, engine, assembly	0108
MANIFOLD, intake, engine, assembly	0108
MEMBER, cross, frame, assembly	1500
MIRROR, rear view, assembly	2202
MOTOR, cranking, assembly	0602
	0602-1
MOTOR, vacuum, windshield wiper	1811D-1
MUFFLER, assembly	0401
MUFFLER, deep mud, assembly	0401-1
N	
NECK, fuel tank well drain hole	0300
NIPPLE, rubber, marker lamp	0607D
NOZZLE, carburetor	0301
NUT, adjusting, hand brake band	1201
NUT, adjusting, horn	0609
NUT, air compressor cylinder head stud	2208
NUT, battery hold-down	0610A
NUT, brake tube	1209C
NUT, cap, air compressor cylinder	2208
NUT, carburetor tube clamp	0301
NUT, clinch, cowl side panel for front fender	1802A
NUT, clinch, dash to frame brace; fender brace to frame	1500
NUT, clinch, drain plug in floor	1802A
NUT, clinch, front floor rear cross sill, assembly	1802A
NUT, clinch, regulator to apron	1702
NUT, clinch, splasher apron to frame	1500
NUT, clinch, transmission cover	1802A
NUT, clinch, transmission cover and accelerator pedal	1802A
NUT, engine crankshaft, assembly	0102
NUT, engine valve tappet adjusting screw	0105A
NUT, generator regulator adjusting screw	0601B
NUT, glove compartment door lock	1809A
NUT, hand brake operating lever	1201-1
NUT, inverted flared tube, windshield wiper tube to manifold	1811D-1
NUT, lock, engine clutch lever adjusting screw	0202
NUT, lock, hand brake operating lever nut	1201-1
NUT, mounting, ignition switch	0604C
NUT, socket terminal	0606F
NUT, spare wheel to carrier stud	1505
NUT, starting switch terminal	0606
NUT, terminal clamp bolt	0610B
NUT, thumb, fuel pump strainer	0302
NUT, transmission mainshaft	0802
NUT, wheel bearing	1301A
NUT, wheel divided rim bolt	1301
NUT, wheel hub bolt	1302A
NUT, windshield frame screw	1811

Item	Group
NUT, wing, crank retaining bracket	1802A
NUT, wing, headlight mounting bracket bolt	0607
NUT, wing, on rear seat for tire pump	1804
O	
OIL SEAL, axle shaft	1007
	1102
OIL SEAL, differential drive pinion bearing	1003
	1104
OIL SEAL, felt, steering knuckle	1006
OIL SEAL generator commutator end	0601-2
OIL SEAL, generator drive end bearing	0601-2
OIL SEAL, steering gear lever shaft	1403A
OIL SEAL, steering knuckle, assembly	1006
OIL SEAL, transfer case output shaft front and rear bearing cap	0803
OIL SEAL, transfer case shift rod	0805
OIL SEAL, transmission main drive gear bearing retainer	0703
OIL SEAL, transmission main shaft	0704
OIL SEAL, wheel bearing	1301B
OIL SEAL SET, transfer case	0800
OILER, distributor shaft	0603
OILER, generator	0601
OUTRIGGER, body, rear	1500

P	
PACKING, engine crankshaft	0102A
PACKING, engine crankshaft rear bearing cap	0102A
PACKING, transmission gearshift lever housing	0706A
PAD, brake pedal, assembly	1204
PAD, crash, front seat body side, assembly	1804A
PAD, dash panel	1804A
PAD, engine clutch control tube	0204A
PAD, engine clutch pedal, assembly	0204
PAD, mounting, marker lamp	0607D
PADDING, windshield glass	1811B
PAN, front floor	1802A
PAN, oil, engine, assembly	0107A
PAN, rear floor	1802A
PANEL, body	1802A
PANEL, cowl	1802A
PANEL, dash, assembly	1802A
	1809
PANEL, front seat body side crash pad, assembly	1804
PANEL, instrument, assembly	1809
PANEL, rear wheel house	1802A
PANEL, windshield	1811
PAULIN, deck top, assembly	2201
PEDAL, accelerator, assembly	0303
PEDAL, brake, assembly	1204
PEDAL, engine clutch	0204
PIECE, pole, cranking motor	0602
PIECE, pole, generator	0601
PIECE, windshield frame upper cross, assembly	1811
PILLAR, cowl	1802
PILOT, front axle universal joint	1007
PIN, air compressor piston	2208
PIN, brake shoe anchor	1203
PIN, carburetor float lever	0301
PIN, carburetor intake needle	0301
PIN, carburetor metering rod	0301
PIN, clevis, hand brake cable crank to link and link to cam	1201

ALPHABETICAL INDEX (Cont'd)

Item	Group	Item	Group
PIN, clevis, hand brake cam to link on transfer case	1201	PLATE, muffler support insulator	0401
PIN, clevis, hand brake ratchet tube	1201-1	PLATE, name	2203
PIN, clevis, headlight support bolt	0607	PLATE, pressure, engine clutch, assembly	0202
PIN, distributor cap spring hinge	0603	PLATE, reinforcement, frame	1500
PIN, dowel, cranking motor intermediate bearing	0602	PLATE, rifle holder retainer clamp handle	1820
PIN, dowel, crankshaft bearing	0102A	PLATE, shifting	2203
PIN, dowel, flywheel to crankshaft	0109	PLATE, shifting, transmission main shaft synchronizer	0704
PIN, dowel generator commutator end head	0601	PLATE, skid, exhaust pipe guard	1500
PIN, dowel, generator end plate	0601-2	PLATE, spring clip, assembly	1602
PIN, drive, winch drive shaft hub	2001	PLATE, stop, brake master cylinder piston	1205
PIN, engine piston	0103B	PLATE, tapping, ax clamp	1802A
PIN, front axle universal joint pilot	1007	PLATE, tapping, driver seat	1802A
PIN, fuel pump rocker arm	0302	PLATE, tapping, glove compartment hinge	1809A
PIN, fulcrum, transmission gearshift lever guide plate	0706A	PLATE, tapping, hood hinge	1802A
PIN, guide, transmission gearshift fork	0706C	PLATE, tapping, radiator surge tank	0501C
PIN, king	1006	PLATE, tapping, shovel clamp	1802A
PIN, lock, differential pinion shaft	1003	PLATE, tapping, windshield clamp catch	1811
	1104	PLUG, adjusting, steering connecting rod ball seat	1401
PIN, lock, king pin	1006	PLUG, body drain hole cover	1802A
PIN, pivot, engine clutch pressure spring lever	0202	PLUG, carburetor idle port rivet	0301
PIN, pivot, transfer case shift lever	0805B	PLUG, carburetor low speed jet and idle well passage, assembly	0301
PIN, steering bell crank shaft	1401	PLUG, carburetor nozzle retainer	0301
PIN, transmission countershaft washer	0704C	PLUG, carburetor pump jet and nozzle passage	0301
PIN, transmission gearshift lever fulcrum ball	0706A	PLUG, carburetor strainer passage assembly	0301
PIN, winch drive shaft thrust washer	2001	PLUG, drain and filler, transmission	0701
PINION, differential	1003	PLUG, drain, axle housing	1001
	1104		1101
PINION, engine oil pump	0107	PLUG, drain, engine oil filter	0107E
PIPE, drain, engine crankshaft rear bearing cap	0102A	PLUG, drain, engine oil pan	0107A
PIPE, exhaust, assembly	0401	PLUG, drain, fuel strainer	0306B
PISTON, air compressor, assembly	2208	PLUG, drain, transfer case	0801
PISTON, brake master cylinder, assembly	1205	PLUG, engine intake manifold	0108
PISTON, brake wheel cylinder, assembly	1207	PLUG, engine oil pump cover	0107
PISTON, engine, assembly	0102A	PLUG, expansion, cylinder block	0101
PISTON, wheel cylinder, assembly	1207	PLUG, expansion, engine camshaft rear bearing	0106A
PIVOT, top bow, assembly	2201A	PLUG, expansion, steering gear housing	1403A
PLATE, back, clincher	2201A	PLUG, feeler, steering arm knuckle	1006
PLATE, backing, front and rear brake, assembly	1203	PLUG, filler, axle housing	1001
PLATE, backing, hand brake, assembly	1201-1		1101
PLATE, brake shoe anchor pin	1203	PLUG, filler, steering gear housing	1403A
PLATE, breaker, distributor, assembly	0603	PLUG, filler, transfer case	0801
PLATE, breaker, dustproof distributor, assembly	0603-1	PLUG, generator commutator end cover	0601-1
PLATE, caution	2203	PLUG, pipe, cylinder block oil hole	0101
PLATE, cranking motor, commutator end assembly	0602	PLUG, pipe, drain, cylinder water jacket	0101
PLATE, disk, engine clutch, assembly	0201	PLUG, pipe, fuel tank drain plug	0300
PLATE, distributor cam and stop	0603	PLUG, rivet, carburetor	0301
PLATE, dustproof distributor cam and stop	0603-1	PLUG, spark, assembly	0604B
PLATE, engine cylinder block to flywheel housing	0109C	PLUG, steering connecting rod ball seat spring	1401
PLATE, engine cylinder block to timing chain cover	0106D	PLUG, transfer case shift rod poppet	0805
PLATE, escutcheon, rotary lighting switch	0606	PLUG, vent, axle housing	1001
PLATE, exhaust pipe extension	0401-1		1101
PLATE, floor seal, dimmer switch	1803	PLUNGER, carburetor pump, assembly	0301
PLATE, front spring clip, assembly	1602	PLUNGER, distributor contact spring	0603
PLATE, generator commutator end, assembly	0601-2	PLUNGER, engine oil pump relief	0107
PLATE, generator drive end, assembly	0601-2	PLUNGER, thrust, engine camshaft	0106
PLATE, guide, transmission gearshift lever	0706A	PLUNGER, transmission gearshift rail interlock	0706B
PLATE, instruction, combat wheels	1301	POINT SET, distributor	0603
PLATE, lock, transfer case intermediate shaft	0804	POST, generator armature terminal	0601
PLATE, lock, transmission countershaft and reverse idler shaft	0704C	POST, generator field, terminal	0601
PLATE, mounting, machine gun	1500	POST, terminal, cranking motor	0602
		POST, terminal, dustproof distributor base, assembly	0603-1

ALPHABETICAL INDEX (Cont'd)

Item	Group	Item	Group
PROTECTOR, fuel gage, tank unit.....	0300A	RING, horn wire contact, assembly.....	0609B
PULLEY, air compressor flywheel, assembly.....	2208	RING, lock, wheel bead.....	1301
PULLEY, crankshaft.....	2208	RING, mounting, blackout driving light lamp-unit.....	0607D
PULLEY, drive, generator, assembly.....	0601	RING, retaining, air compressor piston pin.....	2208
PULLEY, engine crankshaft.....	0102	RING, retaining, distributor cam.....	0603
PULLEY, fan and water pump.....	0503A	RING, retaining, engine timing chain cover packing.....	0106D
PULLEY, generator, assembly.....	0601-2	RING, retaining, steering gear worm ball.....	1403A
PUMP, fuel, assembly.....	0302	RING, take-up, cranking motor, Bendix drive.....	0602
PUMP, oil, engine, assembly.....	0107	RING, windshield thumb screw chain.....	1811
PUMP, water, assembly.....	0503	RING SET, engine piston.....	0103A
R		RISER, front to rear floor pan, assembly.....	1802A
RACE, front axle universal joint.....	1007	RIVET, blade to arm.....	1811D
RAIL, shift, capstan winch.....	2003	RIVET, transmission gearshift lever housing.....	0706A
RAIL, shift, transmission low speed and reverse gear.....	0706B	ROD, brace, radiator core.....	0501
RAIL, shift, transmission second and high speed gear.....	0706B	ROD, connecting, air compressor.....	2208
REFLECTOR, reflex, assembly.....	2203A	ROD, connecting, carburetor throttle.....	0301
REGULATOR, generator, assembly.....	0601B-1	ROD, connecting, engine, assembly.....	0104
RESISTANCE, carbon, generator regulator.....	0601B	ROD, connecting, steering, assembly.....	1401
RESISTANCE, generator regulator, carbon.....	0601B-1	ROD, engine clutch release lever.....	0204A
RESISTOR, blackout driving light.....	0606E	ROD, metering, carburetor.....	0301
REST, foot, accelerator.....	0303	ROD, push, brake master cylinder.....	1205
REST, foot, rear floor, assembly.....	1802A	ROD, shift, capstan winch.....	2003
RETAINER, axle shaft, front axle universal joint.....	1007	ROD, shift, transfer case.....	0805
RETAINER, brake master cylinder check valve cup.....	1205	ROD, throttle, accelerator.....	0303
RETAINER, carburetor spring.....	0301	ROD, tie, steering knuckle, assembly.....	1402
RETAINER, dust shield.....	0606F	ROPE.....	2002
RETAINER, engine clutch control tube spring.....	0204A	ROTOR, distributor.....	0603
RETAINER, engine crank.....	1802A	S	
RETAINER, engine crankshaft front packing.....	0102A	SCREEN, filtering fuel pump, assembly.....	0302
RETAINER, engine oil pump oil relief spring.....	0107	SCREW, adjusting, engine clutch lever.....	0202
RETAINER, engine valve spring.....	0105	SCREW, adjusting, engine valve tappet.....	0105A
RETAINER, generator commutator end head felt washer.....	0601	SCREW, adjusting, generator regulator.....	0601B
RETAINER, generator commutator end oil seal.....	0601-2	SCREW, adjusting, hand brake.....	1201-1
RETAINER, generator drive end bearing.....	0601	SCREW, adjusting, steering gear lever shaft.....	1403A
RETAINER, generator drive end bearing grease.....	0601-2	SCREW, adjustment, carburetor idler.....	0301
RETAINER, generator drive end bearing oil seal.....	0601-2	SCREW, adjustment, carburetor throttle lever.....	0301
RETAINER, generator drive end head felt washer.....	0601	SCREW, attaching, carburetor air horn.....	0301
RETAINER, headlight mounting bolt.....	0607	SCREW, attaching, fuel strainer cover.....	0306B
RETAINER, pedal shaft, assembly.....	1204	SCREW, blackout driving light ground.....	0607D
RETAINER, propeller shaft universal joint trunnion gasket.....	0902	SCREW, bleeder, brake wheel cylinder.....	1207
RETAINER, radiator guard to fender nut.....	2103	SCREW, carburetor choke lever bracket.....	0301
RETAINER, rear seat pivot tube.....	1804	SCREW, carburetor choke valve.....	0301
RETAINER, spring shackle grease seal.....	1602	SCREW, carburetor tube clamp.....	0301
RETAINER, steering knuckle oil seal.....	1006	SCREW, carburetor wire clamp.....	0301
RETAINER, thermostat.....	0502	SCREW, cranking motor Bendix head spring.....	0602
RETAINER, tire pump foot.....	1804	SCREW, cranking motor Bendix shaft spring.....	0602
RETAINER, tire pump handle.....	1804	SCREW, differential drive gear.....	1003
RETAINER, transmission main drive gear bearing.....	0703	SCREW, differential driven gear.....	1104
RETAINER, windshield hold down catch.....	1811	SCREW, distributor breaker arm.....	0603
RIM, wheel, assembly.....	1301	SCREW, distributor breaker contact.....	0603
RING, blocking, transmission main shaft synchronizer.....	0704	SCREW, dustproof distributor terminal post connector.....	0603-1
RING, brake master cylinder secondary cup.....	1205	SCREW, footman loop hole plug cap.....	1802A
RING, engine piston.....	0103A	SCREW, generator drive end bearing retainer.....	0601
RING, floor, gearshift lever housing cover.....	1803	SCREW, generator field terminal.....	0601-2
RING, floor seal, steering column.....	1803	SCREW, generator ground.....	0601
RING, floor, transmission shift lever grommet.....	1803	SCREW, generator ground terminal.....	0601-2
		SCREW, generator pole piece.....	0601-2
		SCREW, generator regulator terminal.....	0601B
		SCREW, ignition switch terminal.....	0604C
		SCREW, lighting switch terminal.....	0606
		SCREW, lock, transmission gearshift fork.....	0706C
		SCREW, mach., case mounting and lead connecting.....	0601B

ALPHABETICAL INDEX (Cont'd)

Item	Group	Item	Group
SCREW, mach., lead connection and ground connection.....	0601B	SHEATH, ax.....	1802A
SCREW, pivot, windshield adjusting arm.....	1811	SHIELD, air cleaner, assembly.....	0301C
SCREW, thumb, top bow, assembly.....	2201A	SHIELD, brake cylinder, assembly.....	1205
SCREW, windshield bracket.....	1811	SHIELD, dust, propeller shaft flange.....	0902
SCREW, windshield frame.....	1811	SHIELD, dust, steering bell crank bearing.....	1401
SCREW, windshield pivot.....	1811	SHIELD, dust, steering connecting rod dust cover.....	1401
SEAL, air compressor crankshaft bearing sleeve.....	2208	SHIELD, dust, transfer case companion flange and universal joint end yoke.....	0803
SEAL, carburetor air cleaner tube clamp.....	0301C	SHIELD, dust, universal joint end yoke, differential drive pinion shaft.....	1104
SEAL, carburetor and air cleaner horn.....	0301C	SHIELD, fan pulley.....	0503A
SEAL, dust, steering knuckle tie rod.....	1402	SHIELD, fuel tank, driver seat to rear floor.....	0300
SEAL, dustproof distributor breaker plate.....	0603-1	SHIELD, instrument lamp, assembly.....	0605C
SEAL, engine clutch control tube, dust.....	0204A	SHIELD, radiator surge tank, assembly.....	0501C
SEAL, floor, accelerator pedal rod.....	1803	SHIM, adjusting, differential bearing.....	1003
SEAL, floor, brake cylinder inspection cover.....	1803	SHIM, adjusting, differential case bearing.....	1104
SEAL, floor, fuel line hole.....	1803	SHIM, adjusting, differential drive pinion.....	1104
SEAL, floor, gearshift lever housing cover.....	1803	SHIM, adjusting, differential drive pinion bearing.....	1104
SEAL, floor, headlight foot switch.....	1803	SHIM, adjusting, front axle universal joint.....	1007
SEAL, floor, starter switch.....	1803	SHIM, adjusting, king pin bearing.....	1006
SEAL, floor, steering column.....	1803	SHIM, engine crankshaft.....	1219
SEAL, floor, transmission cover.....	1803	SHIM, engine front support insulator.....	0110
SEAL, fuel pump pull rod.....	0302	SHIM, engine oil pump oil relief spring.....	0107
SEAL, fuel pump strainer bowl.....	0302	SHIM, mounting, steering column.....	1405
SEAL, fuel tank stone guard.....	1803	SHIM, radiator core to support bracket.....	0501
SEAL, generator regulator lead and wire.....	0601B	SHIM, steering gear housing upper cover.....	1403A
SEAL, glove compartment door.....	1803	SHIM, steering gear mounting.....	1403A
SEAL, grease, spring shackle.....	1602	SHIM, transfer case output shaft rear bearing cap.....	0801
SEAL, radiator side air deflector.....	1803	SHIM SET, adjusting, front axle universal joint.....	1007
SEAL, radiator side air deflector to radiator.....	1803	SHIM SET, differential case bearing.....	1104
SEAL, radiator top air deflector.....	1803	SHIM SET, differential drive pinion bearing.....	1104
SEAL, radiator top air deflector to radiator.....	1803	SHIM SET, king pin bearing.....	1006
SEAL, steering bell crank shaft bearing.....	1401	SHIM SET, steering gear housing upper cover.....	1403A
SEAL, tool compartment lid.....	1817	SHIM SET, transfer case output shaft rear bearing cap.....	0801
SEAL, water pump, assembly.....	0503	SHOE, brake, assembly.....	1202
SEAL, weather, spark plug cables, distributor end.....	0604A	SHOE, hand brake, assembly.....	1201-1
SEAT, ball, steering connecting rod.....	1401	SILL, cross, front floor pan, assembly.....	1802A
SEAT, brake master cylinder check valve.....	1205	SILL, cross, rear floor pan.....	1802A
SEAT, steering column upper bearing spring.....	1403A	SLEEVE, bearing, air compressor crankshaft.....	2208
SEAT, trimmed, assembly.....	1804C	SLEEVE, compression, cranking motor Bendix drive.....	0602
SHACKLE, torque reaction spring.....	1601C	SLEEVE, speedometer driven gear, transfer case.....	0810
SHAFT, brake pedal, assembly.....	1204	SLEEVE, transmission main shaft second and high speed clutch.....	0704
SHAFT, carburetor throttle, assembly.....	0301	SLINGER, oil, differential drive pinion bearing.....	1104
SHAFT, cranking motor Bendix drive, assembly.....	0602	SLINGER, oil, engine crankshaft.....	0102
SHAFT, cross, accelerator.....	0303	SNAP RING, front axle universal joint shaft retainer.....	1007
SHAFT, differential pinion.....	1104	SNAP RING, propeller shaft universal joint trunnion bearing.....	0902
SHAFT, drive, capstan winch, assembly.....	2001	SNAP RING, steering column.....	1403A
SHAFT, drive, distributor, assembly.....	0603	SNAP RING, transfer case output clutch shaft bearing.....	0803
SHAFT, drive, dustproof distributor, assembly.....	0603-1	SNAP RING, transfer case output shaft.....	0803
SHAFT, engine heat control valve.....	0108C	SNAP RING, transmission main drive gear.....	0703
SHAFT, engine oil pump, assembly.....	0107		
SHAFT, flexible, speedometer drive, assembly.....	2204		
SHAFT, front axle.....	1007		
SHAFT, lever, steering gear, assembly.....	1403A		
SHAFT, main, transmission, assembly.....	0704		
SHAFT, output, transfer case, assembly.....	0803		
SHAFT, propeller, assembly.....	0901		
SHAFT, rear axle.....	1102		
SHAFT, spline, capstan winch.....	2001		
SHAFT, steering bell crank.....	1401		
SHAFT, transfer case, intermediate.....	0804		
SHAFT, transfer case output clutch.....	0803		
SHAFT, transmission reverse idler gear.....	0704C		
SHAFT and WORM, steering gear, assembly.....	1403A		

ALPHABETICAL INDEX (Cont'd)

Item	Group	Item	Group
SNAP RING, transmission main drive gear bearing	0703	SPRING, front, assembly	1601
SNAP RING, transmission main drive gear pilot roller bearing	0703	SPRING, front seat back, assembly	1804A
SNAP RING, transmission main shaft second and high speed clutch hub	0704	SPRING, front seat body side crash pad, assembly	1804A
SNUBBER, transfer case support insulator	0809	SPRING, front seat cushion, assembly	1804A
SOCKET, accelerator pedal link	0303	SPRING, fuel pump diaphragm	0302
SOCKET, curtain fastener	2201A	SPRING, fuel pump rocker arm	0302
SOCKET, instrument lamp, assembly	1605C	SPRING, fuel strainer unit	0306B
SOCKET, trailer electric coupling, assembly	0606F	SPRING, generator brace	0601A
SPACER, axle bumper	1601B	SPRING, generator brush	0601
SPACER, capstan winch drive	2001	SPRING, generator current regulator and voltage regulator armature	0601B
SPACER, differential drive pinion bearing	1003	SPRING, generator regulator cut-out relay	0601B
	1104	SPRING, hand brake band anchor clip bolt	1201
SPACER, engine crankshaft sprocket	0106C	SPRING, hand brake handle ratchet	1201
SPACER, frame cross member, intermediate front bracket	1500	SPRING, hand brake operating lever spacer	1201-1
	1500	SPRING, hand brake ratchet tube	1201-1
	2101	SPRING, horn button	0609B
SPACER, generator brace	0601A-1	SPRING, poppet, capstan winch	2001
SPACER, generator end plate	0601-2	SPRING, pressure, engine clutch	0202
SPACER, generator shaft	0601	SPRING, rear, assembly	1601A
SPACER, hand brake conduit clamp	1201-1	SPRING, releasing, hand brake band	1201
SPACER, mounting, generator front end plate	0601A-1	SPRING, retaining, rear seat frame	1804
SPACER, mounting plate to frame	2001	SPRING, retaining, rifle holder, assembly	1820
SPACER, spare wheel support	1505	SPRING, retaining, water pump bearing	0503
SPACER, steering gear to frame bolt	1403A	SPRING, retracting, accelerator	0303
SPACER, thrust, cranking motor bearing	0602	SPRING, retracting, engine clutch pedal	0204
SPACER, transmission countershaft gear bushing	0704C	SPRING, retracting, hand brake cam	1201
SPACER, transmission main shaft bearing	0704	SPRING, return, brake master cylinder piston, assembly	1205
SPACER, windshield adjusting arm	1811	SPRING, return, brake shoe	1203
SPEEDOMETER, assembly	2204	SPRING, return, engine clutch pressure plate	0202
SPINDLE, front wheel, assembly	1006	SPRING, return, hand brake shoe	1201-1
SPRING, accelerator cross shaft	0303	SPRING, rifle holder retainer handle cam	1820
SPRING, accelerator pedal hinge	0303	SPRING, seat back, assembly	1804A
SPRING, air cleaner toggle	0301C	SPRING, seat cushion, assembly	1804A
SPRING, air compressor charge valve	2208	SPRING, steering column upper bearing	1403A
SPRING, air compressor latch	2208	SPRING, steering connecting rod ball seat	1401
SPRING, brake wheel cylinder cup	1207	SPRING, steering knuckle tie rod socket stud	1402
SPRING, carburetor choke pull back	0301	SPRING, support, transmission gearshift lever	0706A
SPRING, carburetor connector link	0301	SPRING, torque reaction, assembly	1601C
SPRING, carburetor connector rod	0301	SPRING, transfer case shift lever	0805B
SPRING, carburetor idle adjustment screw	0301	SPRING, transfer case shift rod poppet	0805
SPRING, carburetor intake needle	0301	SPRING, transmission gearshift lever guide plate	0706A
SPRING, carburetor metering rod	0301	SPRING, transmission gearshift rail poppet ball	0706B
SPRING, carburetor pin	0301	SPRING, transmission main shaft synchronizer	0704
SPRING, carburetor plunger	0301	SPRING, water pump seal	0503
SPRING, carburetor pump	0301	SPRING SET, distributor governor weight	0603
SPRING, carburetor pump arm	0301	SPRING SET, dustproof distributor governor weight	0603-1
SPRING, cranking motor Bendix drive	0602	SPROCKET, engine camshaft	0106C
SPRING, cranking motor brush	0602	SPROCKET, engine crankshaft	0106C
SPRING, distributor, antirattle	0603	STOP, engine heat control valve spring	0108C
SPRING, distributor breaker arm	0603	STOP, generator commutator end bearing	0601-2
SPRING, distributor cap	0603	STOP, throttle wire, assembly	0303A
SPRING, distributor contact	0603	STRAINER, air intake, air compressor, assembly	2208
SPRING, engine camshaft thrust plunger	0106	STRAINER, body side panel to wheel house	1802A
SPRING, engine clutch control tube	0204A	STRAINER, carburetor pump check	0301
SPRING, engine clutch release bearing carrier	0203	STRAINER, fuel, assembly	0306B
SPRING, engine heat control valve	0108C	STRAINER-UNIT, fuel, assembly	0306B
SPRING, engine oil filter cover bolt	0107E	STRAP, battery frame to front fender	0610A
SPRING, engine oil pump oil relief plunger	0107	STRAP, battery ground	0610B
SPRING, engine valve	0105	STRAP, choke and throttle controls and oil gage to dash	2603
SPRING, engine valve tappet clearance	0105	STRAP, cowl to hood	2603
SPRING, friction, distributor shaft	0603		

ALPHABETICAL INDEX (Cont'd)

Item	Group	Item	Group
STRAP, cylinder head to dash.....	2603	TERMINAL, battery cable.....	0610B
STRAP, engine front plate to frame.....	2603	TERMINAL, battery, positive cable clamp.....	0610B
STRAP, exhaust pipe ground connection to frame..	2603	TERMINAL, battery to cranking motor switch....	0610B-1
STRAP, gas line to dash.....	2603	TERMINAL, coil cable.....	0604A
STRAP, generator mounting bolt to starter motor bracket.....	2603	TERMINAL, cranking motor field coil.....	0602
STRAP, generator regulator ground.....	2603	TERMINAL, generator armature lead.....	0601
STRAP, hand brake cable, speedometer cable, heat indicator cable to dash.....	2603	TERMINAL, generator field.....	0601-1
STRAP, hold-down, assembly.....	2201A	TERMINAL, negative, battery cable.....	0610B-1
STRAP, hold-down, fuel tank, assembly.....	0300	TERMINAL, positive, battery cable.....	0610B
STRAP, hood to brush guard.....	2603	TERMINAL, spark plug cable.....	0604A
STRAP, hood to cowl.....	2603	THERMOSTAT, assembly.....	0502
STRAP, ignition coil to cylinder block.....	2603	TIRE, pneumatic.....	2306
STRAP, lock, differential drive gear screw.....	1003 1104	TRANSMISSION, assembly.....	0700
STRAP, mounting, radiator surge tank.....	0501C	TUBE, air cleaner, assembly.....	0301C
STRAP, muffler support.....	0401	TUBE, brake axle tee to brake hose, assembly....	1209C
STRAP, radiator stud to frame.....	2603	TUBE, brake axle tee to brake wheel cylinder....	1209C
STRAP, rear engine support to frame cross member stud.....	2603	TUBE, brake axle tee to wheel cylinder brake....	1209C
STRAP, safety, assembly.....	1804	TUBE, brake master cylinder to hose, assembly....	1209C
STRAP, spare gasoline can, assembly.....	1817A	TUBE, brake wheel cylinder to axle hose, assembly	1209C
STRAP, support, exhaust pipe extension clamp....	0401-1	TUBE, connecting, radiator water inlet.....	0505
STRAP, transfer case to body floor stud.....	2603	TUBE, cross, frame, front.....	1500
STRAP, top lock, assembly.....	2201A	TUBE, engine crankcase ventilator valve, assembly	0107N
STRAP, top roll, assembly.....	2201A	TUBE, engine oil filler, assembly.....	0107G
STRIKER, glove compartment door lock.....	1809A	TUBE, engine oil filter inlet, assembly.....	0107J
STRIKER, tool compartment lid lock.....	1817	TUBE, flexible connection to fuel pump, assembly	0304
STRIP, pressure, steering knuckle oil seal.....	1006	TUBE, flexible oil filter outlet and oil gage tube...	0107J
STUD, air compressor cylinder, assembly.....	2208	TUBE, fuel filter to flexible connection, assembly	0304
STUD, air compressor cylinder head.....	0204A	TUBE, fuel pump to carburetor, assembly.....	0304
STUD, ball, engine clutch control.....	0301A	TUBE, fuel tank to filter, assembly.....	0304
STUD, carburetor to manifold.....	0106	TUBE, fuel tank to flexible connection.....	0304
SUPPORT, battery, assembly.....	1500	TUBE, oil gage, assembly.....	0107J
SUPPORT, cranking motor to block.....	0602	TUBE, propeller shaft, assembly.....	0901
SUPPORT, engine oil strainer float.....	0107A-1	TUBE, radiator surge tank.....	0501C
SUPPORT, generator, assembly.....	0601A	TUBE, speedometer drive, assembly.....	2204
SUPPORT, hand brake ratchet tube bracket.....	1201	TUBE, steering knuckle tie rod.....	1402
SUPPORT, headlight, assembly.....	0607	TUBING, windshield wiper.....	1811D-1
SUPPORT, rear body to frame.....	1802A	TUBING, windshield wiper, intake manifold, assembly.....	1811D-1
SUPPORT, rear seat frame to wheel house.....	1804		
SUPPORT, steering column.....	1405	U	
SUPPRESSOR, ignition.....	2603	U-BOLT, propeller shaft universal joint bearing...	0902
SWITCH, blackout driving light, assembly.....	0606	U-BOLT, spring shackle.....	1602
SWITCH, dimmer, headlight, foot, assembly....	0606	UNION, flexible connection to tube assembly.....	0107J
SWITCH, ignition, assembly.....	0604C	UNION, inverted flared tube connector.....	1811D-1
SWITCH, instrument panel light.....	0606		
SWITCH, lighting and blackout driving light.....	0606	V	
SWITCH, lighting, assembly.....	0606	VALVE, carburetor choke, assembly.....	0301
SWITCH, starting.....	0606	VALVE, carburetor needle, assembly.....	0301
SWITCH, stop light.....	0606	VALVE, carburetor, throttle.....	0301
SYNCHRONIZER, transmission main shaft, assembly.....	0704	VALVE, check, brake master cylinder, assembly..	1205
		VALVE, discharge, air compressor.....	2208
T		VALVE, engine crankcase ventilator, assembly....	0107N
TANK, fuel, assembly.....	0300	VALVE, engine heat control.....	0108C
TANK, supply, brake master cylinder.....	1205	VALVE, exhaust, engine.....	0105
TANK, surge, radiator, assembly.....	0501C	VALVE, fuel pump, assembly.....	0302
TAPPET, engine valve, assembly.....	0105A	VALVE, intake, engine.....	0105
TEE, air compressor.....	2208		
TEE, brake tube axle.....	1209C	W	
TEE, windshield wiper motor connecting.....	1811D-1	WASHER, adjusting, blackout driving light.....	0607D
		WASHER, anti-rattle, top bow pivot.....	2201A
		WASHER, curtain eyelet fastener.....	2201A
		WASHER, distributor breaker arm screw.....	0603
		WASHER, dustproof distributor plate.....	0603-1

ALPHABETICAL INDEX (Cont'd)

Item	Group	Item	Group
WASHER, engine clutch lever adjusting screw.....	0202	WASHER, thrust, distributor advance arm.....	0603
WASHER, engine clutch pedal shaft.....	0204	WASHER, thrust, distributor drive shaft.....	0603
WASHER, engine heat control valve spring.....	0108C	WASHER, thrust, engine camshaft.....	0102
WASHER, fan pulley shield.....	0503A		0106
WASHER, fan pulley shield retaining bolt.....	0503A	WASHER, thrust, front axle shaft to housing.....	1007
WASHER, fuel pump diaphragm spring seat.....	0302	WASHER, thrust, transfer case intermediate shaft	
WASHER, fuel pump rocker arm pin.....	0302	gear.....	0804
WASHER, generator armature terminal.....	0601	WASHER, thrust, transfer case output shaft.....	0803
WASHER, generator commutator end.....	0601	WASHER, thrust, transmission countershaft.....	0704C
WASHER, generator drive end head.....	0601	WASHER, top bow, front pivot.....	2201A
WASHER, horn adjusting nut.....	0609	WASHER, transmission gearshift lever housing cap.....	0706A
WASHER, horn button contact.....	0609B	WASHER, transmission mainshaft nut.....	0802
WASHER, insulating, cranking motor terminal post.....	0602	WASHER, water pump seal.....	0503
WASHER, insulating, cutout relay stationary		WASHER, wheel bearing.....	1301A
bracket.....	0601B	WASHER, windshield clamp bracket screw.....	1811
WASHER, insulating, dustproof distributor.....	0603-1	WASHER, windshield pivot spring.....	1811
WASHER, insulating, generator armature terminal.....	0601	WEATHERSTRIP, windshield.....	1811B
WASHER, insulating, generator field terminal.....	0601	WEATHERSTRIP, windshield frame to cowl.....	1811B
WASHER, lock, base mounting and ground screw		WEBBING, hood top windshield bumper.....	1704
and lead connection.....	0601B	WEIGHT, distributor governor, assembly.....	0603
WASHER, lock, cranking motor Bendix drive spring		WEIGHT, governor dustproof distributor, assembly.....	0603-1
screw.....	0602	WHEEL, air compressor clutch.....	2208
WASHER, lock, distributor breaker contact screw.....	0603	WHEEL, assembly.....	1301
WASHER, lock, ignition switch terminal.....	0604C	WHEEL, steering, assembly.....	1403
WASHER, lock, wheel bearing nut.....	1301A	WICK, oil, generator commutator end.....	0601-1
WASHER, oil retaining, transmission main shaft.....	0704	WICK, oiling, distributor cam.....	0603
WASHER, plain, base mounting and ground screw		WINCH, capstan, assembly.....	2000
and lead connection.....	0601B	WINDSHIELD, assembly.....	1811
WASHER, seal, propeller shaft sleeve yoke.....	0902	WIPER, windshield, assembly.....	1811D
WASHER, shock absorber mounting pin.....	1603	WIPER SET, windshield.....	1811D
WASHER, side curtain fastener.....	2201F	WIRE, ground, blackout driving light, assembly.....	0607D
WASHER, spacer, distributor cam spring.....	0603	WIRE, headlight, assembly.....	0607
WASHER, spring, windshield adjusting arm.....	1811	WIRE, lock, piston stop, brake master cylinder.....	1205
WASHER, steering, bell crank shaft.....	1401	WIRE, lock, transfer case shift fork.....	0805
WASHER, steering gear—slotted hole.....	1403A		
WASHER, terminal to block screw.....	0606E		
WASHER, thrust, capstan winch.....	2001		
WASHER, thrust, cranking motor armature,			
commutator.....	0602		
WASHER, thrust, differential pinion.....	1003		
	1104		
WASHER, thrust, differential side gear.....	1003		
	1104		

Y

YOKE, adjustable, engine clutch control cable....	0203
YOKE, end, universal joint, differential drive pinion	1003
shaft, assembly.....	1104
YOKE, end, universal joint, transfer case.....	0803
YOKE, flange, propeller shaft.....	0902
YOKE, sleeve, propeller shaft, assembly.....	0902

PART NUMBER INDEX—ORDNANCE

Number	Group	Number	Group	Number	Group
A7044072.....	0101A	C7044170.....	2208	504420.....	0607A
A7044164.....	0505	111618.....	0505	504423.....	0607A
A7044173.....	1505	116120.....	2208	7044051.....	2208
B7044154.....	1505	123208.....	2208	7044114.....	2208
B7044172.....	2208	131300.....	2208	7044168.....	2208
B7044232.....	0810	500903.....	0610	7044212.....	2208
C7044153.....	0101A	504406.....	0608	7044236.....	2208
C7044165.....	0102	504413.....	0608	7044237.....	2208
C7044167.....	1505	504417.....	0607A	7044238.....	2208

PART NUMBER INDEX—MANUFACTURERS'

Manufacturers' and Vendors' part numbers in this index are arranged in numerical order without regard to Manufacturers' symbols, or letters and dashes within the part number. For example, WG-T-84J-29 is filed numerically as if it were 8429.

Number	Group	Number	Group	* Number	Group
CNC-O.....	2201A	AL-GAA-35.....	{ 0601B	AL-EB-108.....	0602
SP-LW-1.....	0805		{ 0601B-1	AL-VRA-109.....	0601B
SP-1-W.....	1201-1	AL-MU-37.....	0602	SP-112.....	{ 1003
AL-MZ-S2.....	0602	AL-GBY-38A.....	0601		{ 1104
AL-AN-7.....	0604A	AL-MZ-38A.....	0602	SP-113.....	{ 1003
AL-DH-7.....	0601	AL-DA-39.....	0601		{ 1104
AL-IAD-7.....	0603-1	AL-MU-39.....	0602	SP-S-114.....	{ 1003
AL-IAD-8.....	0603-1	AL-GAL-44.....	0601		{ 1103
AL-IGL-8.....	0603-1	AL-GEB-44.....	0601	AL-IGC-117.....	0603
AL-IGL-9.....	0603-1	AL-EBA-46.....	0602	AL-KIT-119.....	0601-1
AL-IAD-10.....	0603-1	AL-VRA-46.....	0601B	AL-KIT-121.....	0603-1
AL-KIT-10A.....	0601	AL-MAK-49.....	0601-1	SP-122-D.....	0801
AL-IAD-12.....	0603-1	AL-VRA-50.....	{ 0601B	AL-GCE-125.....	0601
AL-MZ-12.....	0602		{ 0601B-1	SP-12-B-5.....	1201
CNC-12.....	2201A	CNC-50.....	2201F	SOL-EV-128.....	2603
AL-KIT-13.....	0601B	AL-MZ-51.....	0602	SPR-JX-131.....	2603
AL-MU-14.....	0602	AL-VRA-51.....	0601B	AL-GAG-138.....	0601B
SP-14-W.....	1201-1	AL-TC-51A.....	0601B-1	WH-145-A.....	{ 0101
AL-VRA-15.....	{ 0601B	AL-TC-51L.....	0601B-1		{ 0501
	{ 0601B-1	AL-TC-51N.....	0601B	SP-14-B-6.....	1201
AL-KIT-16.....	0601B	AL-TC-51S.....	0601B-1	WO-A-146.....	0110
AL-MZ-16.....	0602	AL-TC-51U.....	0601B	WO-A-147.....	0809
AL-VRA-16.....	{ 0601B	AL-VRA-52.....	0601B	SP-153-SP.....	1201
	{ 0601B-1	AL-GCE-53.....	0601	AL-X-156.....	0601
AL-VRA-17.....	{ 0601B	AL-GCE-54.....	0601	TP-16MN8.....	1402
	{ 0601B-1	AL-MU-54.....	0602	WO-A-169.....	1603
SPR-JX-17.....	2603	AL-GEB-58.....	0601	WO-A-170.....	1603
AL-MZ-19.....	0602	CNC-58.....	2201A	SP-S-171.....	{ 1003
AL-MN-21.....	0601	SP-S-58.....	{ 1003		{ 1104
AL-DA-22.....	0601		{ 1104	AL-IGC-175.....	0603
AL-DK-23.....	0601	SP-58-J.....	1201-1	WO-A-176.....	0204A
AL-VRA-23.....	0601B-1	SP-S-59.....	{ 1003	WO-A-177.....	0204A
AL-GCE-24.....	0601		{ 1104	WO-A-178.....	0204A
AL-KIT-24.....	0602	AL-DA-60.....	0601	WO-A-180.....	0204
AL-GBJ-25.....	0601	CNC-60.....	2201F	WO-A-181.....	0204A
AL-GCT-25.....	0601	HLH-T-60-B.....	1502	WO-A-183.....	1205
AL-GCY-25.....	0601	AL-GBW-66.....	0601	WO-A-185.....	1500
AL-KIT-25.....	0602	AL-SPK-66.....	2204	BA-B-194.....	1811
AL-GC-26.....	0601	AL-BRA-67.....	0601B	AL-X-195.....	{ 0601B
AL-KIT-26.....	0602	AL-GBW-67.....	0601		{ 0601B-1
AL-VRH-26.....	0601B	AL-GBW-69.....	0601-1	AL-X-196.....	{ 0601B
AL-GEB-27.....	0601	AL-IGT-69.....	0603		{ 0603
AL-KIT-27.....	0601B-1	AL-GBW-72.....	0601-1	AL-IGB-199.....	0603
AL-IGH-28.....	0603	AL-GBW-73.....	0601-1	DT-CHC-201.....	2603
AL-KIT-28.....	0601B-1	SP-S-74.....	{ 1003	AL-IGB-202S.....	0603
AL-MU-28.....	0602		{ 1104	FB-203.....	0601
AL-GEB-29.....	0601	SP-S-75.....	{ 1003	MRC-206.....	0803
AL-KIT-29.....	0601B-1		{ 1104	AL-SW-213.....	0603
AL-MZ-29.....	0602	AL-VRA-76.....	0601B	AL-TSR-2-15.....	0610
AL-IGP-30.....	0603	AL-MG-77A.....	0602	TSE-215-B.....	0107A-1
AL-MZ-30A.....	0602	AL-GT-78.....	0601	SP-223-V.....	1201-1
AL-GAU-31.....	0601	AL-GBF-79.....	0601-1	WO-A-227.....	1603
AL-GEG-31.....	0601	AL-VRA-84.....	{ 0601B	SP-232-SP.....	1201
AL-GEW-31.....	0601		{ 0601B-1	SP-238-R.....	1201
AL-MAB-31.....	0602	AL-MAB-88.....	0602	WO-A-281.....	0301C
AL-MU-31.....	0602	AL-IG-90.....	0603	WG-AS2-T-84-J.....	0700
AL-GAA-32.....	0601	AL-IG-94.....	0604A	CAR-2-89.....	0301
AL-IGS-32.....	0603	AL-GAR-98A.....	0601-1	AL-X-295.....	0601
AL-MZ-32.....	0602	CNC-98.....	2201A	CB-CB-300.....	0607
AL-GBJ-32A.....	0601	AL-IGS-99.....	0603	WO-A-302.....	0609B
AL-GEG-33.....	0601-1	SOL-EV-103.....	2603	MRC-307.....	0704
AL-GBW-34.....	0601	AL-IGS-104.....	0603	CN-310-D.....	0102A

PART NUMBER INDEX—MANUFACTURERS (Cont'd)

Number	Group	Number	Group	Number	Group
AL-IGB-350-S.....	0603-1	TA-OP-528.....	1817	WO-A-745.....	1403A
SP-363-SP.....	0805B	WO-A-534.....	1500	WO-A-747.....	0609B
RMC-A-365.....	0105	AL-X-535.....	0601B	WO-A-750.....	0609B
RMC-A-366.....	0105	WO-A-535.....	1404	WO-A-751.....	0609B
SP-373-J.....	1201	SP-S535-V.....	1201-1	WO-A-752.....	0609B
SP-3-Q-74.....	1201	WO-A-538.....	0604B	WO-A-754.....	1203
SP-3-Q-76.....	1201	CAR-539S.....	0301	WO-A-760.....	1007
AN-S-384.....	1811	WO-A-542.....	0110	WO-A-760.....	1102
DM-398.....	0606	WO-A-544.....	1500	WO-A-778.....	1000
WO-A-405.....	0204	WO-A-547.....	1500	WO-A-778.....	1007
WO-A-410.....	0704	WO-A-548.....	1500	HP-779.....	1603
WO-A-415.....	1500	WO-A-549.....	1500	WO-A-779.....	1000
WO-A-416.....	1500	WO-A-556.....	1205	WO-A-779.....	1007
SP-417-J.....	1201-1	WO-A-557.....	1205	WO-A-779.....	1100
WO-A-418.....	1500	WO-A-561.....	1209B	WO-A-779.....	1102
SP-418-J.....	1201-1	WO-A-562.....	1209B	SP-S-780.....	1001
WO-A-419.....	1500	WO-A-568.....	1602	SP-S-780.....	1101
WO-A-420.....	1500	WO-A-571.....	1602	WO-A-780.....	1007
WO-A-421.....	1500	WO-A-572.....	1602	WO-A-780.....	1001
SP-4-B-26.....	1201	WO-A-574.....	1602	WO-A-781.....	1101
SP-433-D.....	0805B	WO-A-575.....	1602	WO-A-781.....	1000
WO-A-439.....	0109C	AL-IG-575-A.....	0603	WO-A-781.....	1001
WO-A-445.....	1100	WO-A-592.....	0505	WO-A-782.....	1001
WO-A-447.....	0503A	WO-A-593.....	1502	WO-A-782.....	1100
WO-A-450.....	1203	AN-X-598.....	1811	WO-A-782.....	1101
WO-A-463.....	0301C	LO-S-FC-602.....	1205	WO-A-784.....	1003
WO-A-465.....	1301	LO-S-FC-603.....	1205	WO-A-784.....	1104
WO-A-472.....	1302	WO-A-612.....	1601	WO-A-785.....	1003
WO-A-473.....	1302A	WO-A-613.....	1601	WO-A-785.....	1104
WO-A-474.....	1302A	WO-A-614.....	1601A	WO-A-786.....	1003
WO-A-475.....	1302A	SP-6-B-14.....	1201-1	WO-A-786.....	1104
WO-A-476.....	1302A	WC-A-619.....	1401	WO-A-787.....	1003
WO-A-476.....	1505	WO-A-621.....	1401	WO-A-787.....	1104
SP-477W.....	0801	WO-A-622.....	1401	WO-A-788.....	1003
WO-A-481.....	1601B	WO-A-623.....	1401	WO-A-788.....	1104
AL-SP-484.....	0601	TP-6MN27.....	1402	WO-A-789.....	1003
WO-A-484.....	1500	WO-A-630.....	1209C	WO-A-789.....	1104
AL-SP-484A.....	0601	WO-A-631.....	1209C	WO-A-792.....	1003
WO-A-485.....	1500	WO-A-633.....	1404	WO-A-792.....	1104
AL-X-489.....	0601	WO-A-634.....	0609B	WO-A-793.....	1003
AL-X-490.....	0603	SP-634-D.....	0801	WO-A-793.....	1102
WO-A-490.....	0902	WO-A-635.....	1405	WO-A-794.....	1003
WO-A-490.....	1204	WO-A-637.....	1500	WO-A-794.....	1104
WO-A-493.....	1500	SP-S-638.....	1003	WO-A-795.....	1003
WO-A-495.....	1204	SP-S-638.....	1104	WO-A-795.....	1104
WO-A-498.....	0204	WO-A-642.....	0301C	WO-A-796.....	1003
WO-A-499.....	0204A	WO-A-647.....	1205	WO-A-796.....	1104
WO-A-500.....	1500	WO-A-655.....	0401	WO-A-797.....	1003
MDR-AM-504K.....	0604B	WO-A-657.....	0401	WO-A-797.....	1104
WO-A-508.....	1500	WO-A-657.....	0401-1	WO-A-798.....	1003
WO-A-513.....	1602	WO-A-658.....	0401	WO-A-798.....	1104
AL-IG-514.....	0603	WO-A-658.....	0401-A	WO-A-799.....	1003
WO-A-514.....	1602	WO-A-668.....	1500	WO-A-799.....	1104
AL-IG-515.....	0603	AL-IG-676.....	0603	WO-A-800.....	1003
CNC-515.....	2201A	AL-IG-680.....	0603	WO-A-800.....	1104
WO-A-515.....	1602	WO-A-683.....	1209C	WO-A-801.....	1003
SP-5-B-15.....	1201	SP-690-W.....	0804	WO-A-801.....	1104
SP-5-B-16.....	1201	AL-IG-694.....	0603	WO-A-802.....	1003
WO-A-518.....	0704	SP-710-W.....	0803	WO-A-802.....	1104
CNC-519.....	1811	WO-A-719.....	0608	WO-A-803.....	1003
WO-A-519.....	0704	WO-A-738.....	0704	WO-A-803.....	1104
WO-A-520.....	0802	WO-A-739.....	0704C	WO-A-804.....	1003
SP-K5-21-X.....	0902	WO-A-740.....	1403A	WO-A-804.....	1104
WO-A-524.....	0704C	WO-A-742.....	1403A	WO-A-805.....	1003
				WO-A-805.....	1104

PART NUMBER INDEX—MANUFACTURERS (Cont'd)

Number	Group	Number	Group	Number	Group
V O-A-805	1003	WO-A-876	1401	WO-A-982	0801
WO-A-809	1104	WO-A-877	1006	WO-A-983	0801
WO-A-810	1007	WO-A-878	0704C	WO-A-984	0801
WO-A-811	1007	WO-A-879	0704C	WO-A-985	0810
WO-A-812	1003	WO-A-880	0704C	WO-A-987	0803
WO-A-813	1006	WO-A-887	0204A	WO-A-988	0803
WO-A-814	1006	SP-887-D	1201	WO-A-989	0803
AL-IG-816C	0603	WO-A-888	1101	WO-A-990	0803
WO-818	1000	WO-901	1102	WO-A-991	0801
WO-A-818	1000	AL-X-902	0602	SP-991-D	1201-1
WO-A-819	1006	WO-A-902	1102	WO-A-992	0803
WO-A-820	1000	WO-A-903	1203	SP-992-D	1201-1
WO-A-821	1006	WO-A-904	1100	WO-A-997	1201
CA-D-822	1401	WO-A-912	1102	WO-A-998	0804
WO-A-824	1006	WO-A-916	0108	WO-A-999	0804
WO-A-825	1006	WO-A-923	0704	WO-A-1000	0804
WO-A-828	1006	WO-A-924	0801	WO-A-1001	0804
WO-A-830	1006	WO-A-934	0804	AL-VRA-1002	0601B
WO-A-831	1006	WO-A-935	0801	WO-A-1002	1201
WO-A-832	1006	WO-A-936	0902	WO-A-1003	1201
WO-A-833	1006	WO-A-940	0902	AL-IAD-1004	0603-1
WO-A-838	1402	WO-A-941	0902	WO-A-1004	1201
WG-T-84J-1A	0701	WO-A-942	0902	WO-A-1005	1201
WC-AC-84J-2A	0706A	WO-A-943	0902	AL-GEB-1005A	0601
WT-T-84GJ-3	0704C	WO-A-945	0902	WO-A-1006	1201
WO-A-844	1402	WO-A-950	0902	AL-MZ-1007	0602
WG-T-84J-6	C703	WG-T-9-50P	0902	WO-A-1007	0803
AL-X-847	0601	SP-S-953	0802	AL-GEB-1007A	0601
WO-A-847	1402	WO-A-953	1007	AL-MZ-1008	0602
WG-AT-84F-8	0704C	WO-A-954	0801	WO-A-1008	1201
WO-A-851	1006	WO-A-956	0800	AL-GEB-1008B	0601
WO-A-853	1006	SP-S-957	0801	AL-MZ-1009	0602
SP-854-D	0805	WO-A-957	1006	WO-A-1009	1201
WO-A-855	1401	WO-A-958	0800	AL-MZ-1010	0602
AL-8X-55	0601B	WO-A-959	0801	AL-GCE-1012	0601
WO-A-856	1401	AL-X-959	0803	AL-X-1012	0603
SP-856-D	1201	WO-A-959	0601	FM-GP-1012	1302A
WO-A-857	1401	WO-A-960	0805A	FM-GP-1013	1302A
WO-A-858	1000	SP-S-962	0805A	WO-A-1014	1201
WO-A-859	1401	WO-A-962	1006	FM-GP-1015	1301
WO-A-860	1401	WO-A-963	0805	FM-GPW-1015	1301
WO-A-861	1401	WO-A-964	0805A	WO-A-1015	1201
WO-A-862	1007	WO-A-965	0805	FM-GPW-1016	1301
WO-A-863	1007	WO-A-966	0805	WO-A-1016	1201
WO-A-864	1000	WO-A-967	0805	CAR-101-6	0301
WO-A-865	1100	WO-A-970	0805B	WO-A-1017	1201
WO-A-866	1301B	WO-A-971	0706A	WO-A-1018	1201
WO-A-867	1301A	WO-A-972	0805B	SP-10-B-18	1201
WO-A-868	1301A	WO-A-973	0805B	WO-A-1019	1201
WO-A-869	1006	WO-A-974	2000	WO-A-1020	1201
AL-SX-870	1302	WO-A-975	2001	WO-A-1021	1201
WO-A-870	0603	WO-A-976	2003	AL-MZ-1024	0602
WO-A-871	1001	WO-A-977	0805B	FM-GPW-1024	1301
WO-A-872	1101	WO-A-978	0805	FM-GPW-1025-C	1301
WO-A-873	1103	AL-X-975	0800	FM-GPW-1027	1301
AL-8X-72B	1104	WO-A-975	0805	FM-GPW-1029	1301
WO-A-873	2204	WO-A-976	0601-1	AL-GEG-1030	0601-1
	1006	WO-A-977	0803	FM-GPW-1030	1301
		WO-A-978	0803	WO-A-1031	0607
		WO-A-979	0803	WO-A-1032	0607
		WO-A-980	0902	WO-A-1033	0607A
			0803	AL-MZ-1034	0602
				WO-A-1036	0607

PART NUMBER INDEX—MANUFACTURERS (Cont'd)

Number	Group	Number	Group	Number	Group
WO-A-1037.....	0607			FB-1203FF.....	0601
AL-VRY-1043.....	0601B	WO-A-1120.....	{1500	WO-A-1204.....	1500
AN-S-1044.....	1811		{2000	WO-A-1205.....	1500
FM-GPW-1045.....	1301		{2101	FB-1207-GF.....	0703
WO-A-1045.....	0302	FM-GP-1124.....	1301A	FB-1207-MGF.....	0703
WO-A-1046.....	0302	WO-A-1124.....	0503A	TR-B-1210.....	1401
WO-A-1047.....	0302	AL-GCE-1125.....	0601	WO-A-1211.....	1401
WO-A-1051.....	0110	WO-A-1125.....	0503A	EAT-IE-1212.....	0501
SP-1056.....	1007	WO-A-1126.....	{0101	WO-A-1212.....	1000
SP-S-1056.....	1104		{0501	WO-A-1214.....	0501
CAR-105A-8.....	0301	WO-A-1127.....	1500	WO-A-1215.....	0501
AL-VRA-1060.....	0601B	WO-A-1128.....	1500	WO-A-1216.....	0501
AL-VRH-1061.....	0601B-1	WO-A-1129.....	1500	WO-A-1217.....	0501
AL-VRY-1061B.....	0601B	WO-A-1130.....	1500	FM-GP-1218.....	1301A
WO-A-1061.....	0107N	AL-GCE-1133-A.....	0601-1	WO-A-1220.....	0302
WO-A-1064.....	0608	WO-A-1134.....	{0800	WO-A-1221.....	0300
WO-A-1065.....	0608		{0803	WO-A-1223.....	0301
SP-S-1066.....	1003	AL-IGS-1134-L.....	0603	WO-A-1225.....	0303
WO-A-1070.....	0607D	AL-IGS-1134-LA.....	0603-1	WO-A-1226.....	1201
WO-A-1071.....	0607D		{1003	WO-A-1227.....	1201
WO-A-1072.....	0607D	SP-S-1135.....	{1007	WO-A-1228.....	1201
AL-VRH-1073.....	{0601B		{1104	WO-A-1230.....	0107E
	{0601B-1	WO-A-1135.....	0801	WO-A-1231.....	0107E
WO-A-1073.....	0608	CAR-11B-35.....	0301	WO-A-1232.....	0107E
WO-A-1074.....	0607A	WO-A-1136.....	0801	WO-A-1233.....	0107E
WO-A-1075.....	0607A	WO-A-1137.....	0801	WO-A-1234.....	0107E
WO-A-1076.....	0608	WO-A-1138.....	1500	WO-A-1235.....	0107E
WO-A-1077.....	0608	FM-GP-1139.....	1302	WO-A-1236.....	0107E
WO-A-1078.....	0607A	WO-A-1142.....	1500	WO-A-1237.....	0107E
AL-IGS-1080.....	0603	WO-A-1145.....	0700	WO-A-1239.....	1403A
AL-VRH-1080.....	0601B-1	WO-A-1146.....	0401	WO-A-1241.....	1201
AL-VRY-1080B.....	0601B	WO-A-1147.....	2101	WO-A-1242.....	1201
WO-A-1082.....	0607D	AL-IGC-1148.....	0603	WO-A-1243.....	0303
WO-A-1083.....	0303	WO-A-1148.....	0700	SP-1244.....	0803
FM-GP-1088.....	1006	AL-IGC-1149.....	0603	WO-A-1244.....	0603
FM-GP-1089.....	1006	WO-A-1150.....	1500	WO-A-1245.....	0602
WO-A-1089.....	0606E	WO-A-1151.....	1500	WO-A-1246.....	0601
FM-GP-1092.....	{1000	WO-A-1152.....	1500	WO-A-1247.....	0107E
	{1006	WO-A-1153.....	1500	WO-A-1251.....	0107E
WO-A-1096.....	0604B	WO-A-1155.....	0706B	WO-A-1252.....	1602
WO-A-1098.....	2603	WO-A-1156.....	0706B	WO-A-1253.....	1500
AL-SPS-1100R.....	2204	WO-A-1157.....	2101	WO-A-1254.....	0300
FM-GP-1102.....	1302	WO-A-1164.....	0610A	WO-A-1255.....	0306B
FM-GP-1103.....	1302	WO-A-1165.....	0108	WO-A-1256.....	0306B
WO-A-1104.....	0801	WO-A-1166.....	0108	WO-A-1257.....	0306B
WO-A-1105.....	0803	WO-A-1167.....	0107A	WO-A-1258.....	0306B
AL-SPS-1105-X.....	2204	WO-A-1173.....	0303	WO-A-1259.....	0306B
SP-S-1106.....	1401	WO-A-1174.....	0303	WO-A-1260.....	0306B
WO-A-1106.....	0803	WO-A-1175.....	0303	WO-A-1261.....	0306B
FM-GP-1107.....	1302A	FM-GP-1177.....	{1000	WO-A-1262.....	0306B
DTC-1107DE.....	2603		{1301B	WO-A-1263.....	0306B
WO-A-1079.....	0608	FM-GPW-1177.....	1100	WO-A-1264.....	0306B
AL-PS-1079A.....	0602	CAR-11B-79.....	0301	WIL-ST-1265.....	0105A
FM-GP-1108.....	1302A	WO-A-1190.....	0106D	WO-A-1265.....	{0304
CA-S-X-1109.....	1401	WO-A-1192.....	0505		{1811D-1
CA-S-X-1110.....	1401	WO-A-1195.....	0800	WO-A-1268.....	0605
FM-GP-1110.....	{1002	WO-A-1197.....	0107J	WO-A-1269.....	0605
	{1007	WO-A-1198.....	0107J	WO-A-1270.....	0605
BN-C-1110-Q.....	0703	WO-A-1199.....	1403A	WO-A-1271.....	0606
WO-A-1111.....	0803	FM-GP-1201.....	1301A	WO-A-1273.....	0303
WO-A-1116.....	1402	WO-A-1201.....	1500	WO-A-1275.....	0300
WO-A-1117.....	2101	FM-GP-1202.....	1301A	WO-A-1276.....	1405
		WO-A-1202.....	1500	WO-A-1277.....	1405
		ND-1203.....	0601	WO-A-1278.....	0301C
		WO-A-1203.....	1500		

PART NUMBER INDEX—MANUFACTURERS (Cont'd)

Number	Group	Number	Group	Number	Group
WO-A-1279	0301C	WO-A-1381	0706A	WO-A-1481	0300
WO-A-1283	1500	WO-A-1382	0706A	WO-A-1483	0300
WO-A-1285	2603	WO-A-1385	0706B	WO-A-1484	1207
WO-A-1287	2603	WO-A-1386	1204	WO-A-1486	1209C
WO-A-1289	{ 0304	WO-A-1387	1000	WO-A-1487	1209C
	0606B	WO-A-1388	0100	WO-A-1488	1209C
WO-A-1290	0301C	WO-A-1389	0609	WO-A-1490	0606E
WO-A-1291	0610A	WO-A-1392	0601A	WO-A-1491	0601A
WO-A-1292	0300A	WO-A-1395	0601A	WO-A-1494	0302
WO-A-1293	0300A	WO-A-1396	{ 0601	WO-A-1495	0503B
WO-A-1296	0401		0601A	WO-A-1496	1200
BX-129-S-6	1202	WO-A-1397	0601A	WO-A-1497	1200
WO-A-1300	0401	WO-A-1399	0601A	LO-S-FC-1499	1207
WO-A-1301	0303A	WO-A-1400	0601A	WO-A-1501	1209C
WO-A-1304	0607	WO-A-1401	{ 0601	WO-A-1503	0801
WO-A-1305	0607		0601A	WO-A-1504	0805
WO-A-1306	2203A	CAR-1-407	0301	WO-A-1505	0805B
WO-A-1307	0303A	WO-A-1409	0601B	WO-A-1506	0805B
WO-A-1308	0303A	WO-A-1410	0802	WO-A-1507	0801
WO-A-1311	0301C	WO-A-1411	0605C	WO-A-1508	0801
WO-A-1312	0609	WO-A-1412	0604A	WO-A-1509	{ 0800
WO-A-1313	0301C	WO-A-1414	0604A		0801
WO-A-1315	0301C	WO-A-1416	0604A	WO-A-1510	0801
CAR-1319	0301	WO-A-1418	0604A	WO-A-1511	0810
WO-A-1320	0610B	WO-A-1420	0604A	WO-A-1512	0810
AL-IG-1324-D	{ 0603	TP-14-DS-20	1402	WO-A-1514	1500
	0603-1	WO-A-1422	1403A		{ 0301C
WO-A-1325	0304	WO-A-1424	0604	WO-A-1515	1100
WO-A-1326	0901	WO-1426	0902		1209C
WO-A-1327	0901	WO-A-1426	0902	WO-A-1526	0604
WO-A-1330	2203	WO-A-1428	0901		{ 0107
WO-A-1331	2203	WO-A-1429	0901		0110
WO-A-1332	0606	WO-A-1431	1500		0203
WO-A-1333	0606	FM-GPW-1433	1505		0204
WO-A-1334	0605C	WO-A-1433	0902		0300
WO-A-1341	1500	WO-A-1434	0902		0301C
WO-A-1343	2204	WO-A-1435	{ 0701	WO-A-1532	0401
WO-A-1344	2204		0800		0501
WO-A-1345	0606	WO-A-1436	0607D		0601A
WO-A-1347	0606	WO-A-1437	0607D		0607D
WO-A-1348	0606	WO-A-1439	0607D		1201
WO-A-1349	0606D	WO-A-1440	0607D		1205
WO-A-1350	{ 0604C	WO-A-1443	0109		1405
	0606	TP-14DM-43	1402		2603
WO-A-1351	0606	LO-FE-1444	1205		{ 0107E
WO-A-1352	0606	WO-A-1445	1104		0401
WO-A-1353	0606	AL-X-1448	0603	WO-A-1533	0601B
WO-A-1354	1205	WO-A-1450	0107J		1201-1
WO-A-1355	0204A	WO-A-1451	0301C		1201
WO-A-1359	1204	WO-A-1452	0610B	WO-A-1534	0101A
WO-A-1360	0204	WO-A-1454	0610B	WO-A-1536	0101
WO-A-1361	0607	WO-A-1456	0107J	WO-A-1537	0101
WO-A-1362	0607	WO-A-1457	1209B	WO-A-1538	0107A
WO-A-1363	0607	WO-A-1460	1209B	WO-A-1539	0503
WO-A-1366	0304	WO-A-1463	0106D	WO-A-1540	0302
WO-A-1367	0304	AL-X-1465	{ 0601B	WO-A-1541	0301
WO-A-1368	0304		0601B-1	WO-A-1542	0701
WO-A-1369	0304	WO-A-1468	0601A	WO-A-1543	0800
WO-A-1373	1209B	WO-A-1469	0601A	WO-A-1544	1000
WO-A-1376	1209C	WO-A-1470	0601A	WO-A-1546	0501
WO-A-1377	1209C	WO-A-1472	0300	WO-A-1547	0501
WO-A-1378	1209C	WO-A-1476	0300	WO-A-1548	0101A
WO-A-1379	0706A	WO-A-1477	0300	WO-A-1549	0101A
WO-A-1380	0706A	WO-A-1480	0300	WO-A-1551	0606B

PART NUMBER INDEX—MANUFACTURERS (Cont'd)

Number	Group	Number	Group	Number	Group
WO-A-1552.....	0602	WO-A-1616.....	{ 0601	WO-A-1660.....	0603
WO-A-1553.....	0602	WO-A-1617.....	{ 0601B	WO-A-1661.....	0603
WO-A-1554.....	0602	WO-A-1618.....	0601	WO-A-1662.....	0603
WO-A-1555.....	0602	WO-A-1619.....	{ 0601	WO-A-1663.....	{ 0603
WO-A-1556.....	0602	WO-A-1620.....	{ 0602	WO-A-1664.....	{ 0603-1
WO-A-1557.....	0602	WO-A-1621.....	0601B	WO-A-1665.....	0603
WO-A-1558.....	0602	WO-A-1622.....	0601	WO-A-1666.....	{ 0606B
WO-A-1559.....	0602	WO-A-1623.....	0601	WO-A-1667.....	{ 0601B
WO-A-1560.....	0602	WO-A-1624.....	0601	WO-A-1668.....	0603
WO-A-1561.....	0602	WO-A-1625.....	0601	WO-A-1669.....	{ 0603-1
WO-A-1562.....	0602	WO-A-1626.....	0601	WO-A-1670.....	0603
WO-A-1563.....	0602	WO-A-1627.....	0601	WO-A-1671.....	{ 0603-1
WO-A-1564.....	0603	WO-A-1628.....	{ 0601	WO-A-1672.....	{ 0603
WO-A-1565.....	{ 0602	WO-A-1629.....	{ 0601-1	WO-A-1673.....	{ 0603-1
WO-A-1566.....	{ 0606	WO-A-1630.....	0601	WO-A-1674.....	0603
WO-A-1568.....	0602	WO-A-1631.....	0601	WO-A-1675.....	0603
WO-A-1569.....	0602	WO-A-1632.....	0603	WO-A-1676.....	0603
WO-A-1570.....	0603	WO-A-1633.....	{ 0601	WO-A-1677.....	0603
WO-A-1571.....	0602	WO-A-1635.....	{ 0601-1	WO-A-1678.....	0603
WO-A-1572.....	0602	AD-1636.....	2603	WO-A-1679.....	0603
WO-A-1573.....	0602	WO-A-1636.....	{ 0603	WO-A-1680.....	{ 0110
WO-A-1574.....	0602	AN-X-1637.....	{ 0603-1	WO-A-1681.....	{ 0610B
WO-A-1575.....	0602	WO-A-1637.....	0601	WO-A-1682.....	0603
WO-A-1576.....	0602	WO-A-1638.....	0601	WO-A-1683.....	0603
WO-A-1577.....	0602	WO-A-1639.....	0601	WO-A-1684.....	0603
WO-A-1578.....	0602	WO-A-1640.....	0601	WO-A-1685.....	{ 0603
WO-A-1579.....	0602	AD-1641.....	{ 0204	WO-A-1686.....	{ 0603-1
WO-A-1580.....	0602	WO-A-1641.....	{ 0902	WO-A-1687.....	0603
WO-A-1581.....	0602	WO-A-1642.....	0601	WO-A-1689.....	1302
WO-A-1582.....	0602	WO-A-1643.....	{ 0203	WO-A-1690.....	1302
WO-A-1583.....	0602	WO-A-1644.....	0601	WO-A-1691.....	1302
WO-A-1584.....	0602	WO-A-1646.....	0601	WO-A-1699.....	2603
WO-A-1585.....	0602	WO-A-1647.....	0601	AN-X-1700.....	1811
WO-A-1586.....	0602	WO-A-1649.....	{ 0601-1	WO-A-1701.....	{ 0108C
WO-A-1587.....	0603	WO-A-1650.....	0601	WO-A-1702.....	0303
WO-A-1588.....	0602	WO-A-1651.....	0601	WO-A-1703.....	0601
WO-A-1589.....	{ 0601	WO-A-1652.....	0601-1	WO-A-1704.....	1001
WO-A-1590.....	{ 0602	WO-A-1653.....	0601	WO-A-1705.....	1402
WO-A-1591.....	0601	WO-A-1654.....	0604A	WO-A-1706.....	1402
WO-A-1592.....	0601	WO-A-1655.....	0603	WO-A-1707.....	1402
WO-A-1593.....	0601	WO-A-1656.....	{ 0603-1	WO-A-1708.....	1402
WO-A-1594.....	0601	WO-A-1657.....	0606B	WO-A-1709.....	1402
WO-A-1595.....	0601	WO-A-1658.....	0603	WO-A-1710.....	1006
WO-A-1596.....	0601	AL-X-1655.....	0601	WO-A-1712.....	{ 1006
WO-A-1597.....	0601	WO-A-1655.....	0603	WO-A-1714.....	1007
WO-A-1598.....	0601	WO-A-1656.....	0603	WO-A-1716.....	1006
WO-A-1599.....	0601	WO-A-1657.....	0603	WO-A-1718.....	1007
WO-A-1600.....	0601	AL-IG-1657R.....	0603	WO-A-1719.....	{ 1006
WO-A-1601.....	0601	WO-A-1658.....	0603	WO-A-1719.....	1007
WO-A-1602.....	0601	WO-A-1659.....	0603		
WO-A-1603.....	0601				
WO-A-1604.....	0601				
WO-A-1605.....	0601				
WO-A-1606.....	0601				
WO-A-1607.....	0601				
WO-A-1608.....	0601				
WO-A-1609.....	0601				
WO-A-1610.....	0601				
*WO-A-1611.....	0601				
WO-A-1612.....	0601				
WO-A-1613.....	0601				
WO-A-1615.....	0601				

PART NUMBER INDEX—MANUFACTURERS (Cont'd)

Number	Group	Number	Group	Number	Group
WO-A-1720.....	1007	FM-GP-2019.....	1202	FM-GP-2180-A.....	1205
WO-A-1721.....	1007	FM-GP-2021.....	1202	FM-GP-2183.....	1205
WO-A-1722.....	1007	FM-GP-2022.....	1202	FM-GP-2188.....	1205
WO-A-1723.....	1007	CAR-20-22.....	0301	WO-A-2188.....	1704
WO-A-1724.....	1007	CAR-20-26.....	0301	WO-A-2190.....	1802A
WO-A-1725.....	1007	FM-GP-2028.....	1203	FM-GP-2192.....	1207
WO-A-1726.....	1007	FM-GP-2035.....	1203	FM-GP-2194.....	1207
WO-A-1727.....	1007	FM-GP-2038.....	1203	FM-GP-2196.....	1207
WO-A-1729.....	1007	AL-MAB-2040A.....	0602	FM-GPW-2196.....	1207
WO-A-1731.....	0607	FM-GPW-2061.....	1207	FM-GP-2201.....	1207
WO-A-1733.....	0606D	CAR-20-61.....	0301	FM-GPW-2201.....	1207
WO-A-1734.....	0606D	SP-20-B-62.....	1201	FM-GP-2204.....	1207
WO-A-1735.....	{1201	CAR-20-72.....	0301	FM-GP-2205.....	1207
	{1201-1	FM-GPW-2073.....	1500	FM-GPW-2206.....	1207
WO-A-1738.....	0300	SP-20-B-73.....	1201-1	FM-GP-2208.....	1207
WO-A-1739.....	0300	FM-GP-2074.....	1209C	FM-GPW-2210-B.....	1200
WO-A-1740.....	0300	FM-GP-2076.....	1205	FM-GPW-2211-B.....	1200
WO-A-1741.....	0300	FM-GP-2077.....	1205	WO-A-2213.....	1811
WO-A-1746.....	0602	FM-GP-2078.....	1209B	WO-A-2214.....	1811
AN-X-1747.....	1811	FM-GPW-2078.....	1209B	WO-A-2220.....	1811
WO-A-1748.....	0605C	FM-GPW-2079.....	1209B	FM-GPW-2223.....	1209C
AN-X-1750.....	1811	FM-GPW-2082.....	1209D	WO-A-2226.....	{1811
AN-X-1751.....	1811	FM-GPW-2084.....	1209D		{2201A
AN-X-1754.....	1811	FM-GP-2087.....	1209B	WO-A-2227.....	1811
AN-X-1755.....	1811	AL-MZ-2089.....	0602	AL-2229.....	0605
WO-A-1757.....	0610A	FM-GPW-2096.....	1209B	WO-A-2232.....	1811
WO-A-1760.....	1403A	AL-SPS-2099M.....	2204	WO-A-2234.....	1811
WO-A-1763.....	0300A	LO-S-FD-2108-F.....	1205	AL-2235.....	0605
WO-A-1764.....	0803	LO-S-FD-2109-B.....	1205	WO-A-2235.....	1811
WO-A-1765.....	{1000	AL-GCE-2118.....	0601	WO-A-2238.....	1811
	{1809	WB-SR-2-119.....	0610	WO-A-2239.....	1811
WO-A-1767.....	0610	AL-GEG-2120-F.....	0601	FM-GPW-2244.....	1209C
WO-A-1785.....	0601-1	SP-K2-1-28.....	0603	WO-A-2246.....	1811
WO-A-1786.....	0601-1	SP-K2-1-28X.....	0803	FM-GPW-2250.....	{0301C
WO-A-1787.....	{0601-1	FM-GP-2133.....	1209C		{1209C
	{0601-C	AL-GEG-2134-F.....	0601-1	WO-A-2250.....	1811B
WO-A-1788.....	0601-1	AL-IGS-2134L.....	0603	WO-A-2255.....	1811B
WO-A-1789.....	{0601-1	AL-IGS-2134-LA.....	0603-1	FM-GP-2261.....	1207
	{0601-C	AL-IGS-2135.....	0603	FM-GPW-2261.....	1207
WO-A-1793.....	0601	FM-GPW-2135.....	1207	FM-GPW-2263.....	1209C
WO-A-1795.....	1201	WG-X-2136.....	0706B	WO-A-2263.....	1802A
WO-A-1799.....	1301	FM-GPW-2138.....	1205	FM-GPW-2264.....	1209C
SP-18B-41.....	1201-1	WO-A-2138.....	1802	FM-GPW-2265.....	1209C
WG-1AT-84H-2.....	0704	FM-GP-2140.....	1205	FM-GPW-2266.....	1209C
SP-18-5-1.....	0804	FM-GP-2143-A.....	1205	FM-GPW-2267.....	1209C
SP-18-8-1.....	0803	FM-GP-2145.....	1205	FM-GPW-2268.....	1209C
SP-18-8-2.....	0803	AL-IGC-2148C.....	0603	FM-GPW-2270.....	1201-1
SP-18-8-7.....	0802	FM-GP-2155.....	1205	FM-GPW-2270-B.....	{1201
WO-A-1910.....	0303	AL-MZ-2156.....	0602		{1201-1
AD-1911.....	1602	FM-GP-2160.....	1205	FM-GPW-2272.....	{1201
AD-1980.....	{1401	FM-GP-2162.....	1205		{1201-1
	{1602	FM-GP-2167.....	1205	FM-GPW-2274.....	1209D
AL-IAD-2001.....	0603-1	WO-A-2168.....	{1800	KHW-2277.....	1301
AL-IAD-2004.....	0603-1		{2201A	WO-A-2278.....	1802
MSP-F-2005.....	1500	AL-IGC-2168-L.....	0603-1	FM-GPW-2279.....	1201
MSP-F-2007.....	1500	SP-K2-1-68X.....	0803	FM-GPW-2281.....	1209C
MSP-F-2009.....	1500	FM-GP-2169.....	1205	FM-GPW-2298.....	1209C
FM-GPW-2010.....	1200	FM-GP-2170.....	1205	WO-A-2301.....	1811
FM-GPW-2011.....	1200	FM-GP-2173.....	1205	WO-A-2311.....	1802
AL-GCE-2012S.....	0601	FM-GP-2174.....	1205	WO-A-2312.....	1802
AL-MZ-2012-S.....	0602	CAR-21-74S.....	0301	WO-A-2325.....	1802A
FM-GP-2013.....	1203	FM-GP-2175.....	1205	TRI-2328.....	1811D
AL-IAD-2015.....	0603-1	FM-GP-2176.....	1205	WO-A-2336.....	1802A
FM-GP-2018.....	1202	FM-GP-2180.....	1205	WO-A-2359.....	1505

PART NUMBER INDEX—MANUFACTURERS (Cont'd)

Number	Group	Number	Group	Number	Group
WO-A-2375.....	{ 1702 1802A	FM-GPW-2635.....	1201	WO-A-2859.....	1405
WO-A-2386.....	1811	WO-A-2639.....	2201A	WO-A-2870.....	0607
WO-A-2389.....	1800	FM-GPW-2640.....	1201-1	WO-A-2871.....	0607
WO-A-2390.....	1800	FM-GPW-2642.....	1201-1	AVM-TP-28-71.....	0202
CAR-24-23.....	0301	FM-GP-2648.....	1201	WO-A-2873.....	0607
WG-X-2428-A.....	1201	FM-GPW-2648.....	1201-1	WO-A-2875.....	0607
FM-GPW-2452A.....	1204	FM-GPW-2653.....	1201-1	AL-X-2878.....	0603-1
FM-GPW-2452-B.....	1204	FM-GPW-2656.....	1201	WO-A-2878.....	0607
WO-A-2453.....	1804	FM-GPW-2659.....	1201	WO-A-2879.....	1802A
FM-GPW-2454.....	1204	FM-GPW-2660.....	1201-1	WO-A-2883.....	1804
FM-GPW-2454A.....	1204	WO-A-2662.....	1701	WO-A-2886.....	1804
AL-IG-2456.....	0603	SP-K2-7-29.....	0902	WO-A-2891.....	1701
FM-GPW-2462.....	1205	WO-A-2744.....	2201A	WO-A-2892.....	1201
	{ 0607 0610A	WO-A-2745.....	2201A	WO-A-2895.....	1817
WO-A-2466.....	1802A	WO-A-2754.....	2201A	WO-A-2896.....	1704
	1804	WO-A-2756.....	1802A	WO-A-2897.....	2201A
WO-A-2470.....	1802A	WO-A-2757.....	1802A	WO-A-2898.....	2201A
FM-GPW-2473.....	1204	WO-A-2758.....	1802A	WO-A-2900.....	2201A
WO-A-2476.....	1811B	WO-A-2759.....	1803	WO-A-2901.....	2201A
WO-A-2478.....	1811	WO-A-2760.....	1803	WO-A-2902.....	2201A
WO-A-2479.....	1811B	SP-27-B-62.....	1201-1	WO-A-2907.....	2003
WO-A-2480.....	1811	WO-A-2771.....	1802A	WO-A-2909.....	2201
WO-A-2481.....	1811	WO-A-2772.....	1802A	WO-A-2910.....	1804
WO-A-2482.....	1811	FM-GPW-2774.....	1201-1	WO-A-2911.....	1804
WO-A-2483.....	1811	WO-A-2774.....	1817	WO-A-2914.....	2001
WO-A-2485.....	1811	WO-A-2775.....	1817	LO-S-FC-2917.....	1205
WO-A-2487.....	1811	WO-A-2776.....	1811B	WO-A-2917.....	1803
SP-K2-4-88X.....	0803	FM-GPW-2780.....	1201	WO-A-2918.....	1803
WO-A-2489.....	1811B	FM-GPW-2782.....	{ 1201 1201-1	LO-S-FC-2918-A.....	1205
WO-A-2490.....	1811	WO-A-2782.....	1804	WO-A-2919.....	1803
WO-A-2501.....	1811	WO-A-2783.....	1804	LO-S-FC-2919-B.....	1205
WO-A-2512.....	1811D	FM-GPW-2784.....	1201-1	WO-A-2925.....	1804
WO-A-2513.....	1811D	WO-A-2787.....	1804	LO-S-FC-2926.....	1205
WO-A-2515.....	1804	WO-A-2788.....	1804A	LO-S-FC-2927.....	1205
WO-A-2517.....	0604C	WO-A-2791.....	1811	WO-A-2930.....	0300
WO-A-2518.....	0604C	FM-GPW-2793.....	1201	WO-A-2931.....	1803
WO-S2542.....	1402	WO-A-2796.....	1811	WO-A-2932.....	1803
WO-A-2584.....	1811D	WO-A-2798.....	1811	WO-A-2933.....	1802
WO-A-2586.....	1811D	FM-GPW-2805.....	1201-1	WO-A-2934.....	2202
WO-A-2587.....	1811D	FM-OIT-2805.....	1201	WO-A-2935.....	1802A
WO-A-2588.....	1811D	WO-A-2810.....	{ 1802 1817	WO-A-2939.....	{ 1802A 1811
FM-GPW-2591.....	1201-1	WO-A-2811.....	1817	B & B-2940.....	0201A
FM-GPW-2592.....	1201-1	WO-A-2815.....	1802	WO-A-2940.....	1802
CAR-25-93S.....	0301	AVM-TP-2818.....	0202	WO-A-2942.....	1701
FM-GPW-2598-B.....	{ 1201 1201-1	WO-A-2830.....	1804	WO-A-2943.....	1701
FM-GPW-2606.....	1201-1	WO-A-2832.....	1817	WO-A-2945.....	1804
WO-A-2607.....	1804	WO-A-2833.....	1804	WO-A-2948.....	1802A
FM-GP-2614.....	1201	WO-A-2836.....	1704	WO-A-2950.....	1802
FM-GPW-2614.....	1201-1	WO-A-2837.....	1802A	WO-A-2952.....	0300
FM-GPW-2615.....	1201-1	WO-A-2838.....	1802A	WO-A-2953.....	0300
FM-GPW-2616.....	1201	WO-A-2841.....	1702	WO-A-2954.....	0300
FM-GPW-2616-B.....	1201-1	WO-A-2842.....	1702	WO-A-2968.....	1802A
FM-GP-2620.....	1201	WO-A-2843.....	1701	WO-A-2970.....	0300
FM-GPW-2620-B.....	1201-1	WO-A-2844.....	1701	WO-A-2979.....	1803
FM-GPW-2621.....	1201-1	FM-GPW-2848.....	{ 1201 1201-1	WO-A-2982.....	1803
FM-GPW-2630.....	1201	AVM-TP-2851.....	0202	WO-A-2983.....	1804
FM-GPW-2632.....	1201	FM-GPW-2852.....	1201	WO-A-2986.....	1804A
FM-GPW-2632-B.....	1201-1	FM-GPW-2853.....	1201	WO-A-2989.....	1811
FM-GPW-2633.....	1201-1	WO-A-2853.....	1802	WO-A-2990.....	1803
FM-GPW-2634.....	1201-1	FM-GPW-2853-B.....	1201-1	WO-A-2992.....	1803
FM-OIT-2634.....	1201	WO-A-2858.....	2103	WO-A-2994.....	1803
				WO-A-2998.....	2201F
				WO-A-2999.....	2101F

PART NUMBER INDEX—MANUFACTURERS (Cont'd)

Number	Group	Number	Group	Number	Group
FM-GPW-3001	1000	WO-A-3144	1802A	FM-GPW-3304	1401
WO-A-3005	1809	FM-GP-3148-A	1006	FM-GPW-3304-B	1401
AL-VRH-3008	0601B-1	FM-GP-3149-A	1006	FM-GPW-3305	1401
FM-GP-3016-A	1007	WO-A-3155	1809	FM-GPW-3305-B	1401
FM-GP-3017-A	1007	WO-A-3158	1701	FM-GPW-3320	1401
LO-S-FC-3023	1207	WO-A-3159	1702	FM-GPW-3323	1401
AL-IGP-3028	0603	FM-GP-3161	1006	FM-GPW-3325	1006
AL-IGP-3028FS	0603	FM-GP-3162	1006	FM-GPW-3326	1401
WO-A-3029	1804	FM-GPW-3165	1401	FM-GPW-3327	1401
FM-GP-3031-A	1000	FM-GPW-3166	1401	FM-GPW-3328	1401
	1007	FM-GPW-3167	1000	FM-GPW-3332-A	1401
	1000		1401	FM-GPW-3336	1401
FM-GP-3034	1007	FM-GPW-3168	1401	FM-GPW-3365	0901
	1100	FM-GPW-3169	1401	FM-GPW-3370	0901
	1102	FM-GPW-3170	1401	FM-GP-3374	1007
AL-VRH-3035	0601B	FM-GPW-3171	1401	SP-34-B-23	1201-1
	0601B-1	WO-A-3173	1803	SP-34-B-24	1201-1
CAR-30-A-39	0301	WO-A-3179	1701	SP-34-B-25	1201-1
WO-A-3051	2201A	WO-A-3182	1803	WO-A-3434	1809A
LO-FC-3052	1209C	WO-A-3189	1811	WO-A-3436	1809A
WO-A-3052	2201F	WO-A-3190	1811	CAR-3-465-S	0301
WO-A-3053	2201A	WO-A-3197	1811	LO-3473	1205
WO-A-3054	2201A	WO-A-3198	1817	FM-GPW-3504	1403A
WO-A-3055	0300	FM-GP-3200	1007	FM-GPW-3506	1405
WO-A-3056	0300	FM-GP-3200-A	1007	FM-GPW-3509	1403A
WO-A-3059	1704	WO-A-3203	1811	FM-GPW-3511	1405
WO-A-3070	2201	FM-GP-3204	1007	FM-GPW-3514	1403A
AL-VRH-3071	0601B-1	WO-A-3204	1811B	FM-GPW-3517	1403A
AL-VRH-3071B	0601B	WG-X-3204-ML	0703	FM-GPW-3518	1403A
WO-A-3073	2201	FM-GP-3205	1006	FM-GPW-3520	1403A
FM-GPW-3074	1001	FM-GP-3205-A	1006	FM-GPW-3521	1403A
WG-X-3089BH	0706A	ND-3206	0803	FM-GPW-3524	1403A
WO-A-3094	2103	WO-A-3206	1803	WEB-3529	0606F
WO-A-3095	2103	FM-GPW-3206-A	1007	WO-A-3531	1809A
WO-A-3096	1702	WO-A-3207	1803	WO-A-3532	1809A
FM-GP-3105	1006	FM-GPW-3207-A	1007	WO-A-3536	1809A
WO-A-3107	1804A	WO-A-3208	1803	WO-A-3537	1809A
WO-A-3108	1804A	FM-GP-3208-A	1007	WO-A-3538	1809A
WO-A-3109	2201A	FM-GP-3208-B	1007	FM-GPW-3545	1403A
WO-A-3110	2201A	WO-A-3209	1803	WO-A-3549	2103
WO-A-3111	2201A	WO-A-3210	1811	WO-A-3550	2103
FM-GPW-3112	1006	WO-A-3211	2201	FM-GPW-3552	1403A
WO-A-3112	2201A	FM-GP-3215-A	1007	FM-GPW-3553	1403A
FM-GPW-3113	1006	FM-GP-3216	1007		1405
WO-A-3113	2201A	WO-A-3216	1800B	FM-GPW-3568	1403A
WO-A-3114	1804A		2201	FM-GPW-3571	1403A
FM-GP-3115	1006	FM-GP-3217	1007	WO-A-3574	1803
WO-A-3115	1804A	FM-GP-3218	1007	FM-GPW-3575	1403A
WO-A-3116	1803	FM-GP-3219	1007	WO-A-3575	1803
FM-GP-3117-A	1006	FM-GP-3221	1007	FM-GPW-3576	1403A
FM-GP-3117-B	1006	WO-A-3222	1802A	FM-GPW-3577	1403A
FM-GP-3117-C	1006	WO-A-3225	1704	WO-A-3578	1809
FM-GP-3117-D	1006	FM-GPW-3226	1007	FM-GPW-3581	1403A
FM-GPW-3117-D	1006	WO-A-3226	1817	FM-GPW-3587	1403A
WO-A-3120	1802A	FM-GPW-3227	1007	FM-GPW-3589	1403A
FM-GP-3122	1006	WO-A-3227	1817	FM-GPW-3590	1403A
FM-GPW-3131	1401	FM-GPW-3279	1402	FM-GPW-3591-A	1403A
FM-GP-3135	1000	FM-GPW-3280	1402	FM-GPW-3593	1403A
	1006	FM-GPW-3281	1402	FM-GPW-3594	1403A
AL-IGW-3139	0603	FM-GPW-3282	1402	FM-GPW-3595	1403A
FM-GP-3139	1000	FM-GP-3289	1402	FM-GPW-3600-A	1404
	1006	FM-GP-3290	1402	SP-N360-2	1007
FM-GP-3140	1006	FM-GP-3291	1402	WEB-3604	0606F
WO-A-3141	2201A	FM-GP-3292	1402		

PART NUMBER INDEX—MANUFACTURERS (Cont'd)

Number	Group	Number	Group	Number	Group
WO-A-3615.....	2103	WO-A-4120.....	1811	LO-S-FD-4564.....	1205
FM-GPW-3626.....	0609B	WO-A-4123.....	1817A	WO-A-4592.....	1803
FM-GPW-3627.....	0609B	CCS-W-41-25.....	0105A	FM-GP-4600-C.....	1003
FM-GPW-3631.....	0609B	WO-A-4127.....	1817A	FM-GPW-4602.....	0901
FM-GPW-3635.....	0609B	WO-A-4128.....	1817A	FM-GPW-4605.....	0901
FM-GPW-3635-B.....	0609B	LO-FC-4158.....	1207	AL-EBA-4611.....	0602
FM-GPW-3646.....	0609B	AL-VRY-4203A.....	0601B	FM-GP-4619.....	1003
FM-GPW-3652.....	0609B	FM-GP-4206.....	1003	FM-86H-4621.....	1104
WO-A-3652.....	1809A	FM-GP-4207.....	1104	FM-GP-4628.....	1003
FM-GPW-3655.....	1404	FM-GPW-4209.....	1003	FM-GP-4630.....	1104
FM-GPW-3658.....	1405	FM-GP-4211.....	1104	FM-GP-4659-A.....	1003
LO-S-FC-3678-A.....	1205	FM-GPW-4212.....	1003	FM-GP-4659-B.....	1104
FM-GPW-3682-A.....	1405	FM-GP-4215.....	1104	FM-GP-4659-C.....	1003
FM-GPW-3685.....	0604C	FM-GP-4221.....	1003	FM-GP-4659-D.....	1104
FM-GPW-3685-B.....	0604C	FM-GP-4222.....	1003	FM-GP-4660-A.....	1003
FM-GPW-3686.....	0604C	FM-GP-4228.....	1104	FM-GP-4660-B.....	1104
FM-GPW-3686-B.....	0604C	FM-GP-4229-A.....	1003	FM-GP-4660-C.....	1003
WO-A-3782.....	1803	FM-GPW-4229-A.....	1104	FM-GP-4661.....	1104
WO-A-3783.....	0706A	FM-GP-4229-B.....	1003	FM-GP-4661.....	1000
WO-A-3783.....	1803	FM-GP-4229-C.....	1104	FM-GP-4661.....	1003
WO-A-3784.....	0805B	FM-GP-4229-D.....	1003	FM-GP-4661.....	1104
WO-A-3784.....	1803	FM-GP-4229-E.....	1104	FM-GP-4668.....	1003
WO-A-3818.....	1809A	FM-GP-4230.....	1104	FM-GP-4676.....	1003
WO-A-3823.....	1809A	FM-GPW-4234.....	1102	FM-GP-4676-A.....	1104
WO-A-3835.....	1809A	FM-GP-4235.....	1102	FM-GP-4676-A.....	1104
CAR-39-10.....	0301	FM-GP-4236.....	1104	FM-GP-4676-A.....	1000
CAR-39-11.....	0301	FM-GPW-4236.....	1003	FM-GP-4676-A.....	1100
SP-39-Q-20.....	0805B	FM-GP-4241.....	1003	FM-GP-4676-A.....	1104
WO-A-3933.....	1817	FM-GP-4252.....	1301A	WO-A-4679.....	1704
WO-A-3934.....	1817	FM-GPW-4259.....	1102	WO-A-4680.....	1704
WO-A-3943.....	1803	WO-A-4260.....	1811	WG-4682-K.....	0704
WO-A-3980.....	1804A	FM-GP-4281.....	1003	WO-A-4683.....	1704
WO-A-3981.....	1804A	WO-A-4300.....	1811	WG-4686.....	0704
WO-A-3982.....	1804A	WO-A-4303.....	1811	WO-A-4687.....	1811D
WO-A-3983.....	1804A	B & B-4324.....	0201A	AL-1GC-4705.....	0603
WO-A-3984.....	1804A	CAR-43-67.....	0301	SP-475-2.....	0810
WO-A-3985.....	1804A	WO-A-4413.....	0501	FM-GP-4841.....	0902
FM-GPW-4001.....	1100	WO-A-4414.....	1800B	FM-GP-4842.....	1003
SL-SPK-4003.....	2004	WO-A-4415.....	1800B	FM-GP-4863.....	0803
FM-GPW-4004.....	1101	WG-4418-M.....	0706C	FM-GP-4865.....	0803
AL-1AD-4008.....	0603-1	WG-4496-K.....	0706A	FM-GP-4866.....	0902
AL-SW-4015.....	0606	WG-4497.....	0706A	CAR-48-84.....	0301
FM-GP-4015.....	1001	WG-4498-K.....	0706A	AL-GEG-5001.....	0601
FM-GP-4015.....	1101	WO-A-4516.....	1804	AL-GEG-5002D.....	0601
FM-GP-4016.....	1001	WO-A-4518.....	1804	FM-GPW-5005.....	1500
FM-GP-4016.....	1101	LM-GP-4533.....	0902	FM-GPW-5005-B.....	1500
FM-GP-4016-A.....	1001				
FM-GP-4016-A.....	1101				
FM-GP-4022.....	1001				
FM-GP-4022.....	1101				
FM-GP-4032.....	1100				
FM-GP-4032.....	1102				
FM-GP-4032.....	1000				
FM-GP-4035.....	1001				
FM-GP-4035.....	1100				
FM-GP-4035.....	1101				
CB-CB-4057.....	0607				
AL-1G-4070L.....	0604				
AL-VRA-4101C.....	0601B-1				
AL-MZ-4113.....	0602				
WO-A-4116.....	1701				
WO-A-4116.....	1802A				
WO-A-4116.....	2103A				
WO-A-4118.....	2103A				