



**POWERTRAIN  
CONTROL MODULE - C2  
(GAS)**

CAV	CIRCUIT	FUNCTION
B1	-	-
B2	-	-
B3	-	-
B4	K11 18WT/DB	FUEL INJECTOR NO.1 DRIVER
B5	K13 18YL/WT	FUEL INJECTOR NO.3 DRIVER
B6	K15 18PK/BK •	FUEL INJECTOR NO.5 DRIVER
B7	-	-
B8	-	-
B9	-	-
B10	K20 18DG	GENERATOR FIELD DRIVER (+)
B11	K54 18OR/BK ••	TORQUE CONVERTER CLUTCH SOLENOID CONTROL
B12	K16 18LG/BK •	FUEL INJECTOR NO.6 DRIVER
B13	-	-
B14	-	-
B15	K12 18TN	FUEL INJECTOR NO. 2 DRIVER
B16	K14 18LB/BR	FUEL INJECTOR NO. 4 DRIVER
B17	-	-
B18	-	-
B19	-	-
B20	-	-
B21	-	-
B22	-	-
B23	G60 18GY/YL	ENGINE OIL PRESSURE SENSOR SIGNAL
B24	-	-
B25	-	-
B26	-	-
B27	G7 18WT/OR	VEHICLE SPEED SENSOR SIGNAL
B28	-	-
B29	-	-
B30	-	-
B31	K6 18VT/OR	5V SUPPLY
B32	-	-

• 4.0L  
•• 2.5L A/T