

Transfer Case

Transfer Case13-1

Model 30013-3

NP 24213-5

NP 23113-7

NP 20813-9

NP 228 / 22913-11

NP 21913-15

Transfer Case

Dana Model 300




Transfer Case

Dana Model 300:

NO.	DESCRIPTION	REPLACES PART #
1.	Output shaft nut	801367
3.	Output Yoke	8131656
4.	Shift Rod oil seal	8131674
8.	Shift rod poppet spring	8131676
12.	Shift rod	8131673
13.	Shift fork clip	8131670
19.	Shift fork rod thimble	934281
22.	Bearing cone	3156063
23.	Bearing cup	3156062
24.	Shim & gasket kit	D300-GS
27.	Lock plate	A1001
28.	Intermediate shaft seal	942114
29.	Intermediate shaft	942115
30.	Thrust washer	8121813
31.	Intermediate bearing spacer	809295
32.	Needle bearing	809294
39.	Front output shaft	8131660
40.	Front output gear	8131680
42.	Oil seal	8131669
43.	Input oil seal	8131684
48.	Input bearing	8131682
50.	Input gear	8131685
54.	Rear output inner bearing cone	52799
55.	Rear output inner bearing cup	52800
56.	Rear output bearing shim kit	933743
59.	Rear output bearing outer cup	3124570
60.	Rear output bearing outer cone	933737
61.	Ball	453593
62.	Small parts kit	935758

Transfer Case

 NP 242

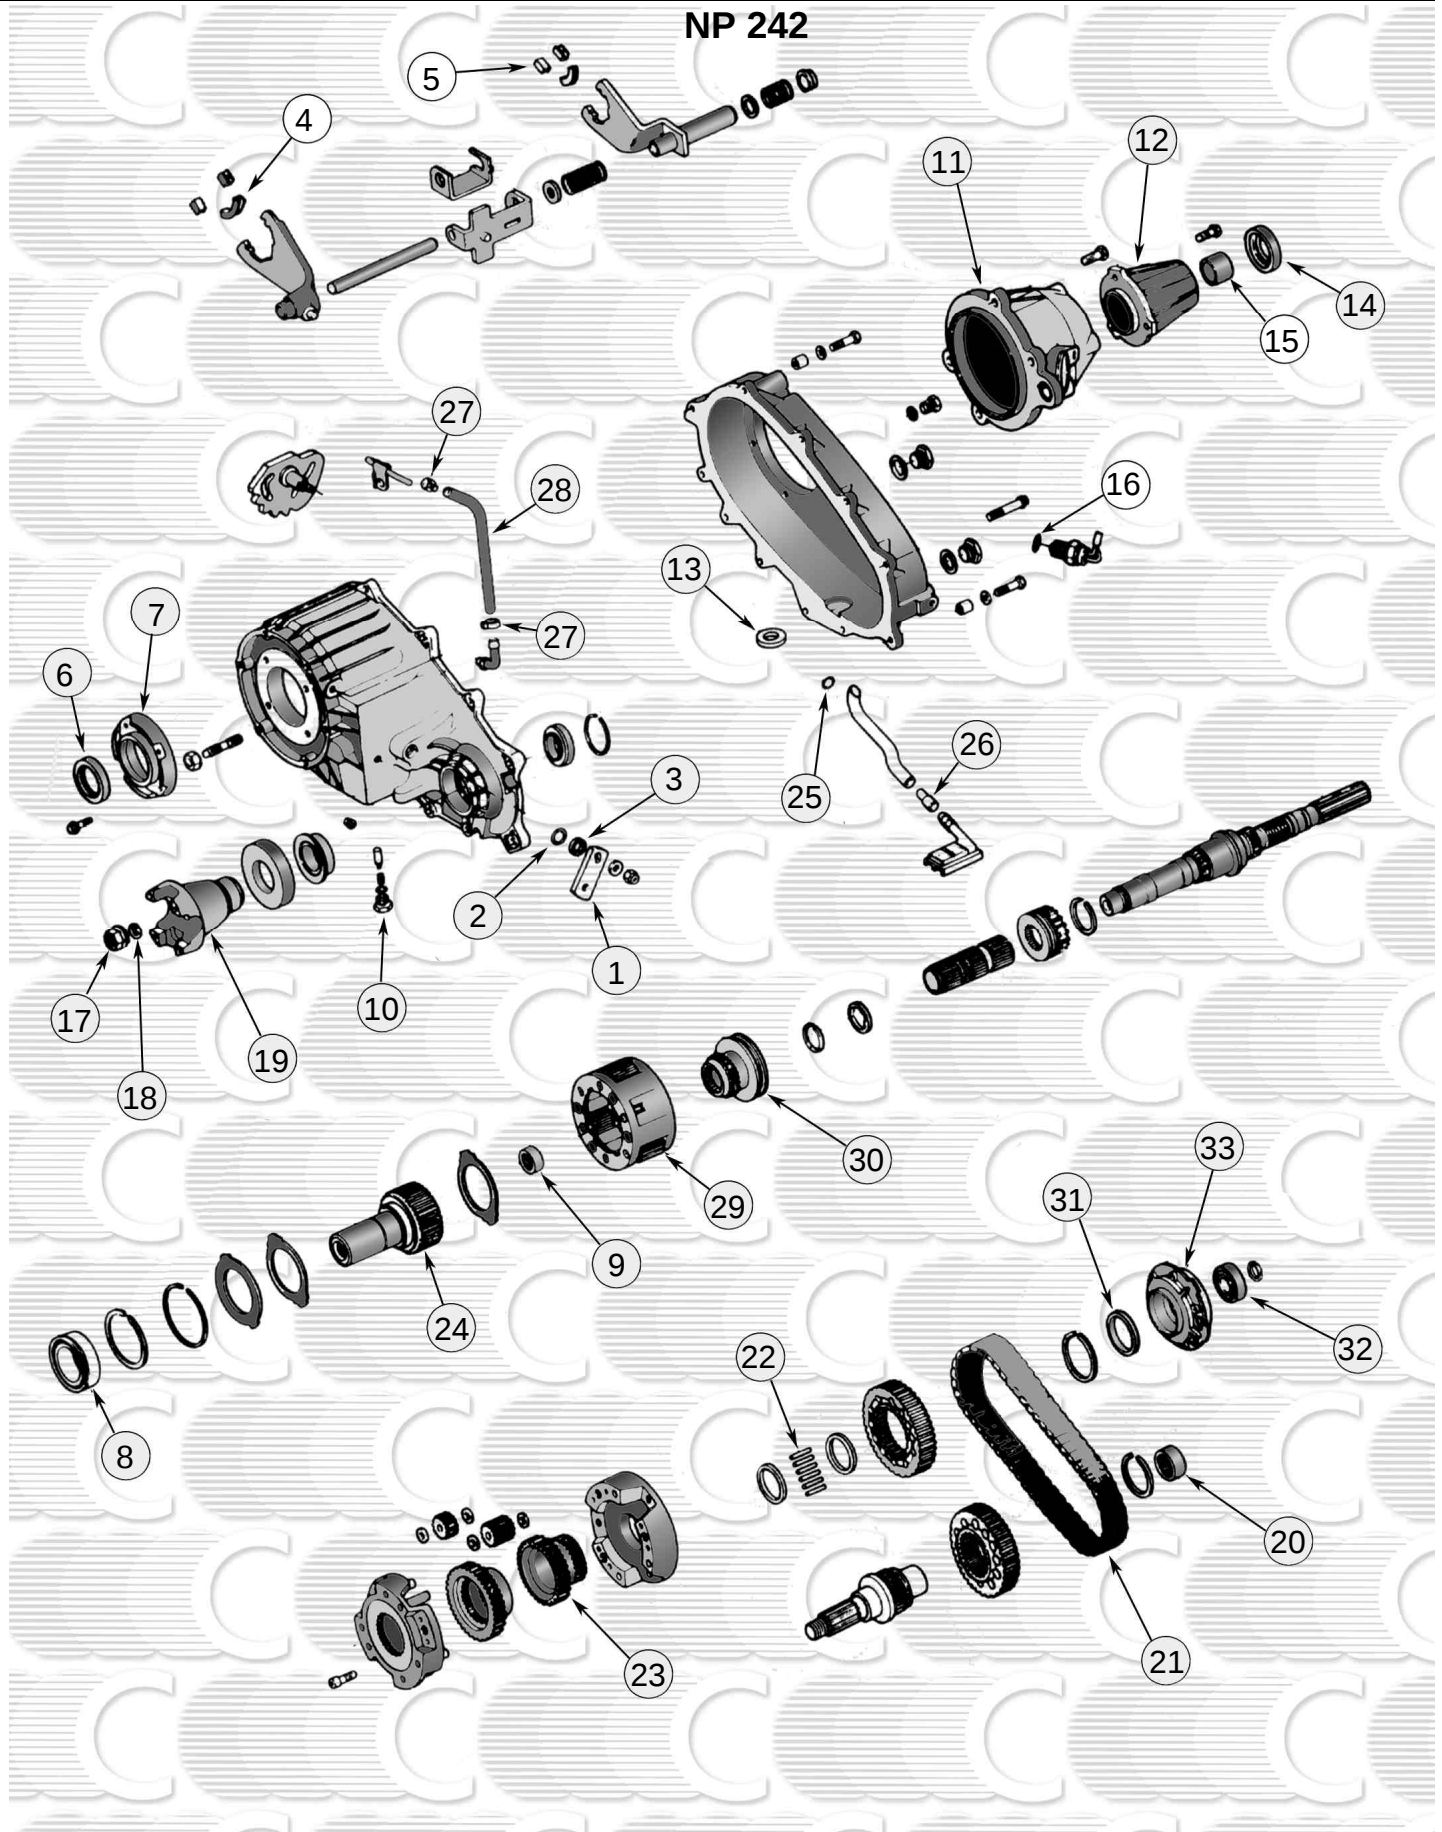


Transfer Case

NP 242

NO.	DESCRIPTION	REPLACES PART #
1.	Grommet	53004810
2.	O-Ring	4167963
3.	Retaining Ring, Shift Lever	4167964
4.	Pad Kit, Shift Fork (Outer)	4167969
	Pad Kit, Shift Fork (Center)	4167970
5.	Pad Kit, Shift Fork (Outer)	4167969
	Pad Kit, Shift fork (Center)	4338376
6.	Seal, Front Retainer	4167929
7.	Retainer	4338973
8.	Input Ball Bearing	4746155
9.	Input Needle Pilot Bearing	83503507
10.	Seal	4167963
11.	Retainer	83503524
	Retainer	4638955
12.	Extension	83503156
13.	Magnet	3681601
14.	Seal, Rear Output	4638904
	Seal, Rear Output	4798117
15.	Bushing	8134490
16.	Seal	4338956
17.	Nut	4167924
18.	Washer	4210973
19.	Yoke, Front Transfer Case	4856142
20.	Bearing	4269189
21.	Chain	83504575
	Chain	4638890
22.	Roller Set	83503543
23.	Sprocket	83503530
24.	Input Gear	4728163
	Input Gear	4796972
	Input Gear	4798126
25.	Seal	4338942
26.	Hose (1/4")	4443175
27.	Clamp	33000786
28.	Hose (5/16")	4443176
29.	Planetary Gear	53006087
30.	Range Sleeve	53006090
31.	Seal	4210603
32.	Bearing, Front Output	4338892
33.	Oil Pump	4338936

Transfer Case

 NP 231

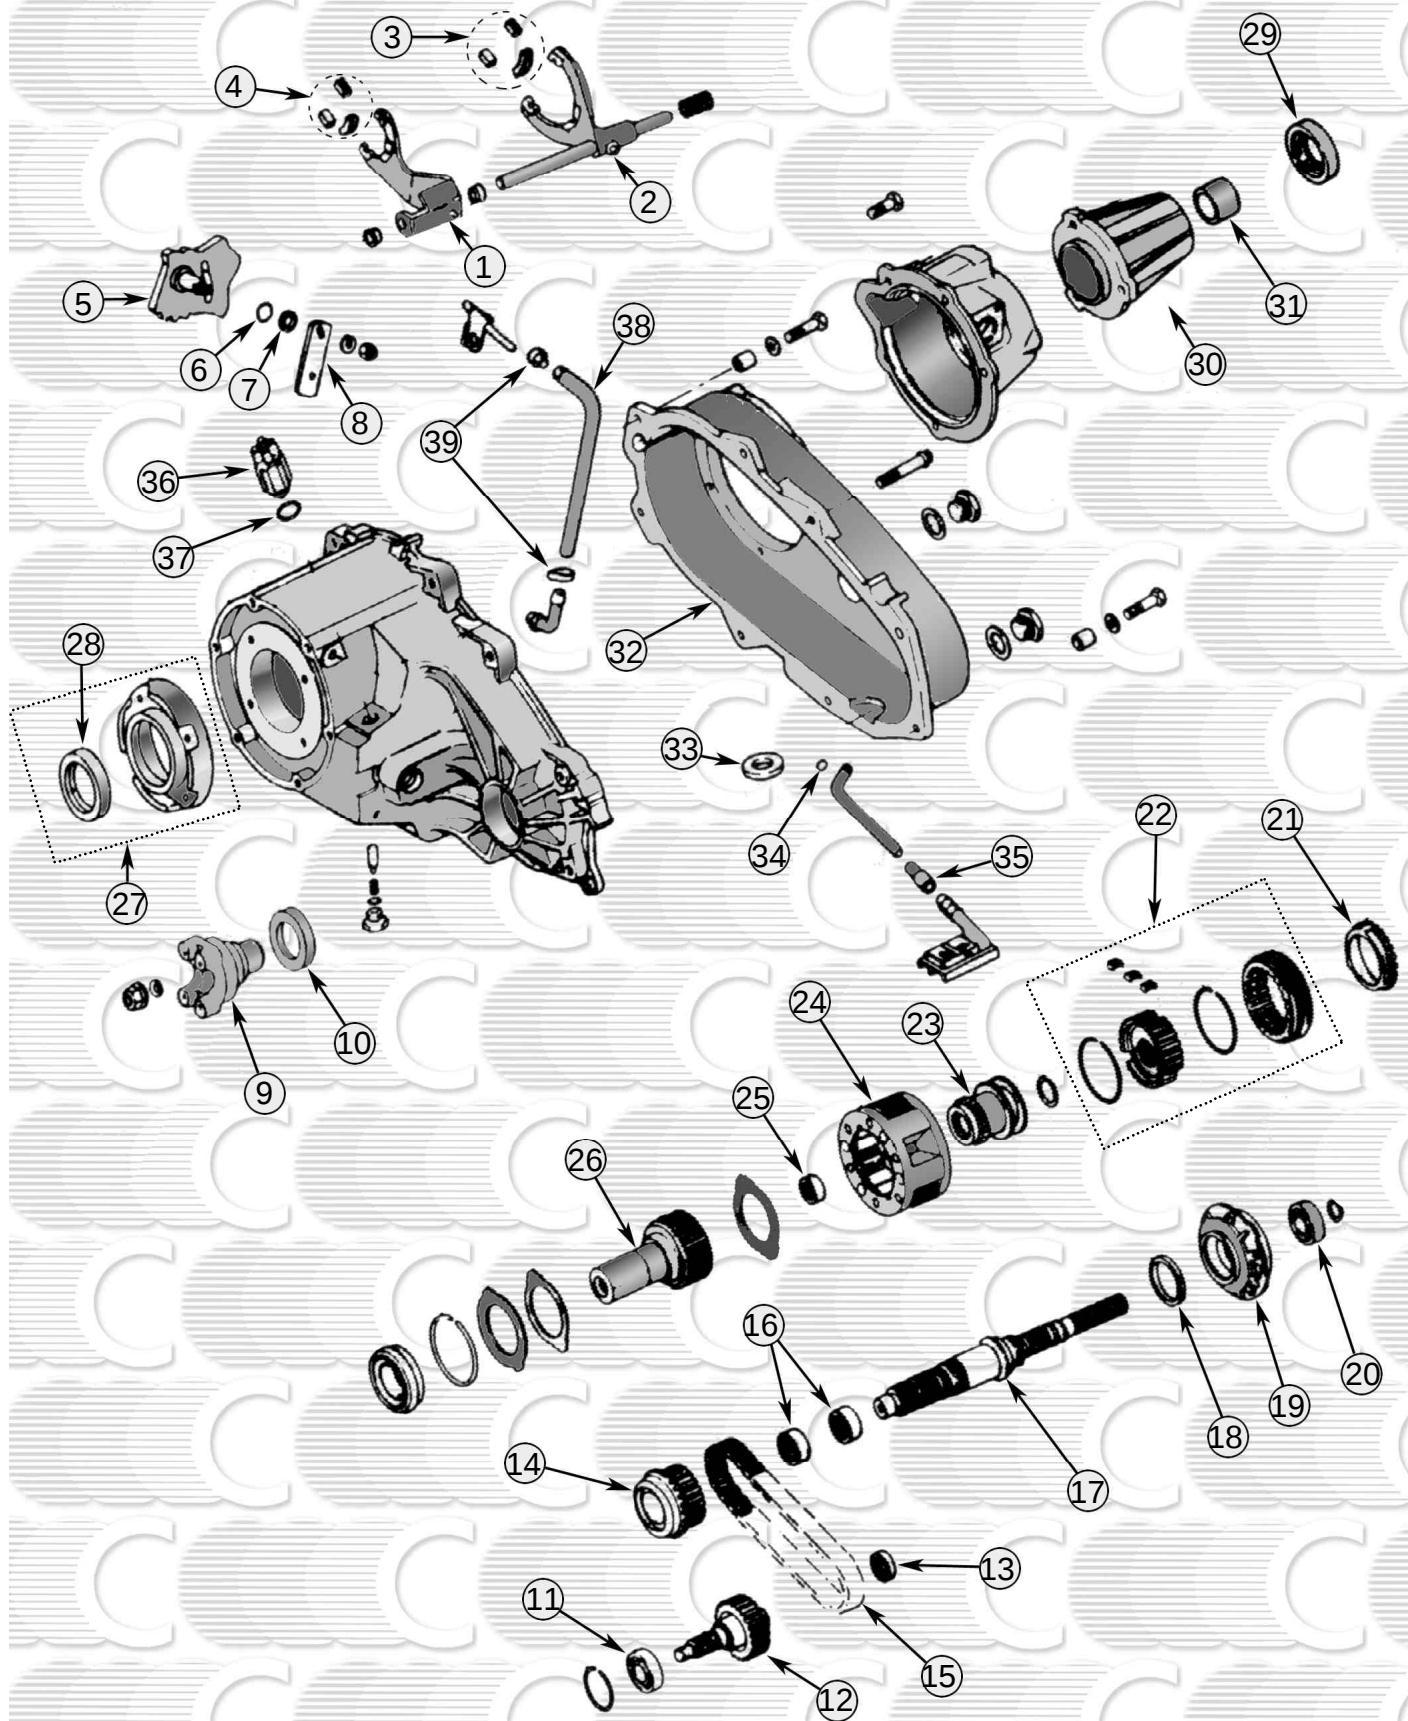


Transfer Case

NP 231

NO.	DESCRIPTION	REPLACES PART #
1.	Range Shift Fork	4638913
2.	Mode Shift Transfer Fork	4338920
3.	Center Pad	4219073
4.	Shift Fork Pad	4167969
5.	T.C. Shifting Sector	4638844
6.	Sector Seal O-Ring	4167963
7.	Sector Seal	4167964
8.	Grommet	53004810
9.	Front Output Shaft Yoke	4446494
	Front Output Shaft Yoke	83502829
	Front Output Shaft Yoke (XJ,ZG)	4798120
10.	Yoke Seal	4338893
	Yoke Seal	4798112
11.	Front Output Shaft Bearing	4338892
12.	Output Shaft	4338934
13.	Bearing	4269189
14.	Drive Sprocket	4741238
	Drive Sprocket	4796908
	Drive Sprocket	4796966
15.	Chain	4338935
16.	Sprocket Bearings	4269185
17.	Main Drive Shaft	83503141
18.	Oil Seal	4210603
19.	Oil Pump Housing	4338936
20.	Bearing	4338892
21.	Thrust Ring	4329526
22.	Mode Shift Synchronizer Assy.	4505361
23.	Range Shift Hub	530060893
	Range Shift Hub	4796906
24.	Planetary Gear	53006087
25.	Input Pilot Bearing	4338913
	Input Pilot Bearing	4746155
26.	Input Gear (27 Teeth)	53006083
	Input Gear (23 Teeth)	53006085
	Input Gear (23 Teeth)	83506065
	Input Gear (23 Teeth)	4761068
	Input Gear	4796956
	Input Gear	4796965
	Input Gear (XJ, ZG)	4798113
27.	Retainer	4338972
28.	Oil Seal	4167929
29.	Rear Seal, Transfer Case	4638904
	Rear Seal, Transfer Case	4798117
30.	Housing Extension, Rear Transfer Case	83503156
31.	Extension Bushing	8134490
32.	Rear Half Case	83503153
33.	Magnet	3681601
34.	O-Ring	4338942
35.	Hose	4443175
36.	Vacuum Switch	53001101
	Vacuum Switch	8134473
37.	O-Ring Seal	4338956
38.	Hose (5/16")	4443176
39.	Clamp	33000786
40.	Complete install kit for NP 231	231-MASKIT (NP)

Transfer Case

 NP 208

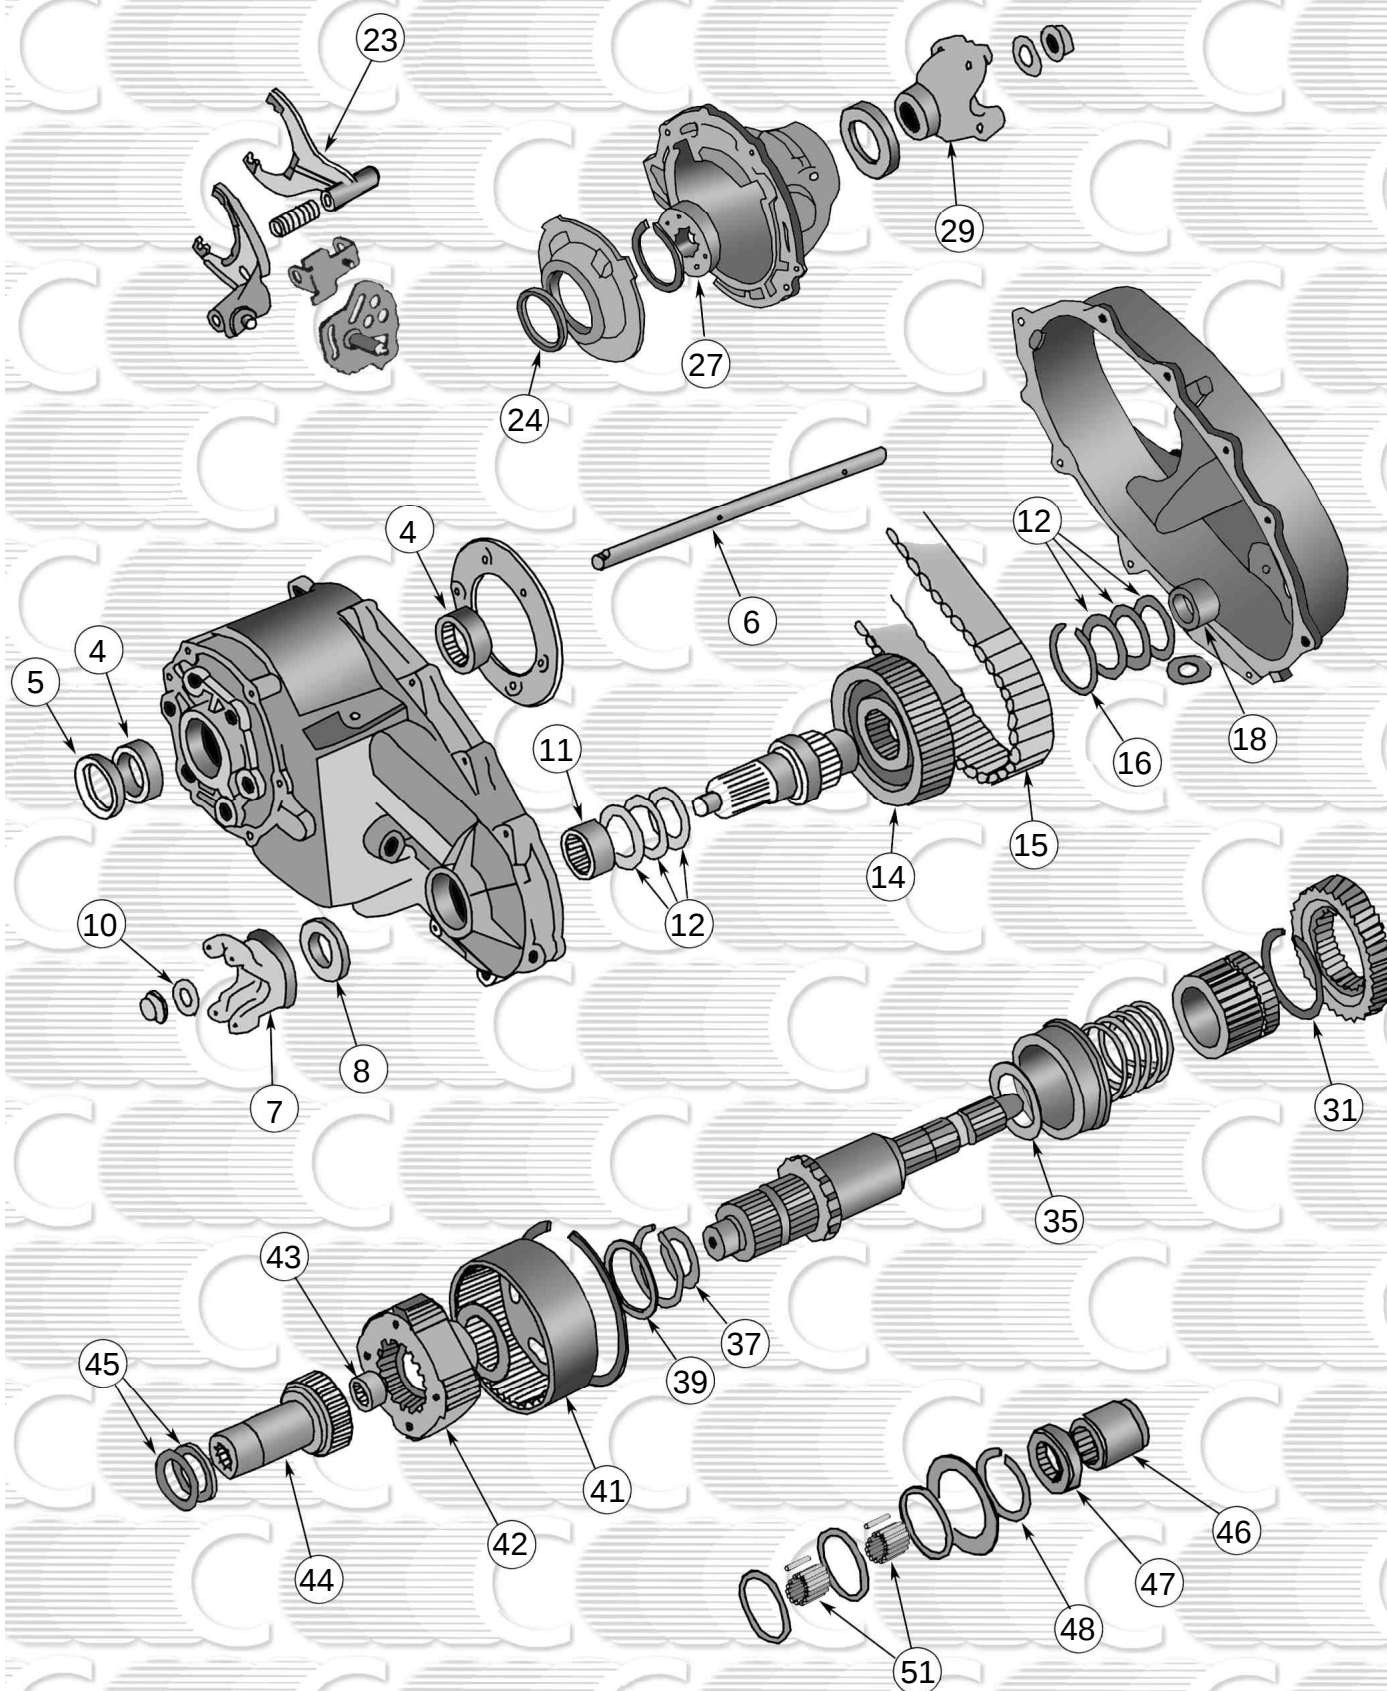


Transfer Case

NP 208

NO.	DESCRIPTION	REPLACES PART #
4.	Input shaft bearing	8130868
5.	Input shaft oil seal	8130870
	Input shaft oil seal (1987-90)	5359457
6.	Shift rail	8130822
7.	Front output yoke	8130818
8.	Output oil seal	8130808
	Output oil seal(1987-90)	83505290
10.	Seal washer	8130815
11.	Front output shaft bearing	8130869
12.	Front output shaft bearing assy.	8130819
14.	Sprocket	8130975
15.	Chain	8130977
16.	Retaining ring	8130802
18.	Bearing	8130836
23.	fork	8130851
24.	Pump housing seal	8130982
27.	Rear output bearing	8130807
	Rear output bearing (1983-90)	8136626
29.	Rear yoke	8130817
	Rear yoke (1987-90)	83503578
31.	Sprocket stop ring	8130970
35.	Thrust washer	8130967
37.	Main shaft thrust bearing	8130879
39.	Thrust washer	8130865
41.	Annulus gear (1979-82)	8130864
42.	Planetary gear	8130862
43.	Input bearing	8130878
44.	Input gear	8130877
45.	Input thrust bearing kit (1979-82)	8130875
46.	Speedometer drive gear	8130827
47.	Oil pump	8130826
48.	Retaining ring	8130974
51.	Roller bearing	8130972

Transfer Case

 NP 228 / 229

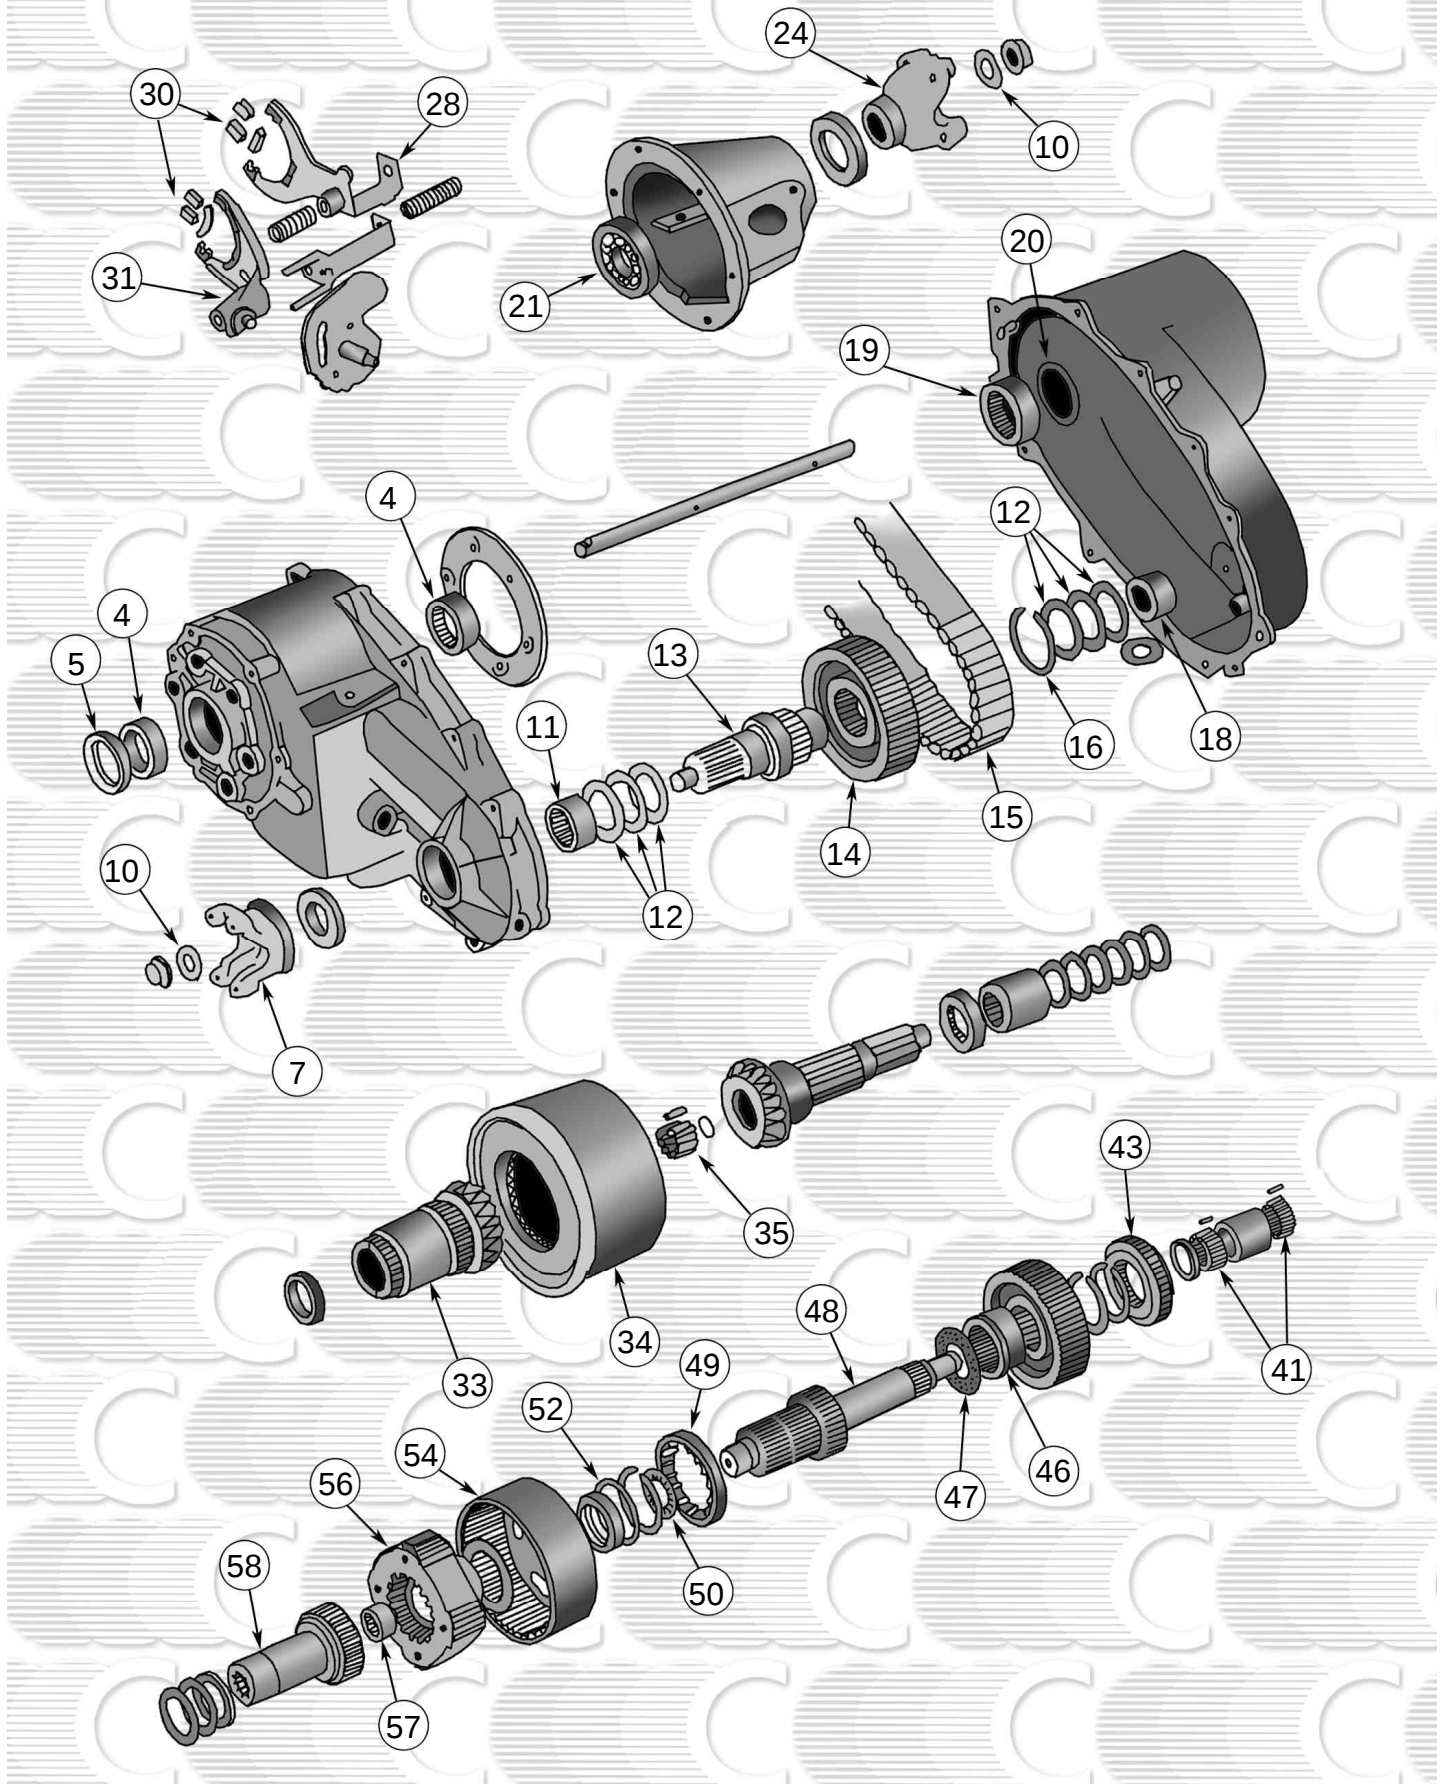

Transfer Case


NP 228 / 229

NO.	DESCRIPTION	REPLACES PART #
4.	Input shaft bearing	8130868
5.	Input shaft oil seal (1982-86)	8130870
	Input shaft oil seal (1987-90)	5359457
7.	Front yoke (1982-86)	8134272
	Front yoke (1987-89)	83503586
	Front yoke (1990)	15286
10.	Seal	8130815
11.	Bearing (1981-89)	8130869
	Bearing (1990)	4269186
12.	Bearing assy. (1981-89)	8130819
	Bearing assy. (1990)	15127
13.	Front output shaft (1981-89)	8130850
14.	Sprocket	8130849
15.	Chain	8130831
16.	Retaining ring (1981-89)	8130802
	Retaining ring (1990)	4167891
17.	Magnet (1990)	3681601
18.	Front output rear bearing (1981-89)	8130836
	Front output rear bearing (1990)	4269183
19.	Output shaft inner bearing (1981-89)	8133644
	Output shaft inner bearing (1990)	15462
20.	Seal (1981-86)	8133643
	Seal (1987-90)	8130982
21.	Output bearing	8130807
24.	Rear yoke (1981-86)	8130817
	Rear yoke (1987-89)	83503578
	Rear yoke (1990)	13775
28.	Mode fork	8134275
30.	Pad kit (1981-89)	8134279
	Pad kit (1990)	15866
31.	Range fork (1981-89)	8134276
	Range fork (1990)	15618
33.	Side gear (1981-89)	8131608
	Side gear (1990)	13836
34.	Viscous coupling (1981-90)	8130800
35.	Roller bearing (1981-86)	8130804
41.	Roller bearing (1981-86)	8130846
	Roller bearing (1987-90)	83500288
43.	Viscous clutch gear (1981-89)	8130801
	Viscous clutch gear (1990)	13854
46.	Side clutch gear	8133633
47.	Main shaft thrust washer (1981-89)	8130844

Transfer Case

48.	Main shaft (1981-89)	8134274
	Main shaft (1990)	15636
49.	Sleeve (1981-89)	83502516
	Sleeve (1990)	16111
49A.	Sleeve (1981-89)	83502611 (NP)
	Sleeve (1990)	16112 (NP)
50.	Thrust bearing (1981-89)	8130879
	Thrust bearing (1990)	4269182
52.	Thrust washer (1981-89)	8130865
	Thrust washer (1990)	4167959
54.	Annulus gear (1981-89)	8130864
	Annulus gear (1990)	4167954
56.	Planetary gear (1981-89)	83500383
	Planetary gear (1990)	4329198
57.	Input bearing (1981-89)	8130878
	Input bearing (1990)	4269187
58.	Input shaft (1981-89)	83500492
	Input shaft (1990)	15786

 Transfer Case

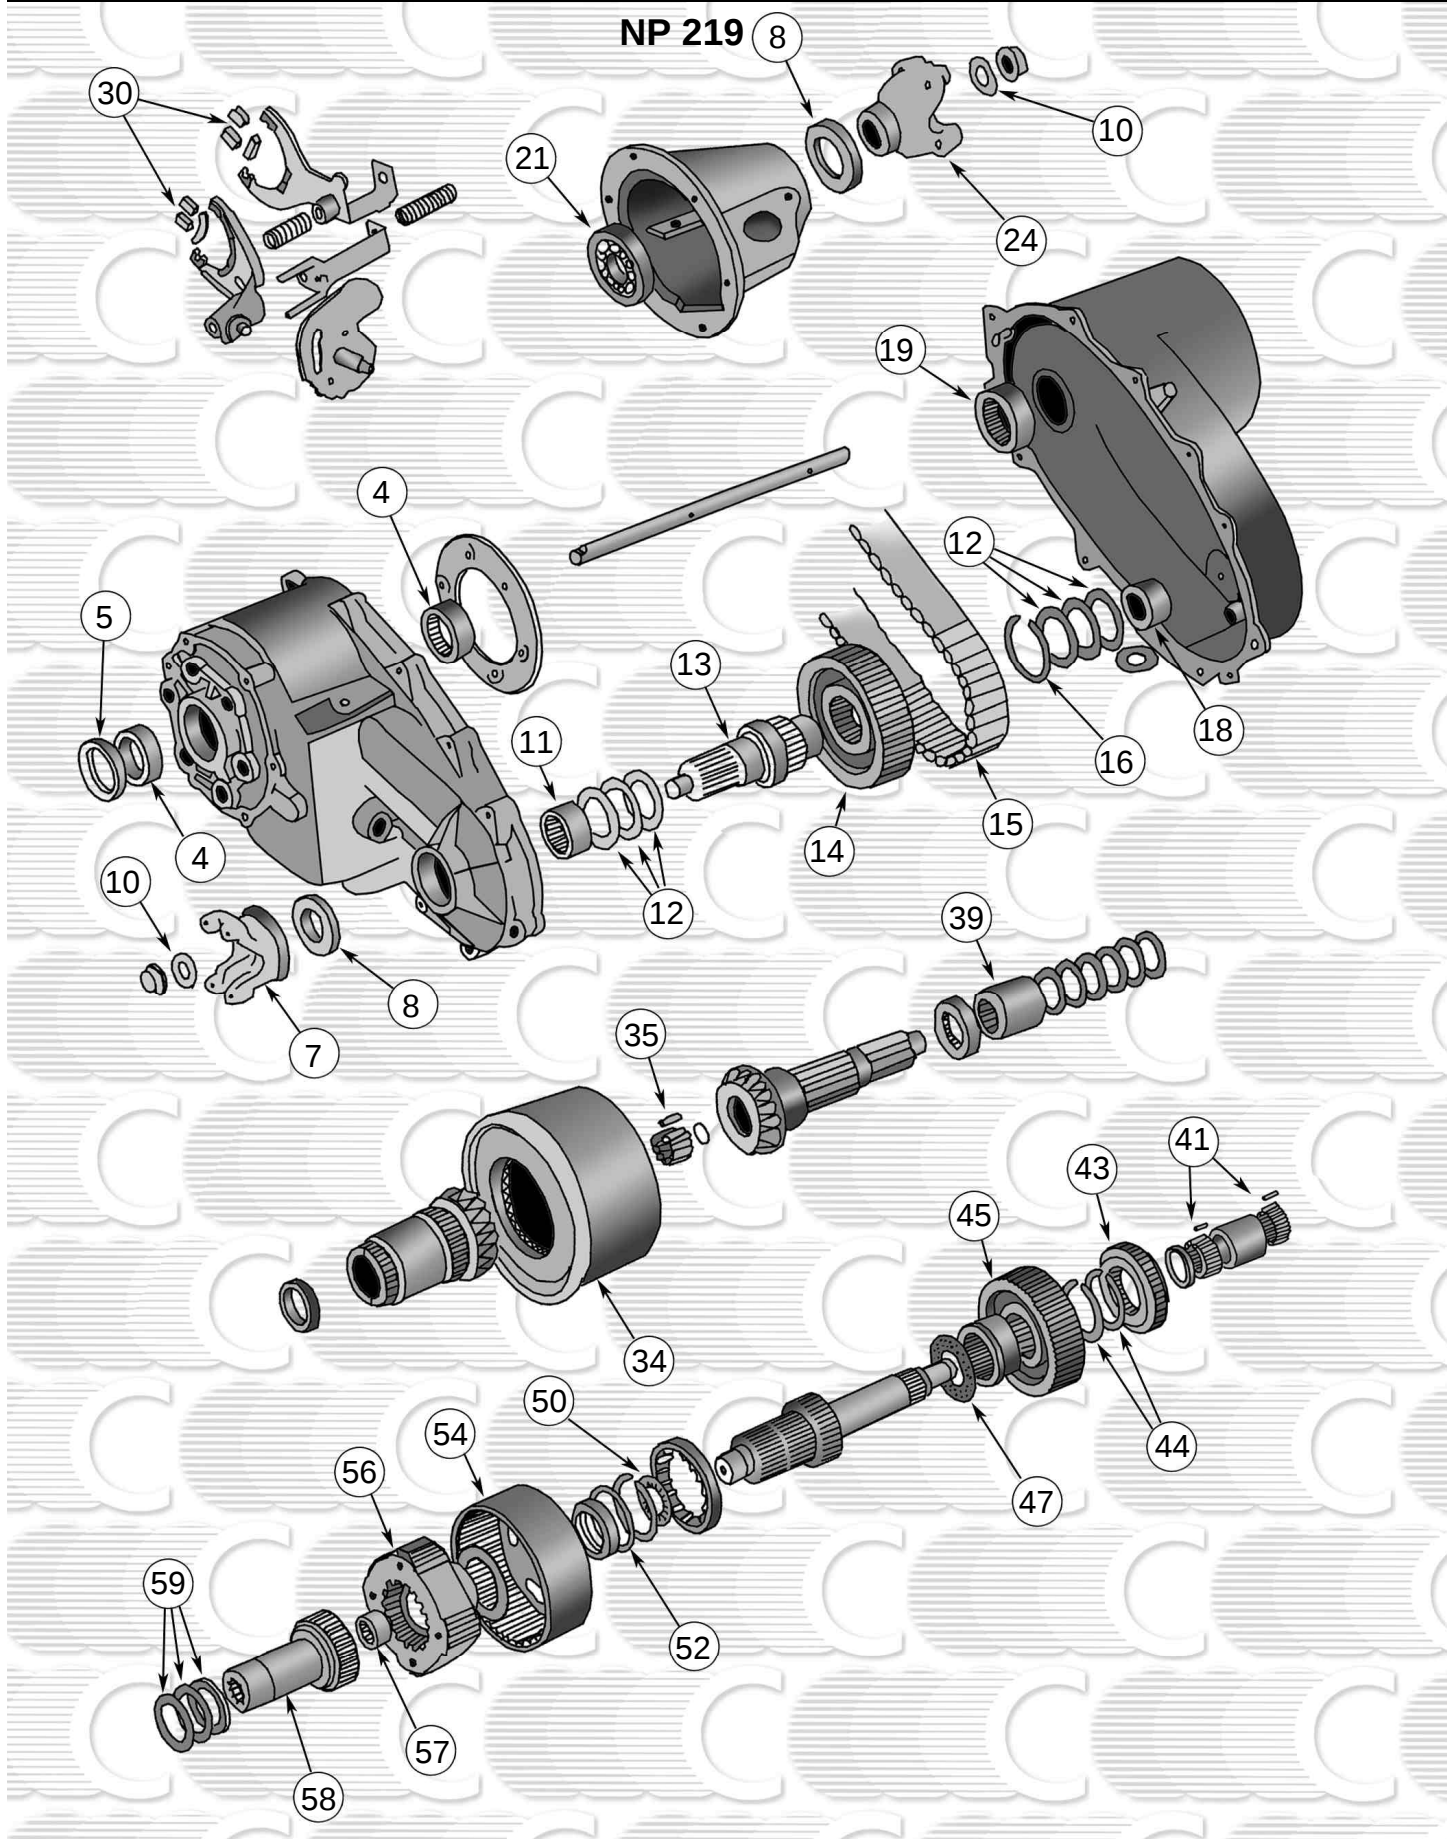

Transfer Case

NP 219

NO.	DESCRIPTION	REPLACES PART #
4.	Input shaft bearing	8130868
5.	Input shaft oil seal	8130870
7.	Front output yoke	8130818
8.	Output oil seal	8130808
10.	Seal washer	8130815
11.	Front output shaft bearing	8130869
12.	Front output shaft bearing assy.	8130819
13.	Front output shaft	8130850
14.	Sprocket	8130849
15.	Chain	8130831
16.	Retaining ring	8130802
18.	Front output shaft rear bearing	8130836
19.	Rear output inner bearing	8130835
21.	Rear output outer bearing	8130807
24.	Rear yoke assy.	8130817
30.	Pad kit	8130859
34.	Viscous coupling	8130800
35.	Pilot bearing roller	8130804
39.	Speedometer drive gear	8130827
41.	Side gear roller	8130846
43.	Viscous clutch gear	8130801
44.	Retaining ring	8130802
45.	Sprocket	8130849
47.	Main shaft thrust washer	8130844
50.	Main shaft thrust bearing	8130879
52.	Thrust washer	8130865
54.	Annulus gear	8130864
56.	Planetary gear	8130862
57.	Input bearing	8130878
58.	Input gear	8130877
59.	Input thrust bearing kit	8130875