


Firing Order: Locations

Firing Order Specification

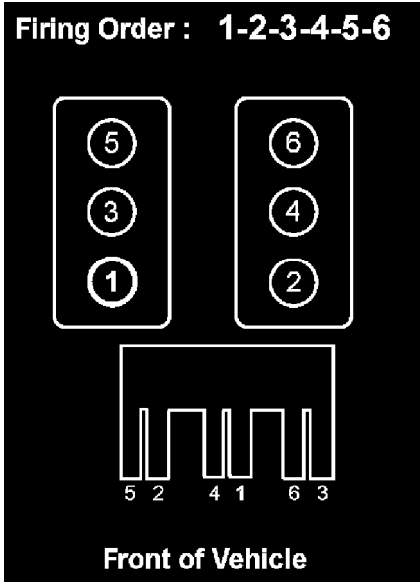

Firing order 1-2-3-4-5-6