


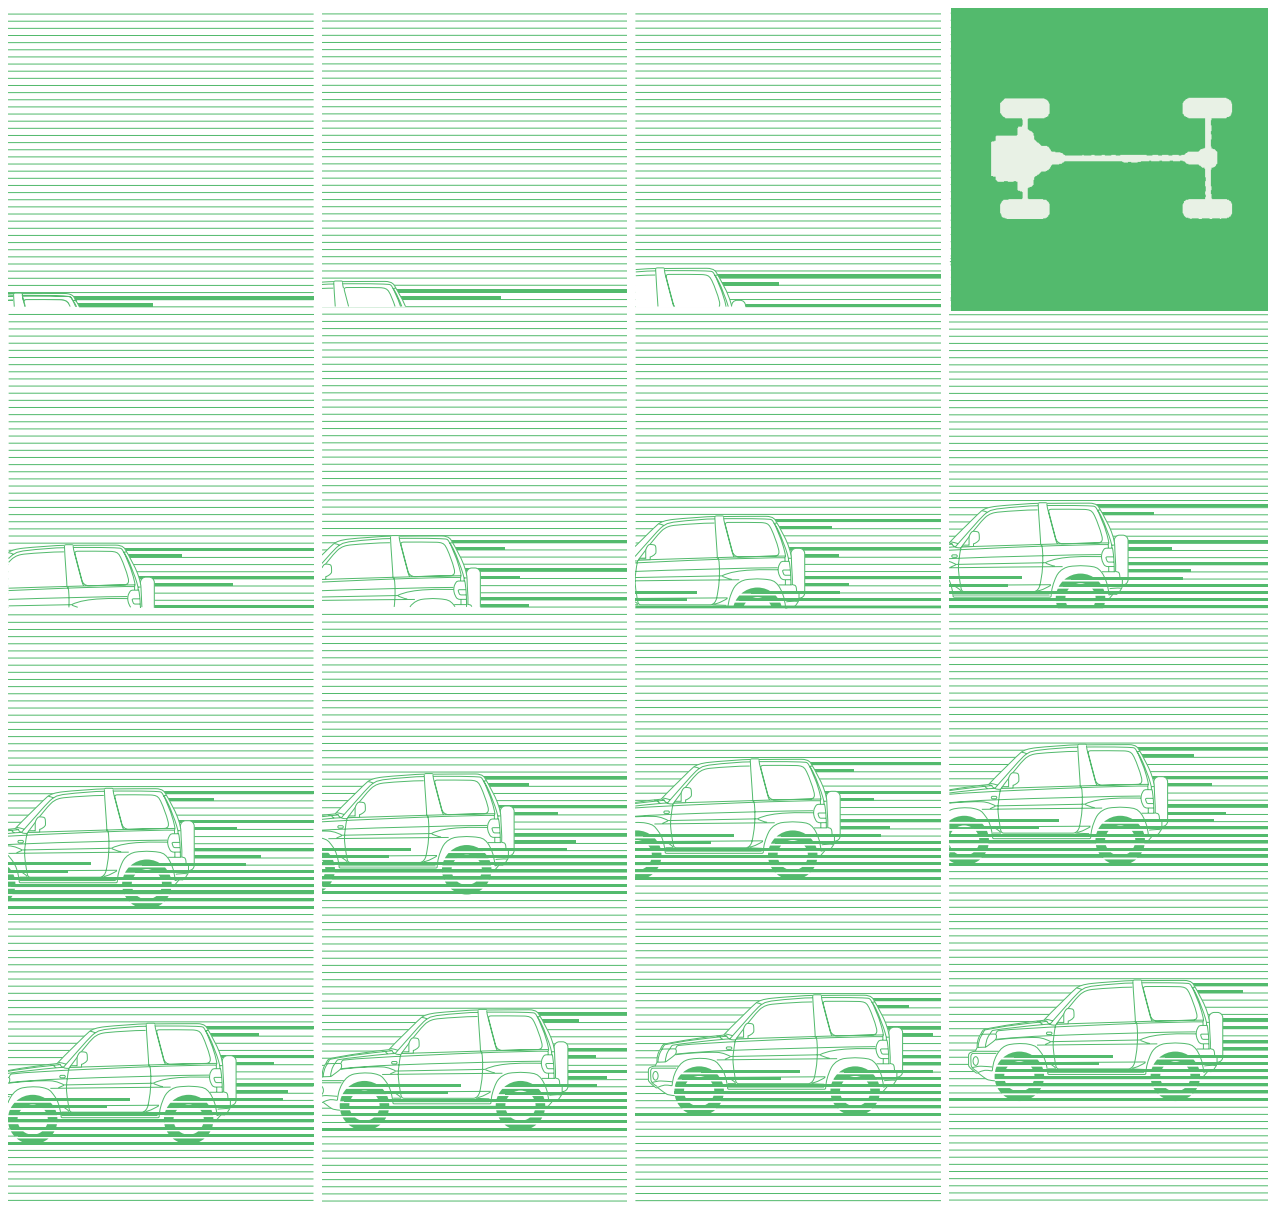

Workshop Manual

chassis

PAJERO PININ '01



PAJERO PININ

WORKSHOP MANUAL

FOREWORD

This Workshop Manual contains procedures for service mechanics, including removal, disassembly, inspection, adjustment, reassembly and installation. Use the following manuals in combination with this manual as required.

TECHNICAL INFORMATION MANUAL	
WORKSHOP MANUAL	IKRE00E1
ELECTRICAL WIRING	EKRE00E1
BODY REPAIR MANUAL	BKRE00E1
ENGINE GROUP	PWEE9502-E
PARTS CATALOGUE	I603F509D□

All information, illustrations and product descriptions contained in this manual are current as at the time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.



"GDI" is a trade mark which Mitsubishi Motors Corporation holds.

General	00
Engine	11
Engine Lubrication	12
Fuel	13
Engine Cooling	14
Intake and Exhaust	15
Engine Electrical	16
Engine and Emission Control	17
Clutch	21
Manual Transmission	22
Automatic Transmission	23
Propeller Shaft	25
Front Axle	26
Rear Axle	27
Wheel and Tyre	31
Power Plant Mount	32
Front Suspension	33
Rear Suspension	34
Service Brakes	35
Parking Brakes	36
Steering	37
Body	42
Exterior	51
Interior and Supplemental Restraint System (SRS)	52
Chassis Electrical	54
Heater, Air Conditioner and Ventilation	55

WARNING REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLE

WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).**
- (2) The SRS components should not be subjected to temperature of 93°C or more. So, remove the SRS-ECU, driver's and front passenger's air bag modules, clock spring, side impact sensors and front seat assemblies (side air bag modules) before drying or baking the vehicle after painting.**
- (3) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.**
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS), before beginning any service or maintenance of any SRS component or any SRS-related component.**

NOTE

Section titles with asterisks (*) in the table of contents in each group indicate operations requiring warnings.

ENGINE

CONTENTS

ENGINE <4G9-GDI>	11A
ENGINE <4G9-MPI>	11B



FUEL



CONTENTS

GASOLINE DIRECT INJECTION (GDI)	13A
FUEL SUPPLY	13B
MULTIPOINT FUEL INJECTION (MPI) <4G9>	13C

SERVICE BRAKES

CONTENTS

BASIC BRAKE SYSTEM	35A
ANTI-SKID BRAKING SYSTEM (ABS) <4WD>	35B



INTERIOR AND SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

CONTENTS

INTERIOR	52A
SUPPLEMENTAL RESTRAINT SYSTEM (SRS)	52B



CHASSIS ELECTRICAL

CONTENTS

CHASSIS ELECTRICAL	54A
SMART WIRING SYSTEM (SWS)	54B

