


HARNESS LAYOUT

Engine No. 2 Harness (VG33E and VG33ER Models)

EKS006Y7

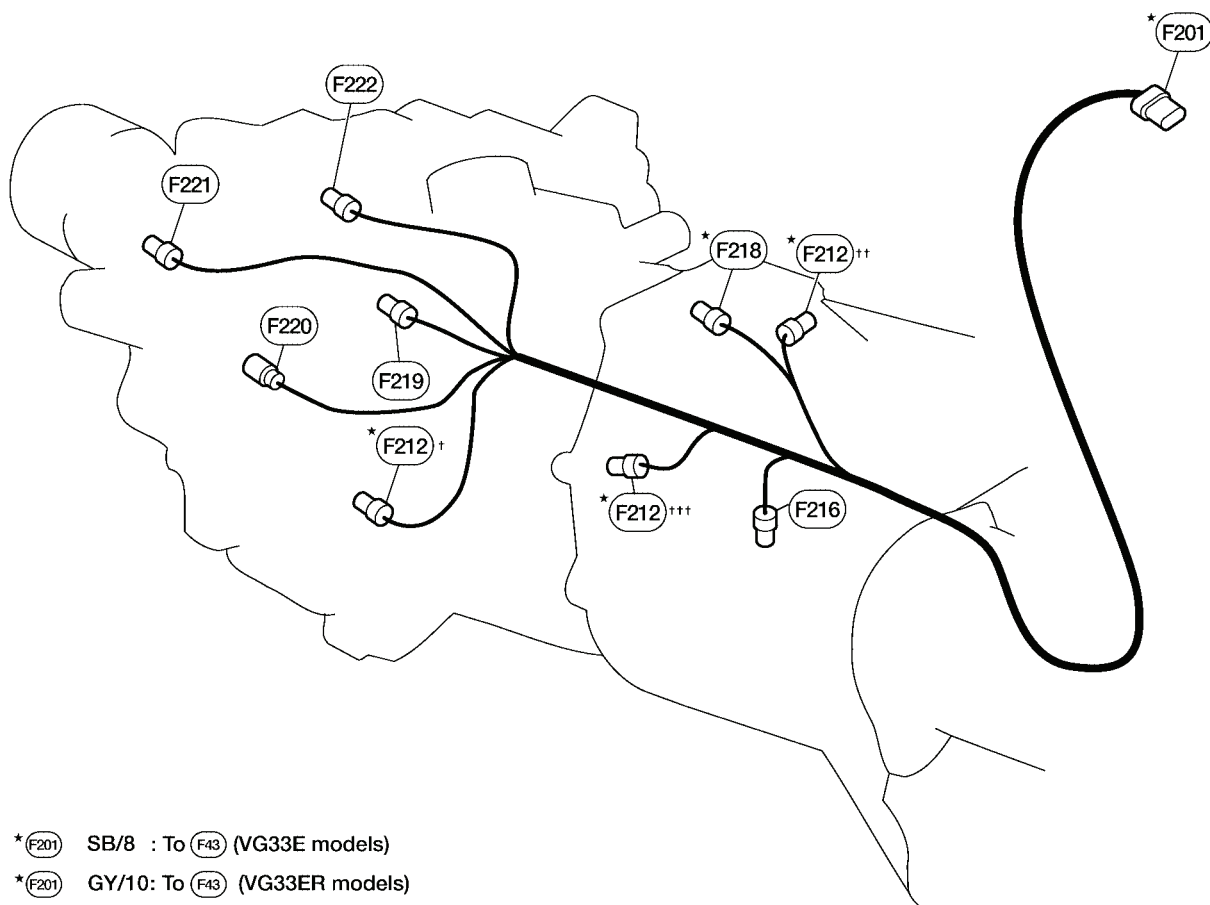

- * (F201) SB/8 : To (F43) (VG33E models)
- * (F201) GY/10: To (F43) (VG33ER models)
- * (F212)[†] GY/2 : Vehicle speed sensor (with 4WD)
- * (F212)^{††} GY/2 : Vehicle speed sensor (with 2WD M/T)
- * (F212)^{†††} GY/2 : Vehicle speed sensor (with 2WD A/T)
- (F216) GY/2 : Back-up lamp switch (with M/T)
- * (F218) B/2 : Park/neutral position (PNP) switch (with M/T)
- (F219) GY/1 : 4WD switch (with M/T)
- (F220) GY/1 : 4WD switch (with M/T)
- (F221) GY/2 : 4WD switch (with A/T)
- (F222) B/2 : Transfer neutral position switch (with A/T)

* : Be sure to connect and lock the connectors securely after repair work. Failure to do so may cause the ECM to have diagnostic trouble codes.
Do not disconnect these connectors except in the case of working according to WORK FLOW of TROUBLE DIAGNOSES in EC and AT sections.

WEL964A