


D 2.5 VGT > Aquecimento, ventilação e ar condicionado > Aquecedor > Unidade de aquecimento > Componentes e Localização

## **COMPONENTS**

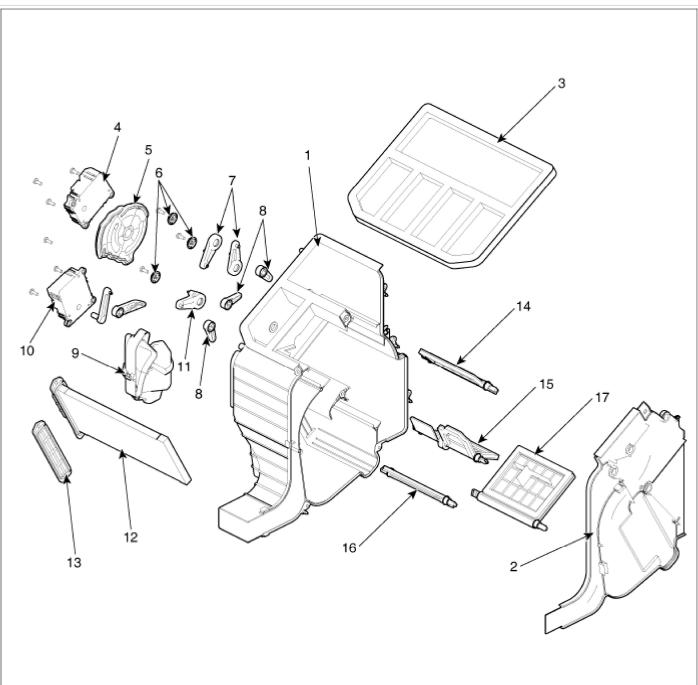


- 1. Heater case (L)
- 2. Heater separator (Dual type)
- 3. Heater seal
- 4. Mode actuator
- 5. Mode actuator lever
- 6. Washer
- 7. Vent / Def sub lever
- 8. Vent / Foot Def lever
- 9. Shower duct (L)

- 10.Temp actuator
- 11. Foot sub lever
- 12. PTC heater core
- 13. PTC cover
- 14. Def door
- 15. Vent door
- 16. Foot door
- 17. Temp door



D 2.5 VGT > Aquecimento, ventilação e ar condicionado > Aquecedor > Unidade de aquecimento > Componentes e Localização

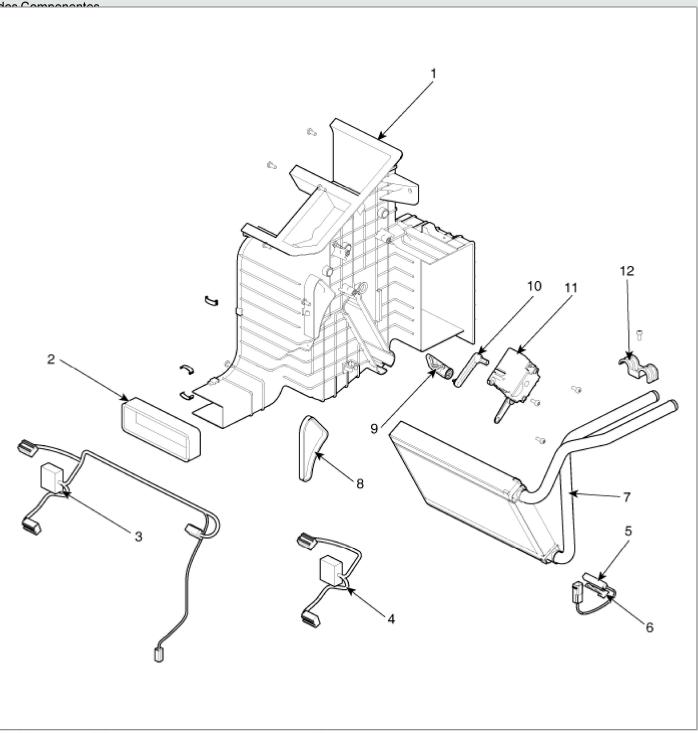

- 1. Heater case(R)
- 2. Foot seal
- 3. Wire haness
- 4. Wire haness
- 5. Water temperature sensor
- 6. Water temperature sensor stopper
- 7. Heater core
- 8. Foot lining seal
- 9. Temp actuator door
- 10. Temp actuator door lever
- 11. Temp actuator
- 12. Heater core cover