



- Tighten dual pressure switch to specified torque.

Tightening torque

Dual pressure switch (a) : 10 N·m (1.0 kg-m, 7.5 lb-ft)

A/C Compressor Relay and A/C Condenser Cooling Fan Relay

INSPECTION

- 1) Disconnect negative (-) cable at battery.
- 2) Remove condenser cooling fan motor relay (2) and/or compressor relay (1) from vehicle.
- 3) Check that there is no continuity between terminal "c" and "d".
If there is continuity, replace relay.
- 4) Connect battery positive (+) terminal to terminal "b" of relay.
Connect battery negative (-) terminal "a" of relay.
Check continuity between terminal "c" and "d".
If there is no continuity when relay is connected to the battery, replace relay.

3. Compressor and condenser cooling fan fuse

