
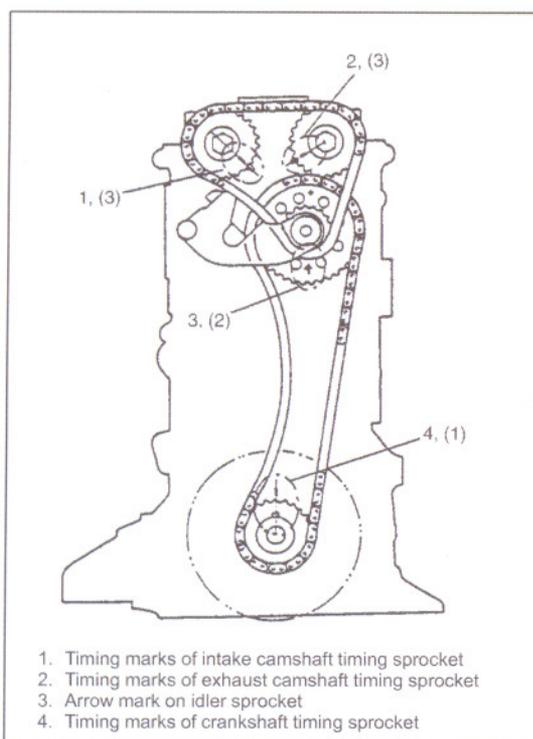


2ND TIMING CHAIN AND CHAIN TENSIONER

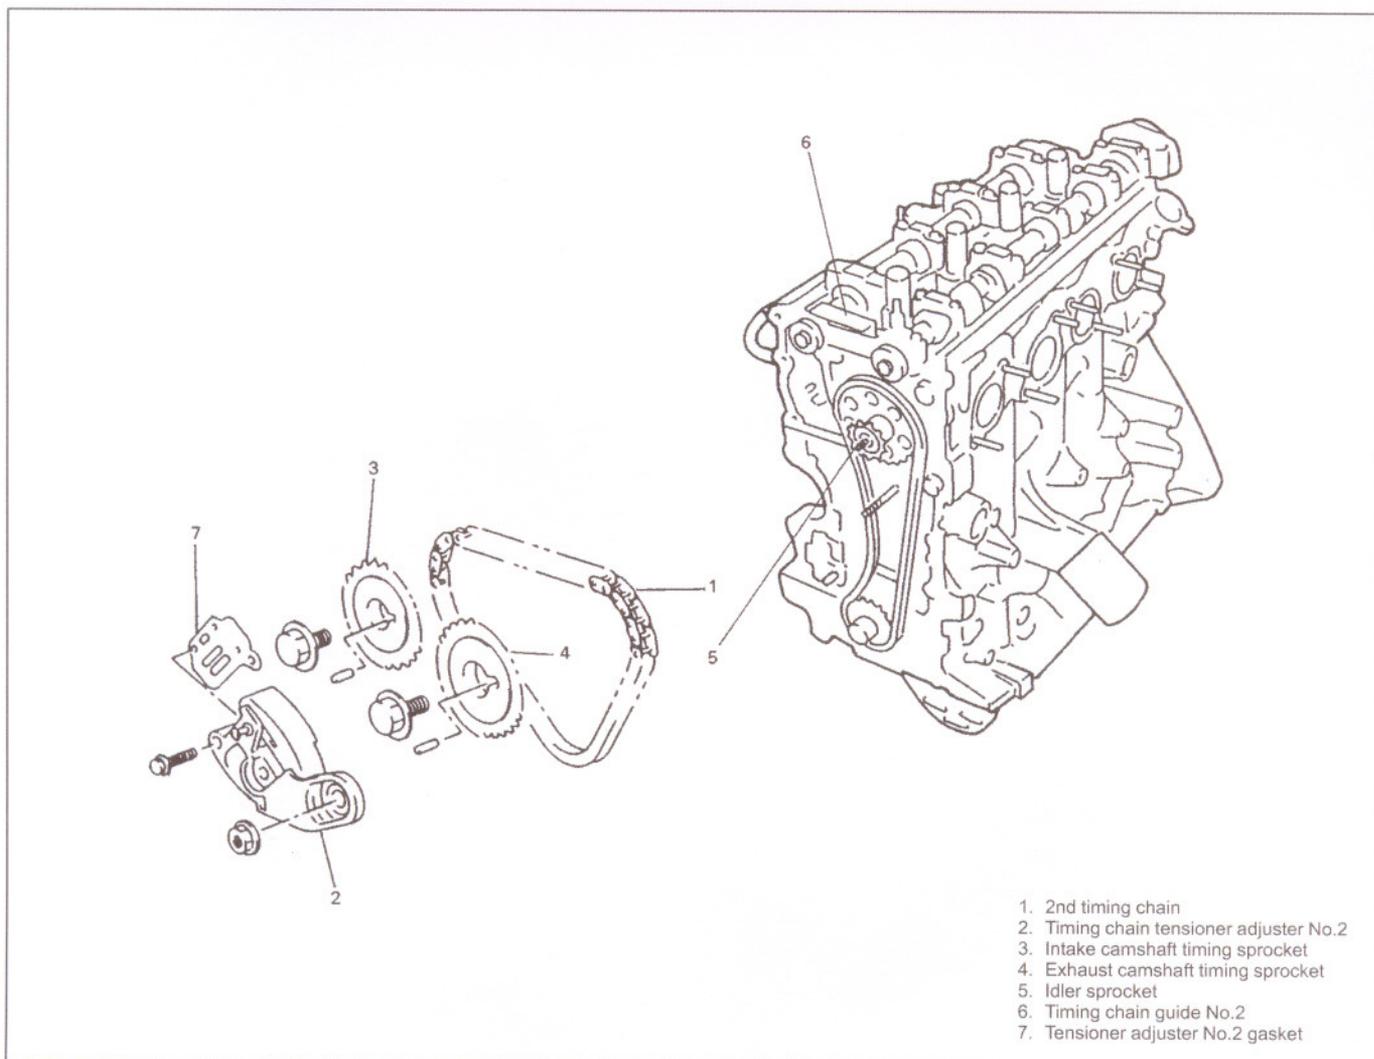

REMOVAL

- 1) Disconnect negative cable at battery.
- 2) Drain engine oil.
- 3) Drain coolant.
- 4) Remove oil pan and oil pump strainer.
Refer to item "OIL PAN AND OIL PUMP STRAINER" in this section for removal.
- 5) Remove cylinder head cover.
Refer to item "CYLINDER HEAD COVER" in this section for removal.
- 6) Remove timing chain cover.
Refer to item "TIMING CHAIN COVER" in this section for removal.
- 7) Turn crankshaft to meet following condition.
 - Key (1) on crankshaft position as shown.
 - Arrow mark on idler sprocket (2) points upward vertically.
 - The marks on sprockets (3) match with marks on cylinder head.

Note that this step must be followed for reinstallation of timing chain.