

2009 ~ 2012

**GRAND
VITARA**

Maintenance Schedule

Normal Driving Conditions



Way of Life!

Maintenance Interval	Service
12,500 km or 7.5 months	A
25,000 km or 15 months	A + B
37,500 km or 22.5 months	A
50,000 km or 30 months	A + B + C
62,500 km or 37.5 months	A
75,000 km or 45 months	A + B + E
87,500 km or 52.5 months	A
100,000 km or 60 months	A + B + C + D
112,500 km or 67.5 months	A
125,000 km or 75 months	A + B
137,500 km or 82.5 months	A
150,000 km or 90 months	A + B + C + E + F
162,500 km or 97.5 months	A
175,000 km or 105 months	A + B + G
187,500 km or 112.5 months	A
200,000 km or 120 months	A + B + C + D
212,500 km or 127.5 months	A
225,000 km or 135 months	A + B + E + G
237,500 km or 142.5 months	A
250,000 km or 150 months	A + B + C + H



NOTE

Maintenance interval based on time or mileage, whichever comes first.

“Inspect” denotes inspection, cleaning, adjustment, lubrication or replacement as required.

SERVICE A

- Inspect tires (including tire rotation)
- Inspect wheels
- Inspect steering system, steering wheel movement, linkage
- Inspect power steering
- Inspect all latches, hinges and locks
- Change engine oil and oil filter
- In addition to the above, inspect transfer oil and change differential oil at the 12,500 km/7.5 month maintenance interval

SERVICE B

- Inspect clutch for manual transmission, pedal and fluid level
- Inspect brake discs and pads (front, rear)
- Inspect brake drums and shoes (if equipped)
- Inspect brake hoses and pipes
- Brake fluid level check
- Inspect brake pedal stroke, adjustment
- Inspect parking brake lever and cable (lever movement check, adjustment)
- Inspect wheel bearings
- Inspect suspension system
- Inspect propeller shafts/Drive shafts
- Inspect manual transmission oil level
- Inspect automatic transmission (A/T) fluid level
- Inspect transfer oil (not required at 25,000 km/15 month maintenance interval)
- Inspect differential oil (not required at 25,000 km/15 month maintenance interval)
- Inspect air conditioner filter (if equipped)

SERVICE C

- Drive belt (inspect for damage)
- Inspect valve lash (clearance) (2009 4-cylinder)
- Inspect cooling system, hoses and connections
- Inspect exhaust pipes and mountings
- Inspect ignition coil (plug cap)
- Inspect fuel tank and cap
- Inspect fuel lines and connections
- Change engine coolant (Suzuki LLC, standard, green) (if installed)
- Replace air cleaner filter element
- Change manual transmission oil (other than Suzuki Gear Oil 75W-80)
- Change air conditioner filter (if equipped)

SERVICE D

- Inspect valve lash (clearance) (2010/2011 4-cylinder)
- Inspect emission related hoses and tubes
- Replace exhaust pipe mountings
- Replace spark plugs
- Replace brake fluid
- Change transfer oil

SERVICE E

- Inspect automatic transmission (A/T) fluid hose

SERVICE F

- Change engine coolant (Suzuki LLC, super, blue)
- Change manual transmission oil (Suzuki Gear Oil 75W-80)

SERVICE G

- Replace automatic transmission (A/T) fluid at 175,000 km

SERVICE H

- Replace EVAP canister
- Replace fuel filter
- Replace canister air suction filter

**2009 ~ 2012
GRAND
VITARA**

Maintenance Schedule

Severe Driving Conditions



Way of Life!

Maintenance Interval	Service
5,000 km or 3 months	A
10,000 km or 6 months	A + B
15,000 km or 9 months	A
20,000 km or 12 months	A + B
25,000 km or 15 months	A + C
30,000 km or 18 months	A + B
35,000 km or 21 months	A
40,000 km or 24 months	A + B
45,000 km or 27 months	A
50,000 km or 30 months	A + B + C + D
55,000 km or 33 months	A
60,000 km or 36 months	A + B
65,000 km or 39 months	A
70,000 km or 42 months	A + B
75,000 km or 45 months	A + C + E
80,000 km or 48 months	A + B
85,000 km or 51 months	A
90,000 km or 54 months	A + B
95,000 km or 57 months	A
100,000 km or 60 months	A + B + C + D + F
105,000 km or 63 months	A
110,000 km or 66 months	A + B
115,000 km or 69 months	A
120,000 km or 72 months	A + B
125,000 km or 75 months	A + C



NOTE

Maintenance interval based on time or mileage, whichever comes first.

“Inspect” denotes inspection, cleaning, adjustment, lubrication or replacement as required.

Replace Suzuki LLC Super Blue engine coolant at 150,000 km/90 months and every 75,000 km or 45 months thereafter.

Replace EVAP canister every 250,000 km or 180 months.

Replace fuel filter every 250,000 km or 150 months.

SERVICE A

- Change engine oil and oil filter
- Inspect air cleaner filter element

SERVICE B

- Inspect exhaust pipes and mountings
- Inspect brake discs and pads (front, rear)
- Inspect brake drums and shoes (if equipped)
- Inspect tires (including tire rotation)
- Inspect wheels
- Inspect bolts and nuts on suspension system
- Inspect propeller shafts/Drive shafts
- Inspect steering system, steering wheel movement, linkage
- Inspect power steering
- Inspect all latches, hinges and locks
- Inspect air conditioner filter (if equipped)
- In addition to the above, inspect manual transmission oil and transfer oil and change differential oil at the 10,000 km/6 month maintenance interval

SERVICE C

- Inspect drive belt (Engine accessory)
- Inspect clutch (for manual transmission), pedal and fluid level
- Inspect brake hoses and pipes
- Brake fluid level check
- Inspect brake pedal stroke check, adjustment
- Inspect parking brake lever and cable (lever movement check, adjustment)
- Inspect wheel bearings
- Inspect suspension system
- Replace air cleaner filter element
- Inspect manual transmission oil (Suzuki Gear Oil 75W-80)
- Change manual transmission oil (other than Suzuki Gear Oil 75W-80)
- Change automatic transmission (A/T) fluid
- Change transfer oil
- Change differential oil

SERVICE D

- Inspect valve lash (clearance) (2009 4-cylinder)
- Inspect cooling system hoses and connections
- Inspect ignition coil (plug cap)
- Inspect fuel tank and cap
- Inspect fuel lines and connections
- Change engine coolant (Suzuki LLC, standard, green) (if installed)
- Change air conditioner filter (if equipped)

SERVICE E

- Inspect automatic transmission (A/T) fluid hose
- Change manual transmission oil (Suzuki Gear Oil 75W-80)

SERVICE F

- Inspect valve lash (clearance) (2010/2011 4-cylinder)
- Emission related hoses and tubes
- Replace spark plugs
- Replace canister air suction filter
- Replace exhaust mountings
- Replace brake fluid