

ΤΟΥΟΤΑ

Model: Year: Engine Code:

Hi-Lux D (LN105/110) • Hi-Ace 2,5D (LH61) • Dyna 100/150 1988-95 2L, 2LT (2446 cc), 3L (2779 cc)

Special Tools

- Crankshaft pulley drift Toyota No. 09223-63010.
 Crankshaft pulley holding tool Toyota No. 09213-54015 and 09330-00021.
- Puller for crankshaft pulley Toyota No. 09213-60017.

Recommended Replacement Interval

Pre 12/93 - every 60,000 miles. 01/94 on - every 63,000 miles.

Timing Belt Failure

CAUTION: Although engine damage will NORMALLY occur, check compressions before removing cylinder head.

Repair Times - hrs

Remove & install:	
Dyna	2,00
PAS	0,20
AC	0,30
Hi-Lux D	1,80
Hi-Ace	2,40
PAS	+0,20
AC	+0,50
Land Cruiser	2,00
PAS	+0,10
AC	+0,30

Special Precautions

- Disconnect battery earth lead.
- Do NOT turn crankshaft or camshaft when timing belt removed.
- Remove spark or glow plugs to ease turning engine.
 Turn engine in normal direction of rotation (unless otherwise stated).
- Do NOT turn engine via camshaft or other sprockets.
 Observe all tightening torques.
- Check diesel injection pump timing after belt replacement - see Autodata Diesel Injection Manual.

Removal

632

- 1. Drain cooling system.
- 2. Remove:
 - Radiator.
 - Cooling fan and pulley.
 - Auxiliary drive belts.
- Using tool Nos. 09213-54015 and 09330-00021 undo crankshaft pulley bolt and washer
- Using tool No. 09213-60017 or a suitable puller remove crankshaft pulley 2.

- 5. Remove timing belt cover retaining bolts 81.
- 6. Remove cover and seal 4 & 5.
- 7. Refit crankshaft pulley bolt and turn engine to TDC on No.1 cylinder, ensuring timing marks align 6, 2 & 8.
- 8. Loosen tensioner retaining bolt 9.
- 9. Using a screwdriver lever tensioner away from belt and lightly tighten bolt.
- 10. Remove belt guide from crankshaft sprocket.
- 11. Remove timing belt.

Installation

- 1. Check timing marks are aligned 10, 17 & 13.
- Starting at crankshaft sprocket fit the timing belt, keeping belt tight between sprockets in the following sequence: Tensioner, injection pump, camshaft, guide (idler) sprocket.
- 4. Tighten tensioner bolt to 44 Nm.
- 5. Refit belt guide and timing belt cover and seal.
- 6. Remove crankshaft pulley bolt, refit crankshaft pulley, using special tool No. 09223-60010 and tap pulley into place.
- Fit crankshaft pulley bolt and washer, hold pulley with tool Nos. 09213-54015 and 09330-00021 and tighten bolt 1 to 167 Nm.
- Refit remainder of components in reverse order of removal.
- 9. Refill cooling system.
- Reset timing belt warning lamp by removing grommet from front of speedometer, and pressing reset switch.

NOTE: To reset timing belt warning lamp on Hi-Ace models, remove instrument panel ID, undo warning lamp switch screw ID and transfer to next hole. Check warning lamp goes out and refit instrument panel.

