


BACK-UP LIGHT

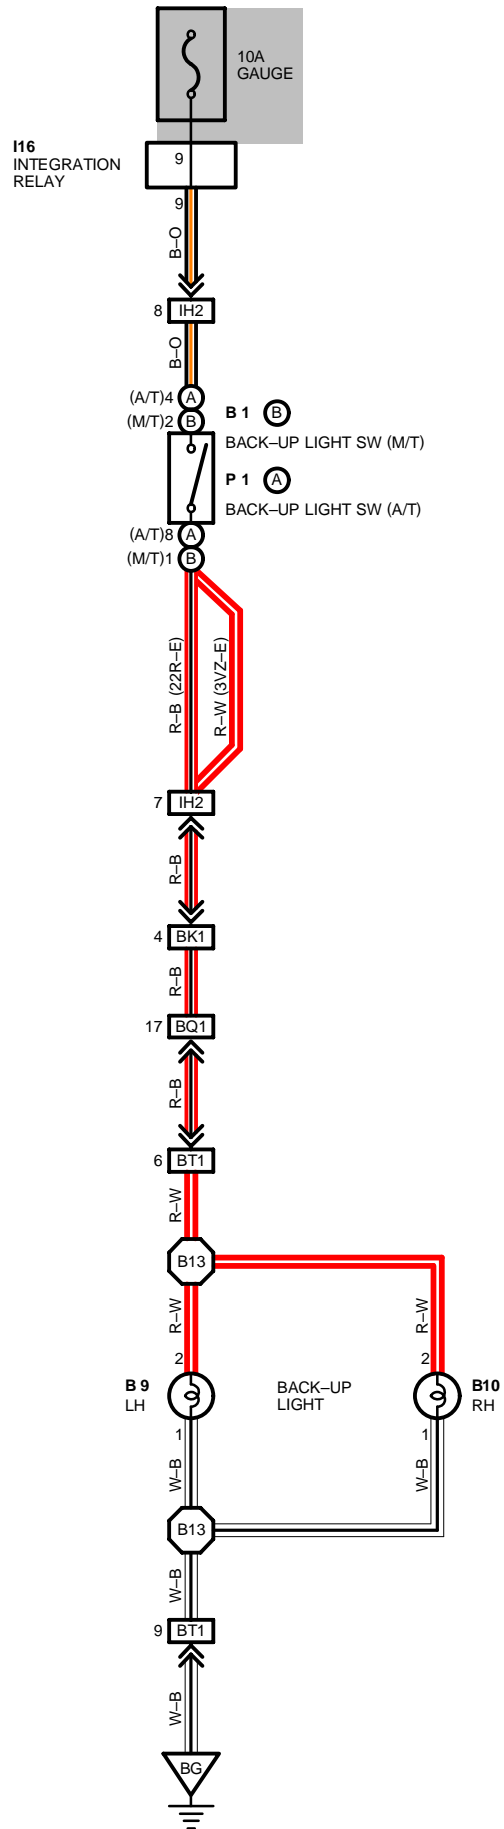

SERVICE HINTS

B 1(B), P 1(A) BACK-UP LIGHT SW

(A) 4-8, (B) 2-1: CLOSED WITH SHIFT LEVER IN R POSITION

○ : PARTS LOCATION

CODE		SEE PAGE	CODE		SEE PAGE	CODE		SEE PAGE
B 1	B	24 (3VZ-E)	B10	I16	29	P 1	A	27 (22R-E)
		26 (22R-E)			28			
B 9		29	P 1	A	25 (3VZ-E)			

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IH2	34	ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL)
BK1	36	FLOOR NO. 3 LH WIRE AND COWL WIRE (LEFT SIDE OF FRONT LH SEAT)
BQ1	36	FLOOR NO. 3 LH WIRE AND FLOOR NO. 2 WIRE (LEFT SIDE OF REAR LH SEAT)
BT1	36	BACK DOOR NO. 1 WIRE AND FLOOR NO. 2 WIRE (BESIDE LEFT REAR COMB. LIGHT)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BG	36	UNDER LEFT REAR PILLAR

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B13	36	BACK DOOR NO. 1 WIRE			

