


FOLD ALONG DASHED LINES. RAISE FRONT OF SEAT BASE ALONG BLUE DOTTED LINE.

TRY SEAT FIRST BEFORE CUTTING
AND WELDING "V" IN TOP.

FOLD SHOULDER WINGS
UP 75°.

FOLD SIDES
UP 90°.

MOUNTING FLANGES
MAY BE OMITTED.

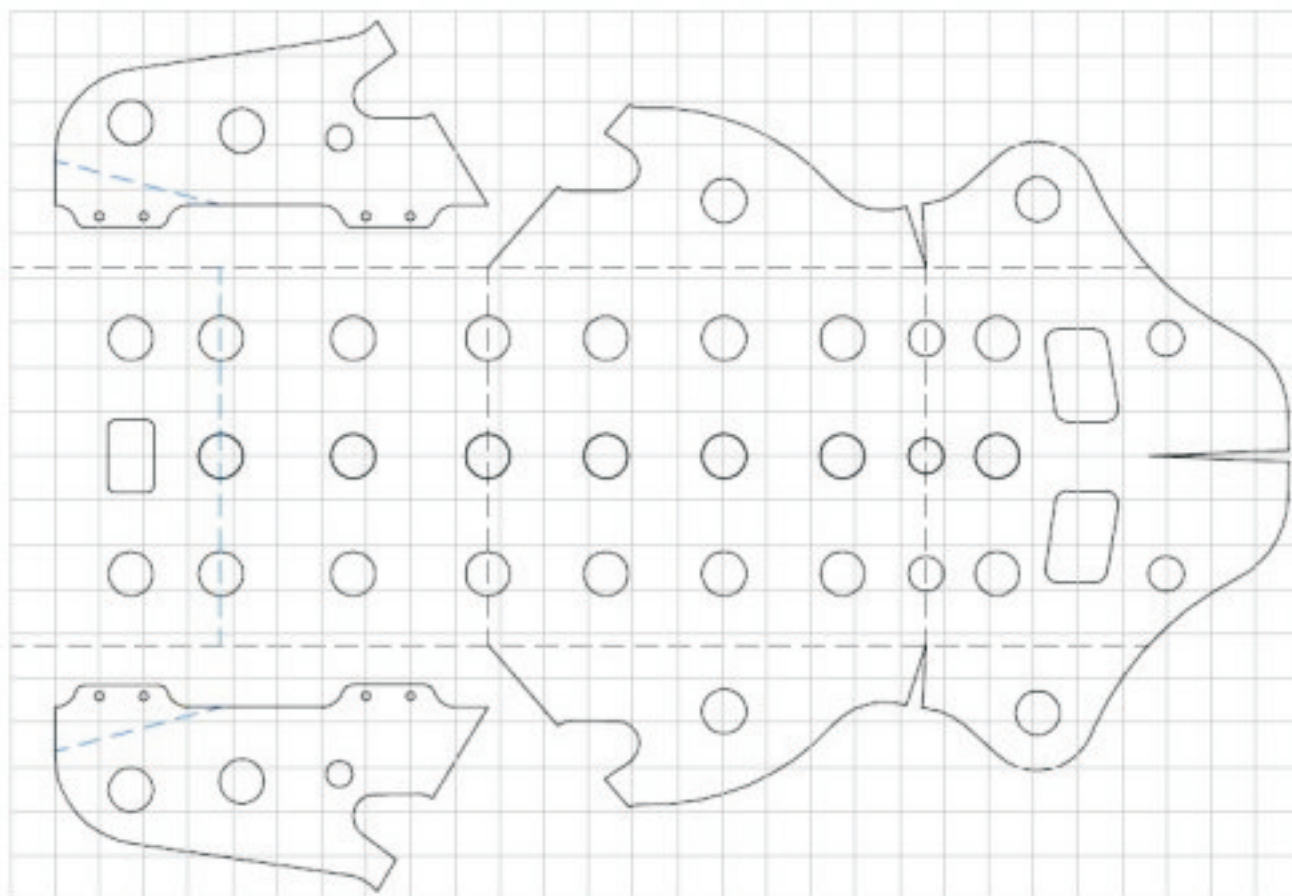

50MM GRID SQUARES.
WELD ALUMINIUM "U" MOULDING TO SEAT PERIMETER.
GLUE RUBBER "U" MOULDING AROUND EDGES OF BELT SLOTS.

MATERIAL: 1450 X 1000 X 2.5mm 5052/5251 AL SHEET

WEIGHT: 4.82kg [10.6lbs]



PICK-UP
F-75
BY DELMAR

