
AUTOMATIC TRANSMISSION

AUTOMATIC TRANSMISSION

CONTENTS

SERVICE SPECIFICATIONS	2	Converter Stall Test	44
LUBRICANTS	2	Hydraulic Pressure Test	45
SEALANTS AND ADHESIVES	2	Hydraulic Circuit	46
SPECIAL TOOLS	3	Selector Lever Operation Check	47
TROUBLESHOOTING <A/T>	4	Transmission Control Cable Adjustment	49
TROUBLESHOOTING <A/T KEY INTERLOCK AND SHIFT LOCK MECHANISMS>	32	TRANSMISSION CONTROL*	50
ON-VEHICLE SERVICE	34	A/T KEY INTERLOCK AND SHIFT LOCK MECHANISMS	54
Essential Service	34	TRANSMISSION ASSEMBLY	56
Transfer Oil Check	39	TRANSMISSION OIL COOLER	59
Transfer Oil Replacement	39	A/T-ECU	60
A/T Control Component Location	40	4WD INDICATOR CONTROL UNIT	60
A/T Control Component Check	41		

WARNING REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to driver and passenger (from rendering the SRS inoperative).
- (2) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.
- (3) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) before beginning any service or maintenance of any component of the SRS or any SRS-related component.

NOTE

The SRS includes the following components: SRS-ECU, SRS warning lamp, air bag module, clock spring, and interconnecting wiring. Other SRS-related components (that may have to be removed/installed in connection with SRS service or maintenance) are indicated in the table of contents by an asterisk (*).

SERVICE SPECIFICATIONS

Items		Standard value	
Clearance between inner cable stopper and dust cover end surface mm		0.8 – 1.5	
Input shaft speed sensor resistance (at 20°C) Ω		620 ± 60	
Output shaft speed sensor resistance (at 20°C) Ω		430 ± 43	
A/T fluid temperature sensor resistance Ω	at 25°C	1,100	
	at 120°C	57	
Coil resistance of solenoid valve No.1 (at 25°C) Ω		13 ± 2	
Coil resistance of solenoid valve No.2 (at 25°C) Ω		13 ± 2	
Coil resistance of solenoid valve No.3 (at 25°C) Ω		13 ± 2	
Stall speed r/min		2,320 – 2,620	
Line pressure kPa	at idle speed	D range	373 – 422
		R range	520 – 579
	at stall speed	D range	765 – 863
		R range	1,383 – 1,628




LUBRICANTS

Items	Specified lubricant	Quantity ℓ
Transmission fluid	DEXRON II or equivalent	7.2
Transfer oil	Hypoid gear oil SAE 75W-90 or 75W-85W conforming to API GL-4	2.3

SEALANTS AND ADHESIVES


Items	Specified sealant	Remarks
Transfer control lever gasket	3M ATD Part No.8660 or equivalent	Semi-drying sealant
Transfer control lever assembly installation bolt	3M Stud Locking No.4170 or equivalent	Anaerobic sealant


SPECIAL TOOLS

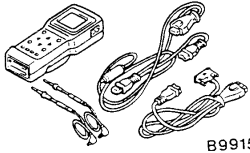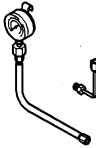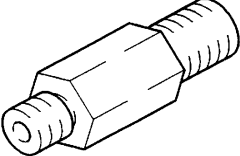Tool	Number	Name	Use
 <p>8991502</p>	MB991502	MUT-II sub assembly	Checking of the diagnosis code
	MD998330 (including MD998331)	Oil pressure gauge (2,942 kPa)	Measurement of oil pressure
	MD998920	Adapter	Connection of oil pressure gauge

TROUBLESHOOTING <A/T>

STANDARD FLOW OF DIAGNOSIS TROUBLESHOOTING

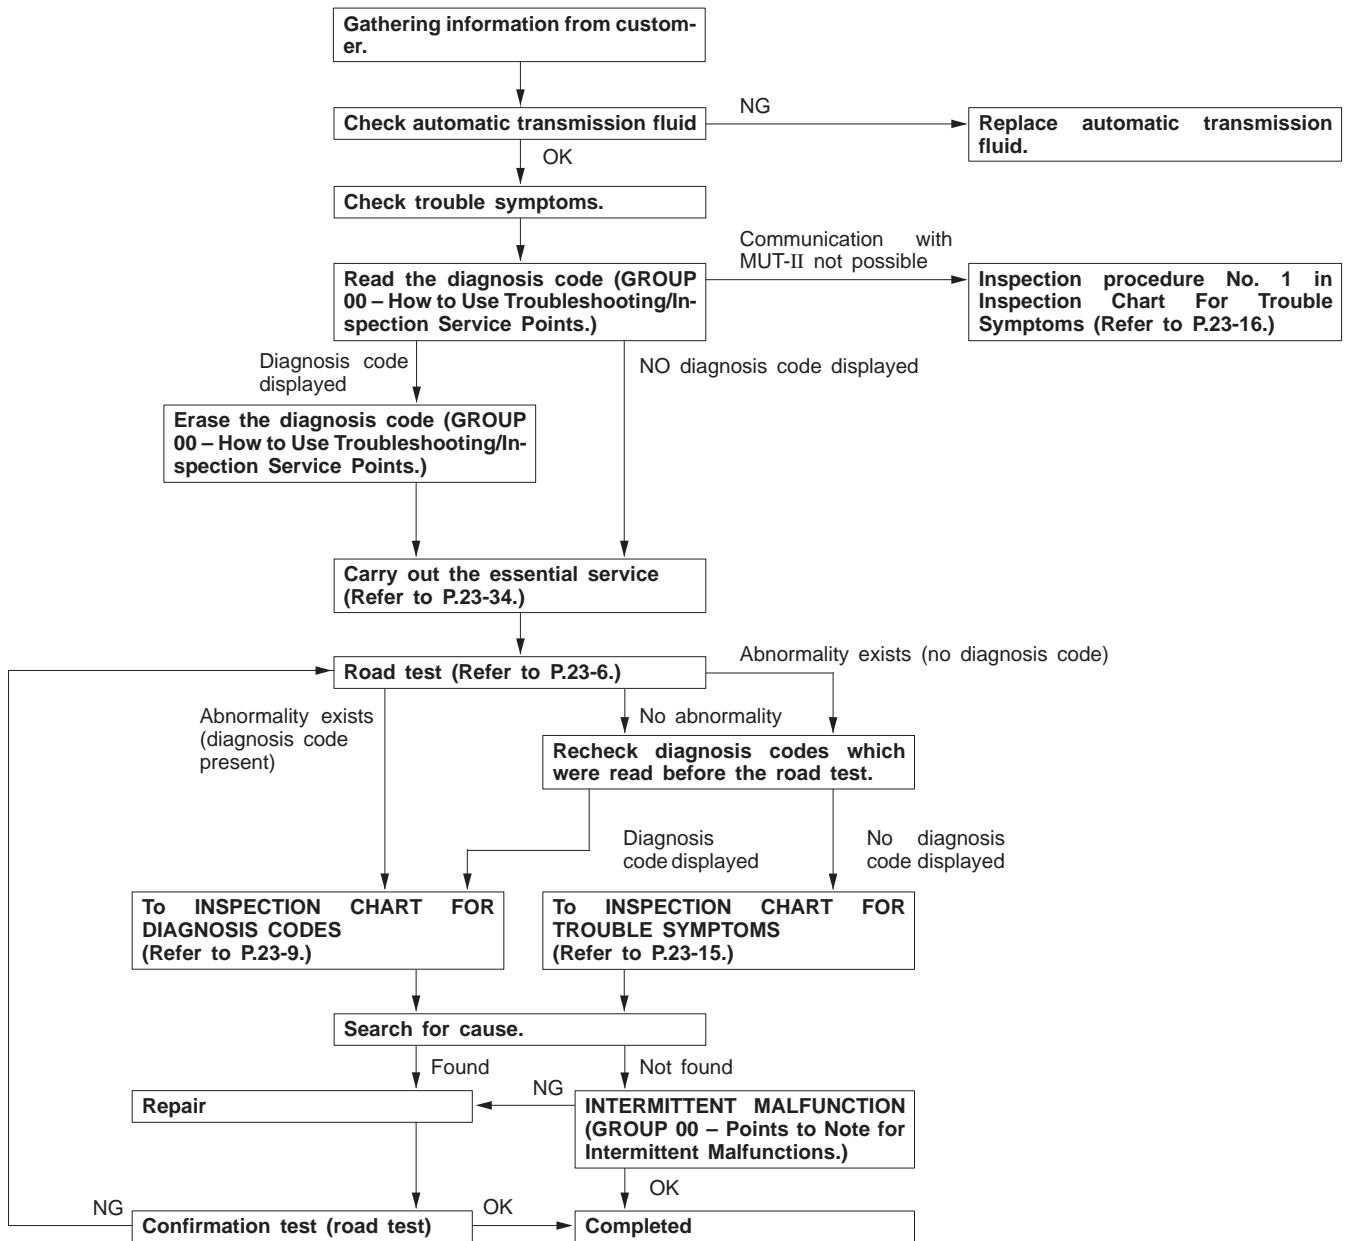

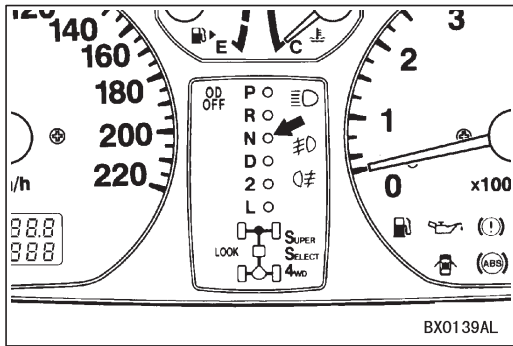

DIAGNOSIS FUNCTION

N RANGE LAMP

The N range lamp flashes at a frequency of approximately 1 Hz if there is an abnormality in any of the items in the table below which are related to the A/T system. Check the diagnosis code output if the N range lamp is flashing at a frequency of approximately 1 Hz.

N range lamp flashing items

Input shaft speed sensor
Output shaft speed sensor
Each solenoid valve

Caution

If the N range lamp is flashing at a frequency of approximately 2 Hz (faster than at 1 Hz), it means that the A/T fluid temperature is too high. Stop the vehicle in a safe place and wait until the N range lamp switches off.

METHOD OF READING THE DIAGNOSIS CODE

Use the MUT-II or the N range lamp to take a reading of the diagnosis codes. (Refer to GROUP 00 – How to Use Troubleshooting/Inspection Service Points.)

ROAD TEST


No.	State prior to test and operation	Test and operation	Judgement value	Check item	Inspection item if there is an abnormality
1	Ignition switch: ON Engine: Stopped	Ignition switch (1) ON (2) OFF	Data list No. 14 (1) Approx. 5V (2) 0V	APS (Power supply voltage)	Code No.13, 14 APS system (P.23-10)
		Overdrive switch (1) ON (2) OFF	Data list No. 35 (1) OD (2) OD-OFF	Overdrive switch	Overdrive switch system (P.23-25)
		Selector lever position (1) P (2) R (3) N (4) D (5) 2 (6) L	Data list No. 37 (1) P, R, D (2) P, R, D (3) N (4) P, R, D (5) 2 (6) L	Inhibitor switch	Inhibitor switch system (P.23-25)
		Brake pedal (1) Depressed (2) Released	Data list No. 28 (1) ON (2) OFF	Stop lamp switch	Stop lamp switch system (P.23-26)
2	Ignition switch: ST Engine: Stopped	Starting test with selector lever P or N position	Starting should be possible	Starting possible or impossible	Does not move (P.23-17)
					Lockup malfunction (P.23-24)
3	Engine: Warmed up	Drive for 15 minutes or more so that the automatic fluid temperature becomes 70 – 90°C.	Data list No. 15 Gradually rises to 70 – 90°C	A/T fluid temperature sensor	A/T fluid temperature sensor system (P.23-10)
4	Engine: Idling Selector lever position: N	Accelerator pedal (1) Released (2) Half depressed (3) Fully depressed (approx. 2 seconds)	Data list No. 13 (1) 0 – 5 % (2) Gradually rises from (1) (3) 85 – 100 %	APS (Throttle opening angle)	Code No.13, 14 APS system (P.23-10)
			Data list No. 22 (1) OFF (2) ON	Wide open throttle switch	Wide open throttle switch system (P.23-11)
		Selector lever position (1) N → D (2) N → R	Should be no abnormal shifting shocks Time lag should be within 2 seconds	Does not move	Does not move forward and reverse (P.23-17)
					Does not move forward only (P.23-18)
Shocks when shifting	Large shocks (P.23-22)				
5	Engine: Idling (Vehicle stopped) Selector lever position: D	Accelerator pedal (1) Released	Data list No. 27 (1) 1st	Solenoid valve No.1	Code No.41, 42 Solenoid valve No.1 system (P.23-13)
				Solenoid valve No.2	Code No.43, 44 Solenoid valve No.2 system (P.23-13)

No.	State prior to test and operation	Test and operation	Judgement value	Check item	Inspection item if there is an abnormality
6	Selector lever position: D Overdrive switch: OFF	Shift position and vehicle speed (1) Idling (Vehicle stopped) (2) Driving at 5 km/h (3) Driving at constant speed of 50 km/h (20 seconds or more) (4) Driving at constant speed of 40 km/h with the selector lever in 2 position	Data list No. 27 (1) 1st (2) 1st (3) 3rd (4) 2nd	Solenoid valve No.1	Code No.41, 42 Solenoid valve No.1 system (P.23-13)
				Solenoid valve No.2	Code No.43, 44 Solenoid valve No.2 system (P.23-13)
			Data list No. 31 (3) 1,800 – 2,000 rpm	Input shaft speed sensor	Input shaft speed sensor system (P.23-11)
			Data list No. 32 (3) 1,800 – 2,000 rpm	Output shaft speed sensor	Output shaft speed sensor system (P.23-11)
			Data list No. 41 (2) ON (3) OFF (4) ON	Solenoid valve No.1	Code No.41, 42 Solenoid valve No.1 system (P.23-13)
			Data list No. 43 (2) OFF (3) ON (4) ON	Solenoid valve No.2	Code No.43, 44 Solenoid valve No.2 system (P.23-13)
			Data list No. 47 (1) OFF (2) OFF (3) ON (4) Accelerates smoothly and no abnormal shocks should occur.	Solenoid valve No.3 Malfunction when shifting	Code No.47, 48 Solenoid valve No.3 system (P.23-13) Shifting point abnormality (P.23-20)
					Slippage (vibration) (P.23-23)
7	Selector lever position: D Overdrive switch: ON	(1) Driving at constant speed of 50 km/h (20 seconds or more)	Data list No. 27 (1) 4th	Solenoid valve No.1	Code No.41, 42 Solenoid valve No.1 system (P.23-13)
				Solenoid valve No.2	Code No.43, 44 Solenoid valve No.2 system (P.23-13)
			Data list No. 41 (1) OFF	Solenoid valve No.1	Code No.41, 42 Solenoid valve No.1 system (P.23-13)
			Data list No. 43 (1) OFF	Solenoid valve No.2	Code No.43, 44 Solenoid valve No.2 system (P.23-13)

No.	State prior to test and operation	Test and operation	Judgement value	Check item	Inspection item if there is an abnormality
8	Selector lever position: D Overdrive switch: ON	Monitor data list No. 13, 27, and 32 with the MUT-II. (1) Accelerate to 4th gear at APS opening angle of 30 %. (2) Gently decelerate to a standstill. (3) Accelerate to 4th gear at APS opening angle of 50 %. (4) While driving at 50 km/h in 4th gear, set the overdrive switch to OFF position. (5) While driving at 50 km/h in 3rd gear, move the selector lever to 2 position. (6) While driving at 20 km/h in 2nd gear, move the selector lever to L position.	For (1), (2) and (3), the reading should be the same as the specified output shaft speed (vehicle speed) and no abnormal shocks should occur. For (4), (5) and (6), downshifting should occur immediately after the shifting operation is made.	Malfunction when shifting	Upshifting does not occur (P.23-19)
					Downshifting does not occur (P.23-20)
					Shifting point abnormality (P.23-20)
					Upshifting occurs spontaneously (P.23-19)
				Malfunction when driving the vehicle	Incorrect drive gear position (P.23-21)
					Large shocks (P.23-22)
Slippage (vibration) (P.23-23)					
Lockup malfunction (P.23-24)					
Abnormal engine braking (P.23-24)					

SHIFT PATTERN

D range (Overdrive switch: ON)

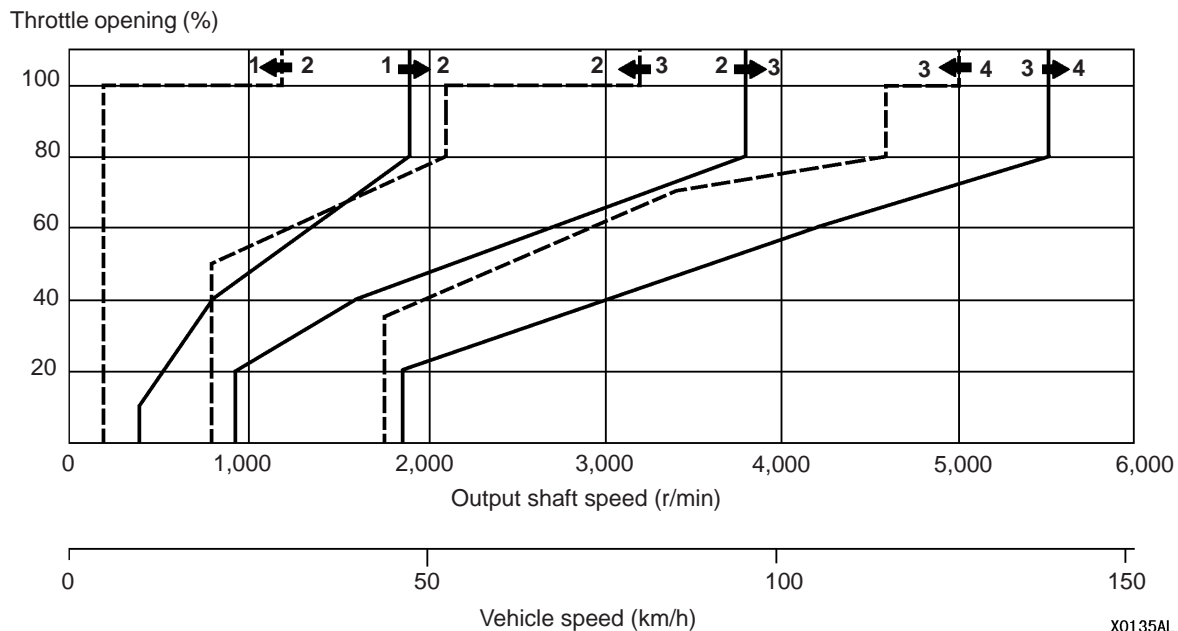


INSPECTION CHART FOR DIAGNOSIS CODE


Code	Diagnosis item		Reference page
13	Accelerator pedal position sensor system (Throttle opening voltage)	Sensor malfunction, open circuit, short circuit	23-10
14	Accelerator pedal position sensor system (Throttle power supply voltage)	Open circuit, short circuit	23-10
15	A/T fluid temperature sensor system	Open circuit	23-10
16	A/T fluid temperature sensor system	Short circuit	23-10
22	Wide open throttle switch	Open circuit, short circuit	23-11
31	Input shaft speed sensor system	Open circuit	23-11
32	Output shaft speed sensor system	Open circuit	23-11
38	Vehicle speed sensor system	Open circuit	23-12
41	Solenoid valve No.1 system	Open circuit	23-13
42	Solenoid valve No.1 system	Short circuit	23-13
43	Solenoid valve No.2 system	Open circuit	23-13
44	Solenoid valve No.2 system	Short circuit	23-13
47	Solenoid valve No.3 system	Open circuit	23-13
48	Solenoid valve No.3 system	Short circuit	23-13
55	Abnormal communication with engine-ECU	Open circuit	23-14

INSPECTION PROCEDURES FOR DIAGNOSIS CODES


Code No. 13, 14 Accelerator pedal position sensor (APS)	Probable cause
<p>If the APS output voltage (APS opening voltage) is 4.8 V or higher when the engine is idling, the output voltage is judged to be too high and diagnosis code No. 13 is output. If the APS output voltage (APS opening voltage) is 0.335 V or lower when the engine is idling, the output voltage is judged to be too low and diagnosis code No. 13 is output.</p> <p>If the APS output voltage (APS power supply voltage) is 3.0 V or lower or if it is 5.7 V or higher when the engine is idling, the APS is judged to be faulty and diagnosis code No. 14 is output.</p>	<ul style="list-style-type: none"> ● Malfunction of the accelerator pedal position sensor ● Malfunction of harness or connector ● Malfunction of the A/T-ECU

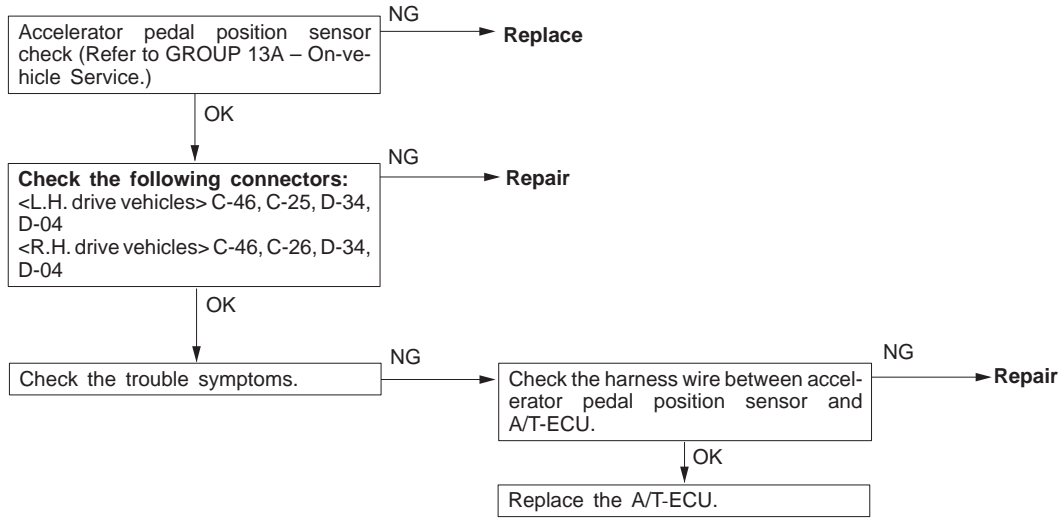

Code No. 15, 16 A/T fluid temperature sensor system	Probable cause
<p>If the A/T fluid temperature sensor output is 10°C or less (5.6 kΩ or more) even after running the engine for 15 minutes or more, it is judged that there is an open circuit in the A/T fluid temperature sensor and diagnosis code No. 15 is output. If the A/T fluid temperature sensor output is 240°C or more (10 Ω or less), it is judged that there is a short circuit in the A/T fluid temperature sensor and diagnosis code No. 16 is output.</p>	<ul style="list-style-type: none"> ● Malfunction of the A/T fluid temperature sensor ● Malfunction of harness or connector ● Malfunction of the A/T-ECU

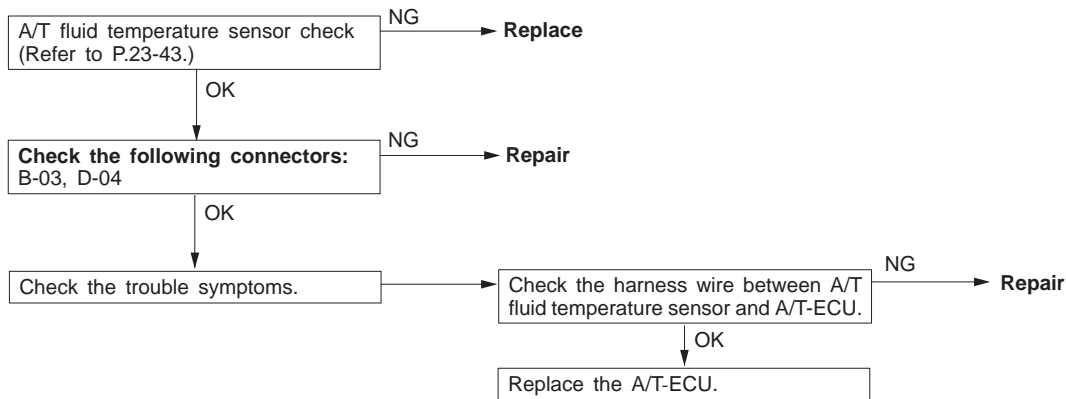


Code No. 22 Wide open throttle switch system	Probable cause
If the wide open throttle switch does not turn OFF when the accelerator pedal is not depressed, there is a short circuit in the wide open throttle switch and diagnosis code No. 25 is output.	<ul style="list-style-type: none"> ● Malfunction of wide open throttle switch ● Malfunction of connector ● Malfunction of the A/T-ECU

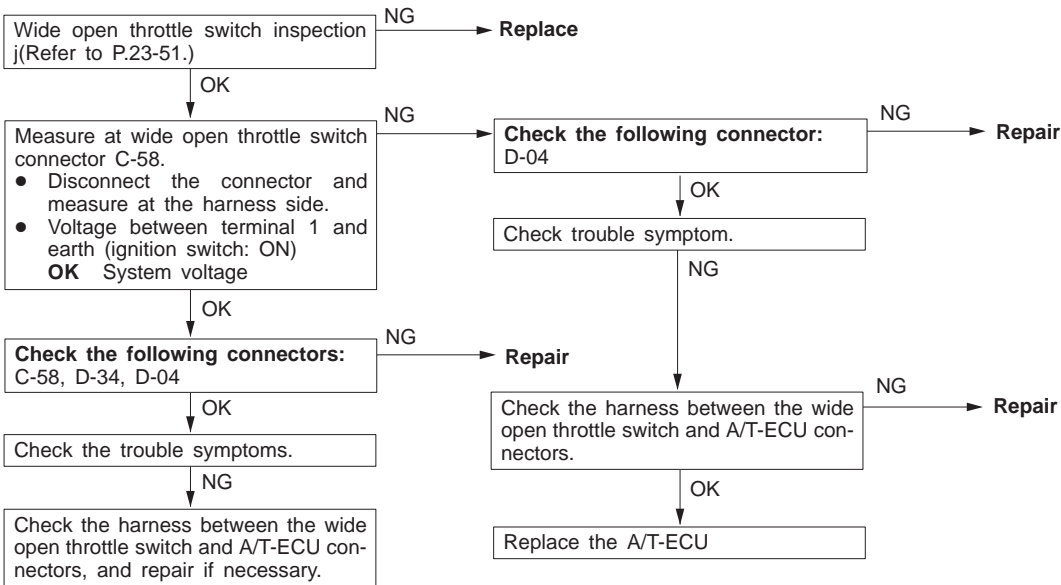


Code No. 31, 32 Input shaft speed sensor system, output shaft speed sensor system	Probable cause
If no output pulse is detected from the input shaft speed sensor for 120 seconds or more while driving in 3rd gear at a speed of 60 km/h or more, there is judged to be an open circuit in the input shaft speed sensor and diagnosis code No. 31 is output. If no output pulse is detected from the output shaft speed sensor for 120 seconds or more while driving in 3rd gear at a speed of 60 km/h or more, there is judged to be an open circuit in the output shaft speed sensor and diagnosis code No. 32 is output.	<ul style="list-style-type: none"> ● Malfunction of the input shaft speed sensor or output shaft speed sensor ● Malfunction of harness or connector ● Malfunction of the sensor rotor ● Malfunction of A/T-ECU ● Electrical noise


★: Refer to the Transmission Workshop Manual.

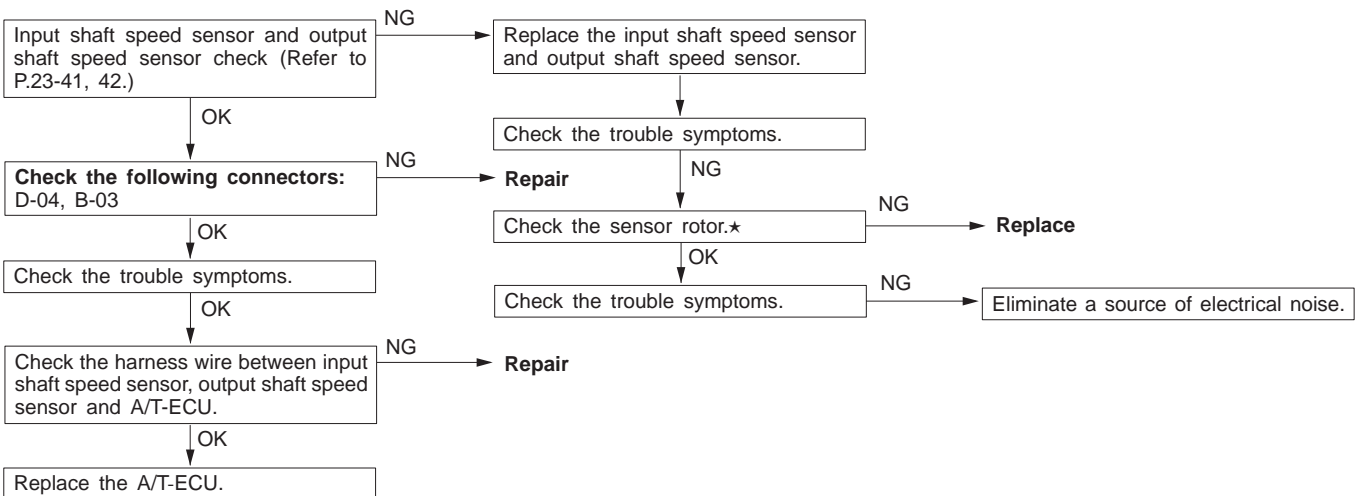


Code No. 38 Vehicle speed sensor system	Probable cause
If no output pulse is detected from the vehicle speed sensor for 120 seconds or more continuously while driving at a speed of 60 km/h or more, there is judged to be an open circuit in the vehicle speed sensor and diagnosis code No. 38 is output.	<ul style="list-style-type: none"> ● Malfunction of the vehicle speed sensor ● Malfunction of harness or connector ● Malfunction of the A/T-ECU ● Malfunction of the ignition switch

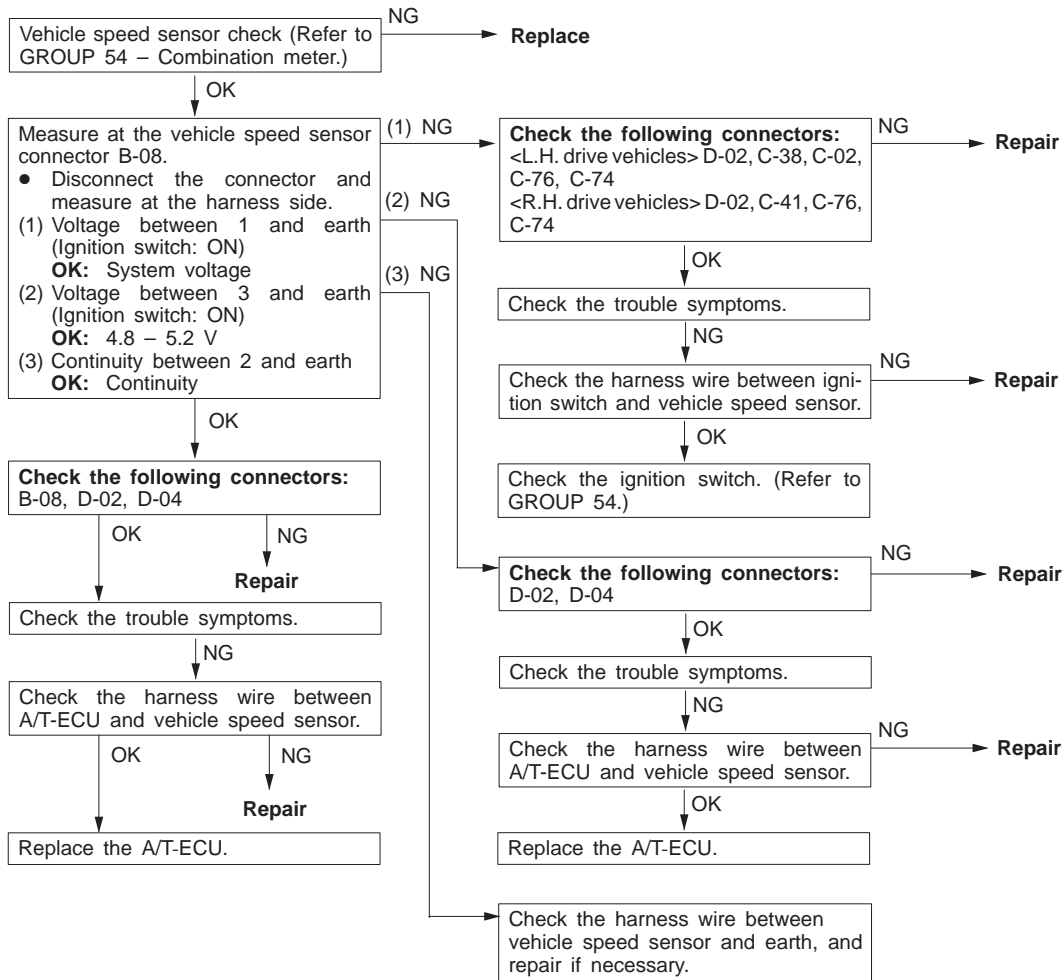


Code No. 41, 42 Solenoid valve No.1 system	Probable cause
If the resistance value for a solenoid valve No.1 is too large, it is judged that there is an open circuit in the solenoid valve No.1 and the diagnosis code No.41 is output. If the resistance value for a solenoid valve No.1 is too small, it is judged that there is a short-circuit in the solenoid valve No.1 and the diagnosis code No.42 is output.	<ul style="list-style-type: none"> ● Malfunction of solenoid valve No.1 ● Malfunction of harness or connector ● Malfunction of the A/T-ECU

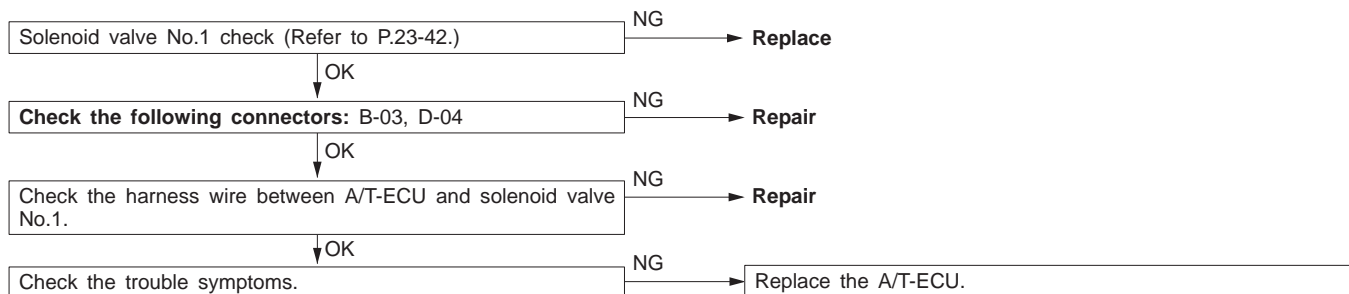


Code No. 43, 44 Solenoid valve No.2 system	Probable cause
If the resistance value for a solenoid valve No.2 is too large, it is judged that there is an open circuit in the solenoid valve No.2 and the diagnosis code No.43 is output. If the resistance value for a solenoid valve No.2 is too small, it is judged that there is a short-circuit in the solenoid valve No.2 and the diagnosis code No.44 is output.	<ul style="list-style-type: none"> ● Malfunction of solenoid valve No.2 ● Malfunction of harness or connector ● Malfunction of the A/T-ECU

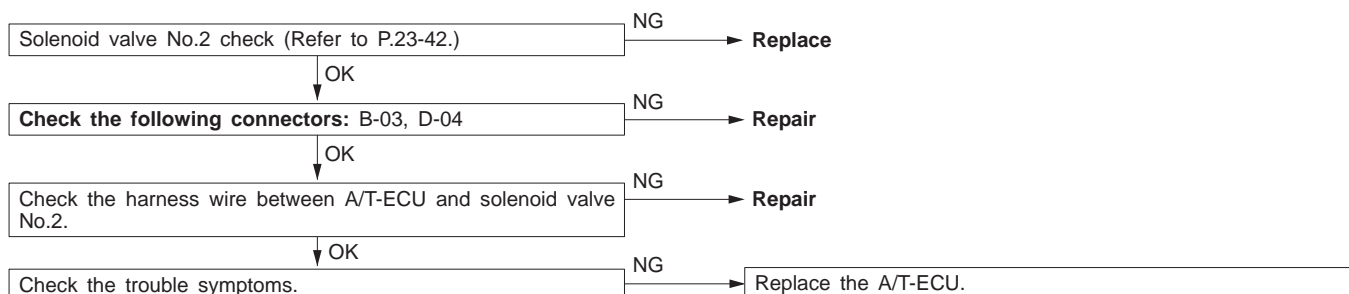

Code No. 47, 48 Solenoid valve No.3 system	Probable cause
If the resistance value for a solenoid valve No.3 is too large, it is judged that there is an open circuit in the solenoid valve No.3 and the diagnosis code No.47 is output. If the resistance value for a solenoid valve No.3 is too small, it is judged that there is a short-circuit in the solenoid valve No.3 and the diagnosis code No.48 is output.	<ul style="list-style-type: none"> ● Malfunction of solenoid valve No.3 ● Malfunction of harness or connector ● Malfunction of the A/T-ECU

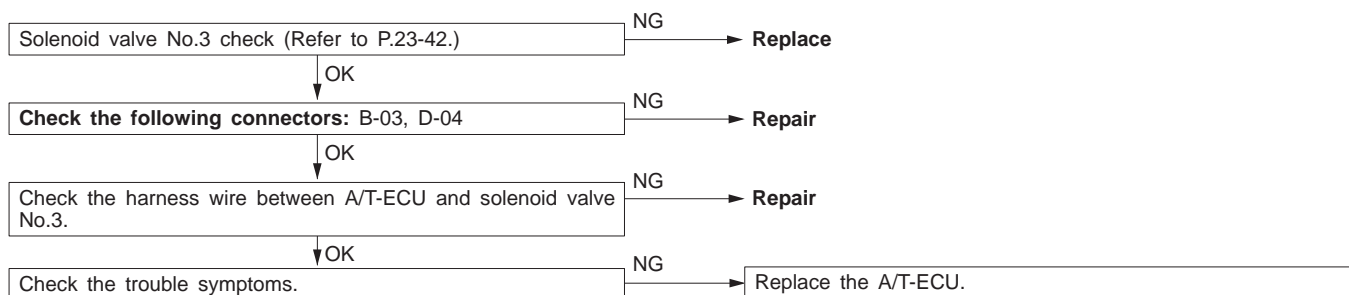

Code No. 55 Abnormal communication with engine-ECU	Probable cause
If normal communication is not possible for a continuous period of 1 second or more when the ignition switch is at the ON position and the battery voltage is 10 V or more, diagnosis code No. 55 is output. Diagnosis code No. 55 is also output if the data being received is abnormal for a continuous period of 1 second under the same conditions.	<ul style="list-style-type: none"> ● Malfunction of harness or connector ● Malfunction of the engine-ECU ● Malfunction of the A/T-ECU

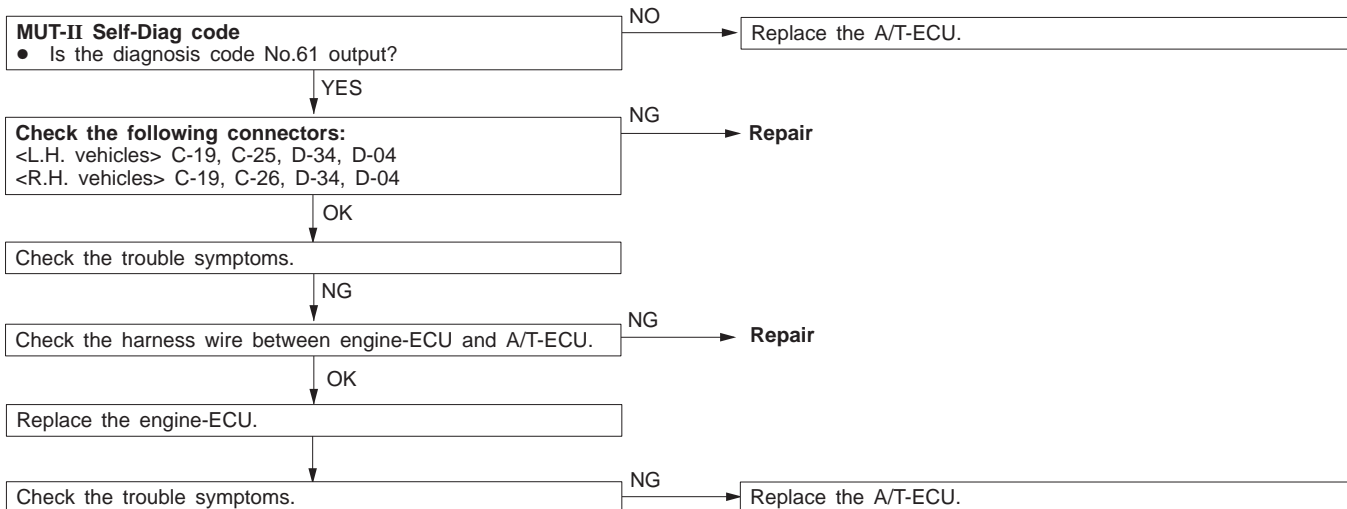


INSPECTION CHART FOR TROUBLE SYMPTOMS

Trouble symptom		Inspection procedure No.	Reference page
Communication with the MUT-II is not possible		1	23-16
Does not move	Does not move forward and reverse	2	23-17
	Does not move forward only	3	23-18
	Does not reverse only	4	23-18
Malfunction when shifting	Upshifting does not occur	5	23-19
	Downshifting does not occur	6	23-20
	Shifting point abnormality	7	23-20
	Upshifting occurs spontaneously	8	23-21
	Incorrect drive gear position	9	23-21
Large shocks		10	23-22
Slippage (vibration)		11	23-23
Lockup malfunction		12	23-24
Abnormal engine braking		13	23-24
Electronic circuit systems	Inhibitor switch system	14	23-25
	Overdrive switch system	15	23-25
	Stop lamp switch system	16	23-26

INSPECTION PROCEDURE FOR TROUBLE SYMPTOMS

INSPECTION PROCEDURE 1


Communication with the MUT-II is not possible	Probable cause
If communication with the MUT-II is not possible, the cause is probably a malfunction in the self-diagnosis system or the A/T-ECU is not functioning.	<ul style="list-style-type: none"> ● Malfunction of self-diagnosis system ● Malfunction of A/T-ECU power circuit ● Malfunction of A/T-ECU earth circuit ● Malfunction of A/T-ECU ● Malfunction of harness and connector

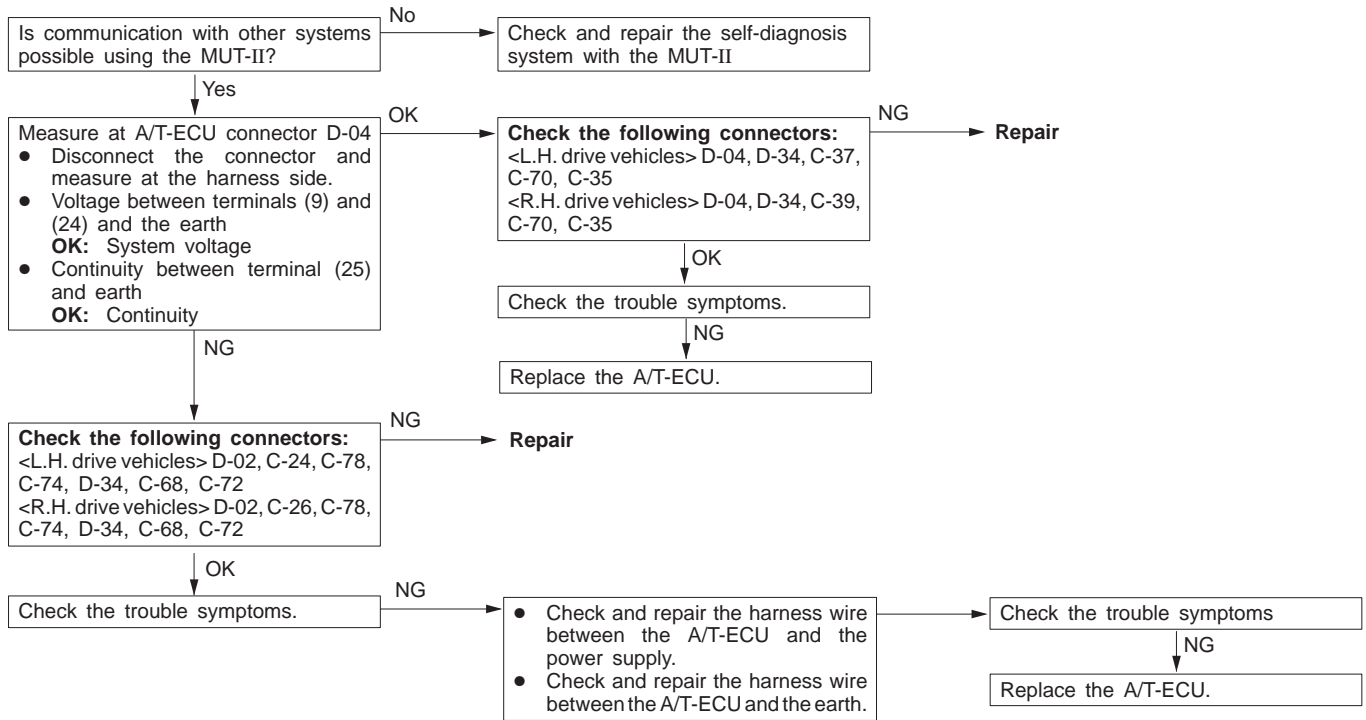

INSPECTION PROCEDURE 2

Does not move forward and reverse	Probable cause
When the engine is idling, the vehicle does not move forward and reverse even if the selector lever is shifted from N to D, 2, L or R position. In such cases, the cause is probably abnormal line pressure, or a malfunction of the transmission control cable, torque converter, oil pump, parking mechanism or the power train.	<ul style="list-style-type: none"> ● Malfunction of transmission control cable ● Abnormal line pressure ● Malfunction of power train ● Malfunction of oil pump ● Malfunction of valve body ● Malfunction of parking mechanism ● Malfunction of torque converter ● Malfunction of A/T-ECU


★: Refer to the Transmission Workshop Manual.

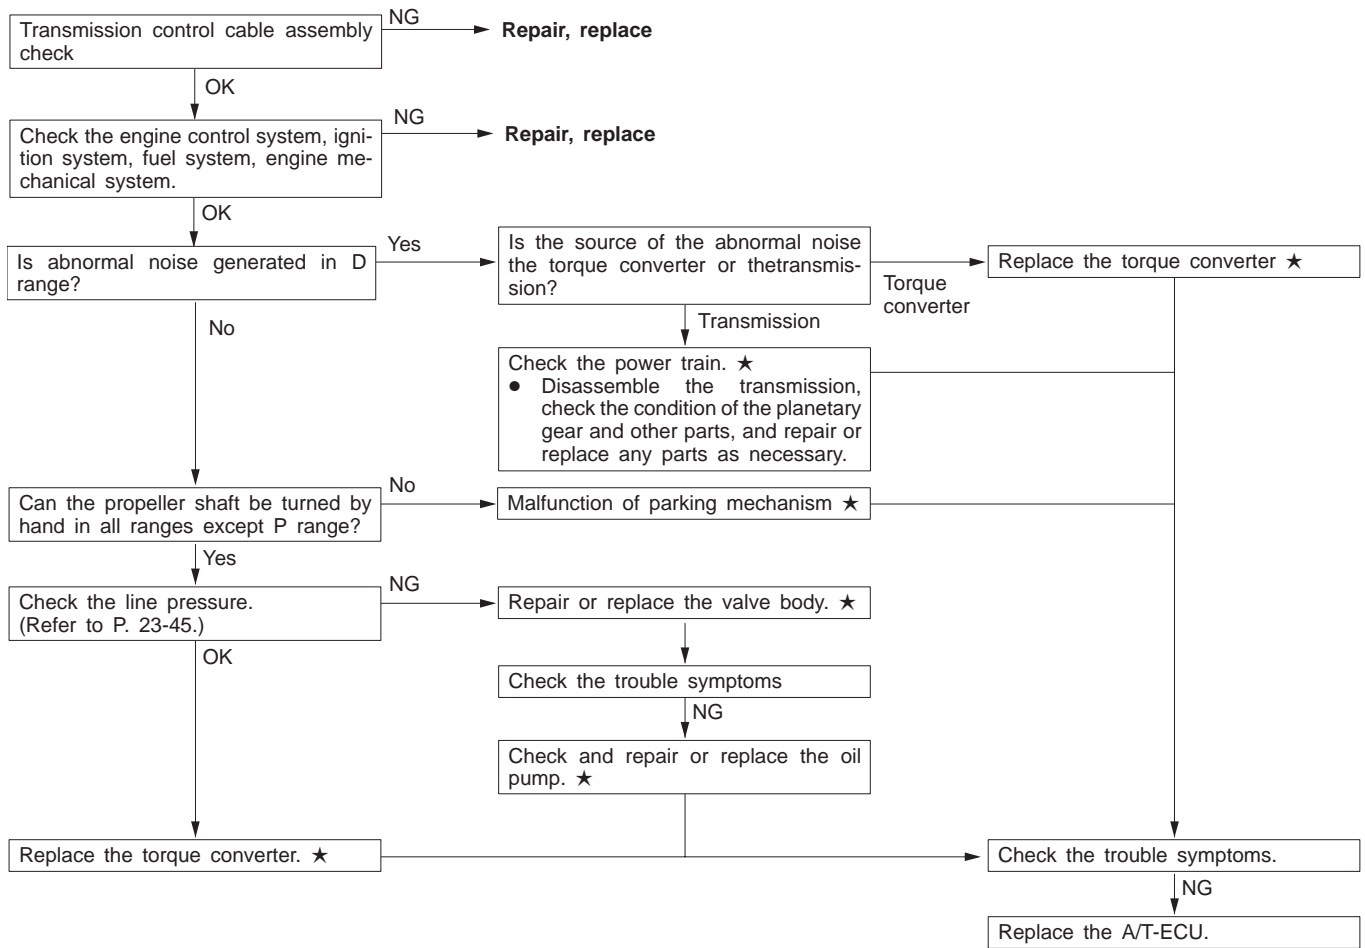

INSPECTION PROCEDURE 3

Does not move forward only	Probable cause
When the engine is idling, the vehicle does not move forward even if the selector lever is shifted from N to D, 2 or L range. In such cases, the cause is probably a malfunction of the clutch or brake.	<ul style="list-style-type: none"> ● Malfunction of forward clutch ● Malfunction of direct clutch ● Malfunction of one-way clutch No. 2 ● Malfunction of brake No. 1, No. 2, No. 3 ● Malfunction of A/T-ECU


★: Refer to the Transmission Workshop Manual.

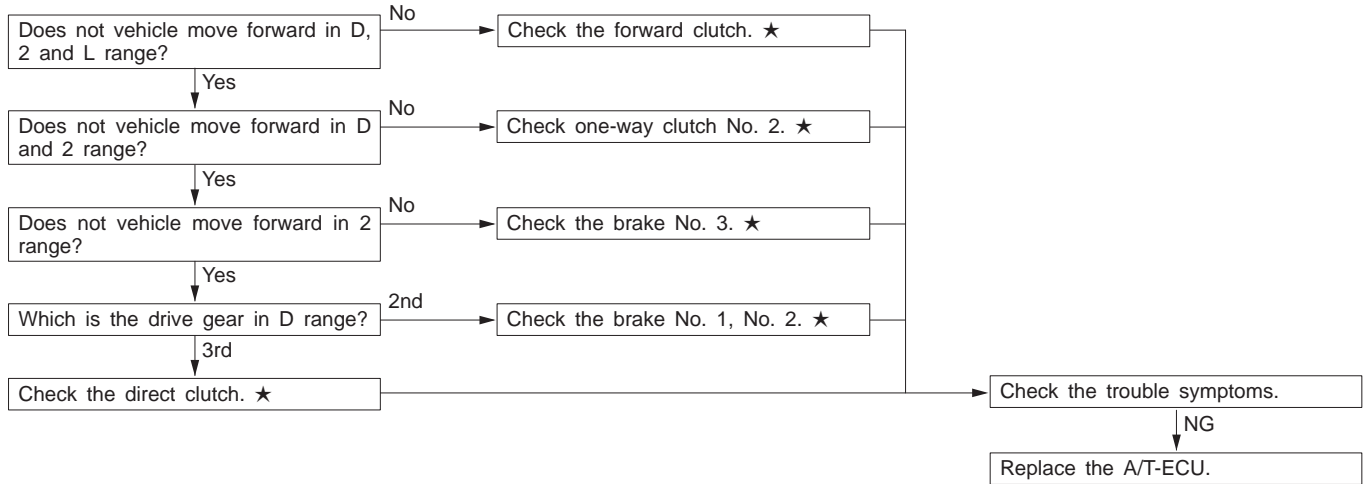

INSPECTION PROCEDURE 4

Does not reverse only	Probable cause
When the engine is idling, the vehicle does not reverse even if the selector lever is shifted from N to R range. In such cases, the cause is probably a malfunction of a clutch, brake or the valve body.	<ul style="list-style-type: none"> ● Malfunction of brake No. 1, No. 3 ● Malfunction of direct clutch ● Malfunction of valve body ● Malfunction of planetary gear ● Malfunction of A/T-ECU


★: Refer to Transmission Workshop Manual.

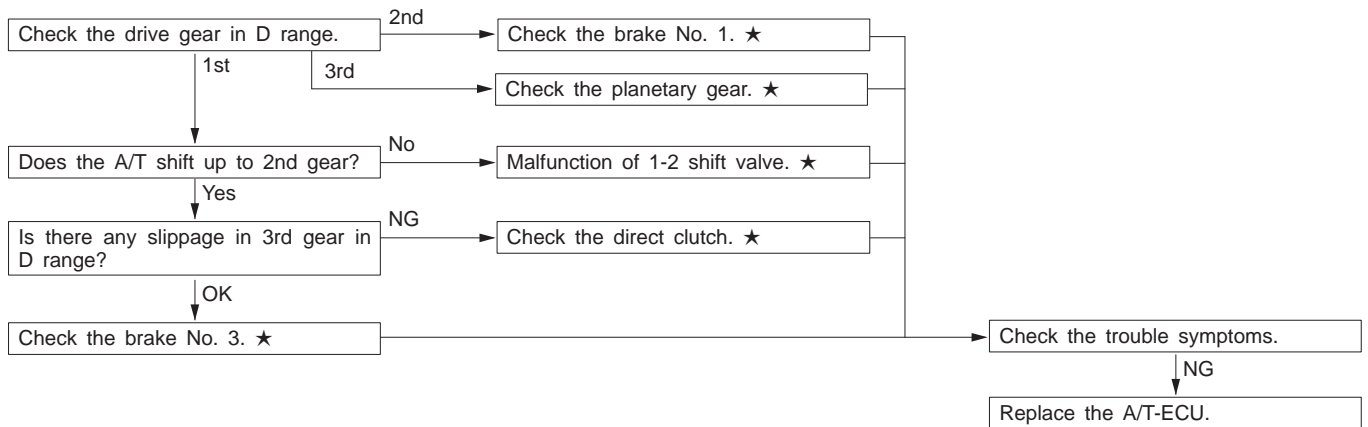

INSPECTION PROCEDURE 5

Upshifting does not occur	Probable cause
Upshifting does not occur under conditions when upshifting should occur. Check shifting from 1→2, 2→3 and 3→4 respectively.	<ul style="list-style-type: none"> ● Malfunction of solenoid valve No. 1, No. 2 ● Malfunction of A/T-ECU ● Malfunction of power train internal parts


★: Refer to the Transmission Workshop Manual.

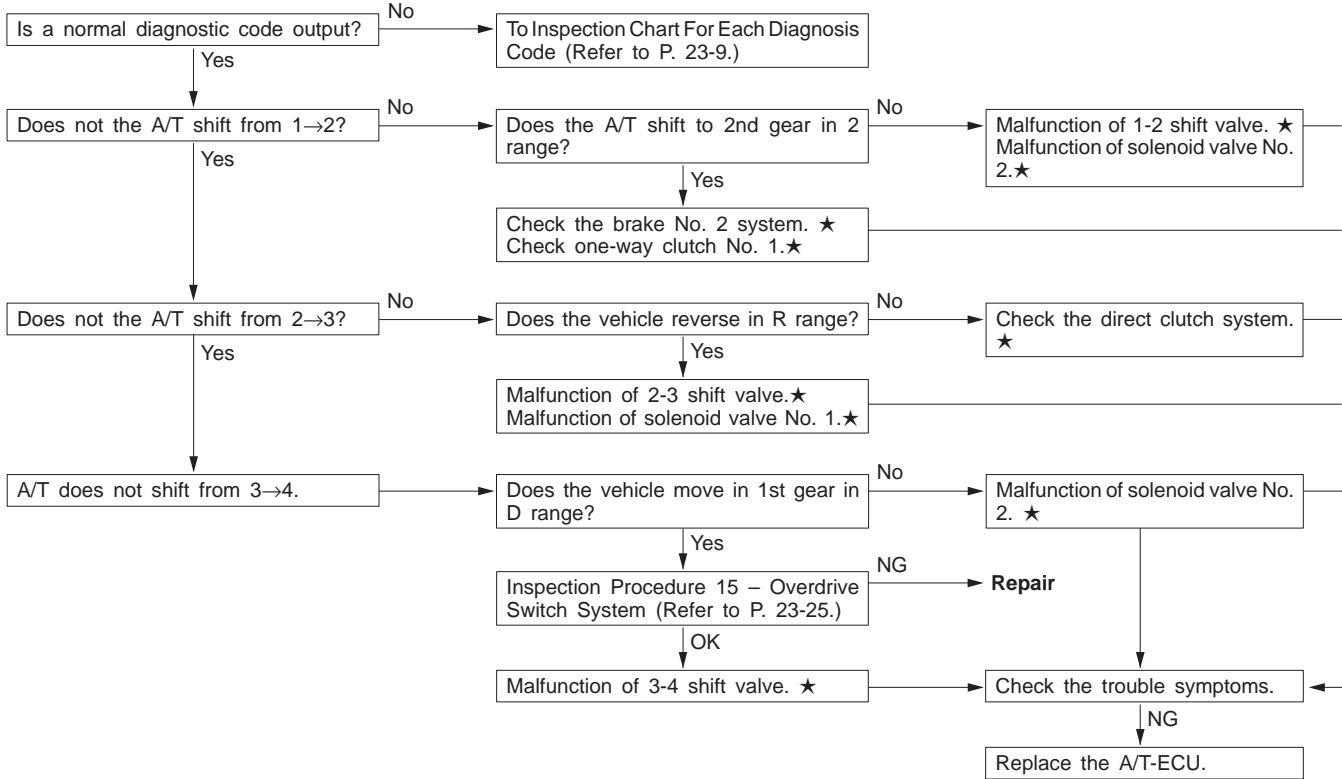

INSPECTION PROCEDURE 6


Downshifting does not occur	Probable cause
Downshifting does not occur under conditions when downshifting should occur. Check shifting from 2→1, 3→2 and 4→3 respectively.	<ul style="list-style-type: none"> ● Malfunction of solenoid No. 1, No. 2 ● Malfunction of A/T-ECU ● Malfunction of power train internal parts

★: Refer to the Transmission Workshop Manual.

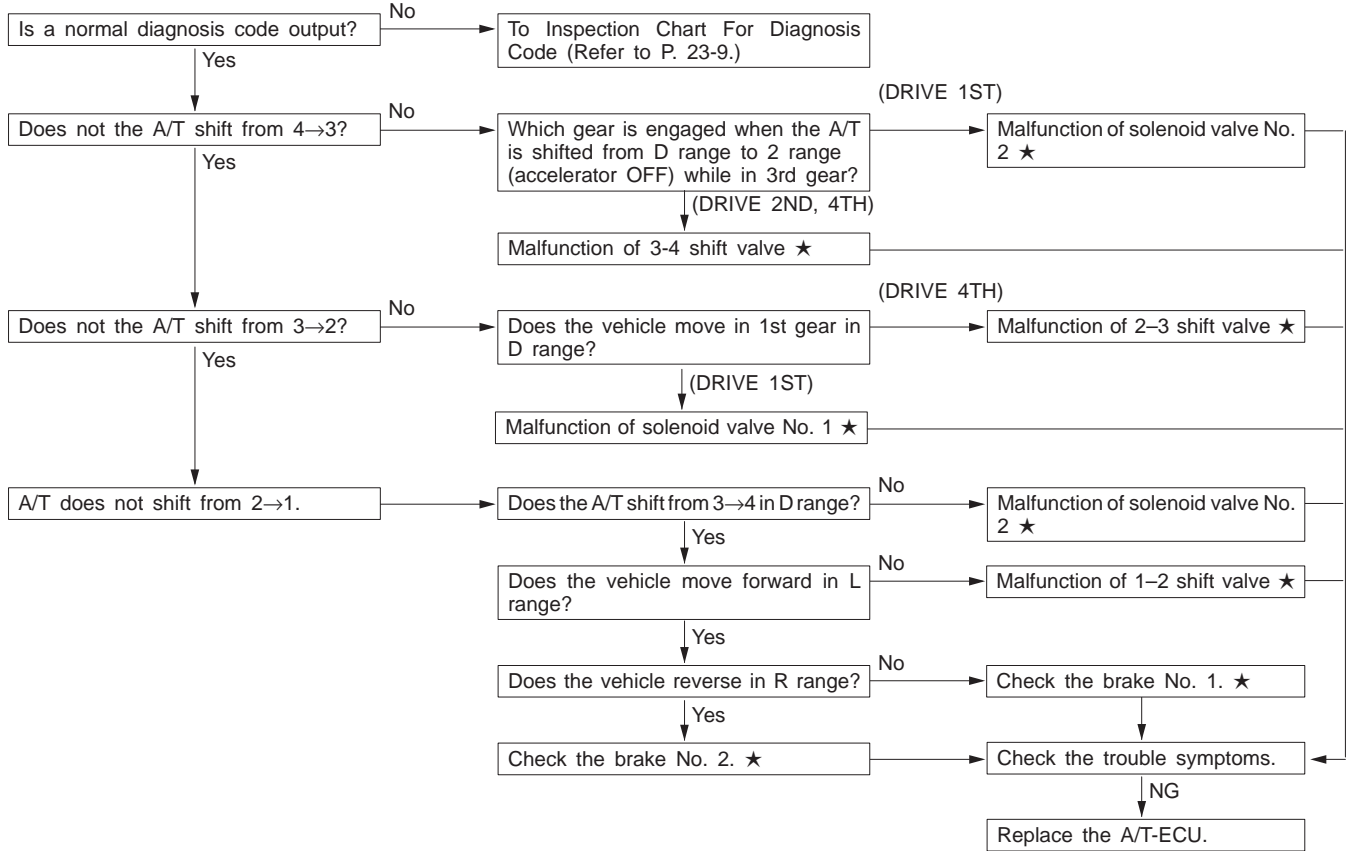


INSPECTION PROCEDURE 7

Shifting point abnormality	Probable cause
Shifting occurs at points which are different from the shift pattern. Note that the shift pattern will vary in different modes and at high A/T fluid temperatures.	<ul style="list-style-type: none"> ● Malfunction of A/T fluid temperature sensor ● Malfunction of A/T-ECU

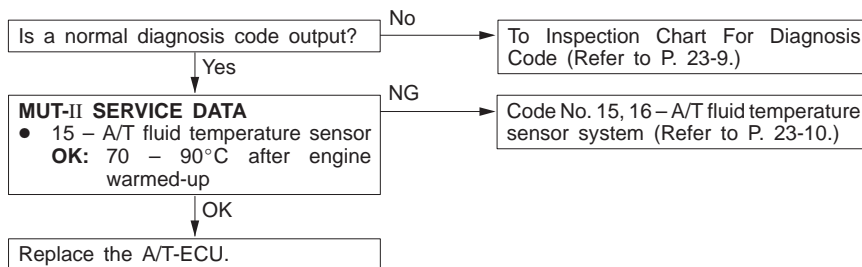

INSPECTION PROCEDURE 8


Upshifting occurs spontaneously	Probable cause
Upshifting occurs in ranges where upshifting should not occur, e. g. upshifting to 2nd gear in L range, 3rd gear in 2 range or 4th gear in D range when overdrive is disconnected.	<ul style="list-style-type: none"> ● Malfunction of inhibitor switch ● Malfunction of overdrive switch ● Malfunction of A/T-ECU

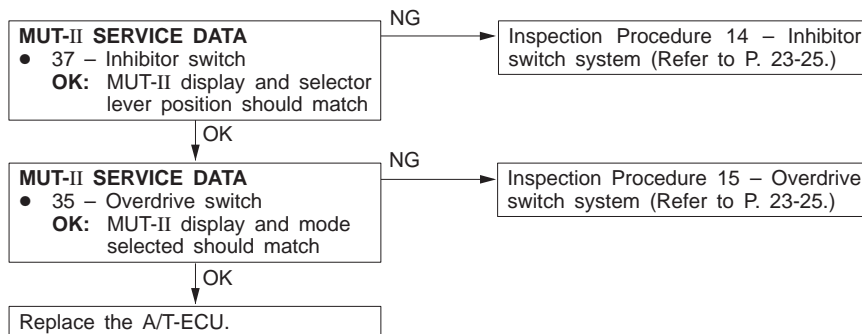

INSPECTION PROCEDURE 9

Incorrect drive gear position	Probable cause
Vehicle starts off in 2nd, 3rd or 4th gear when in D range. Often occurs when starting off is not smooth.	<ul style="list-style-type: none"> ● Malfunction of inhibitor switch ● Malfunction of direct clutch ● Malfunction of planetary gear ● Malfunction of valve body ● Malfunction of forward clutch ● Malfunction of solenoid valve No. 1 ● Malfunction of A/T-ECU


★: Refer to the Transmission Workshop Manual.

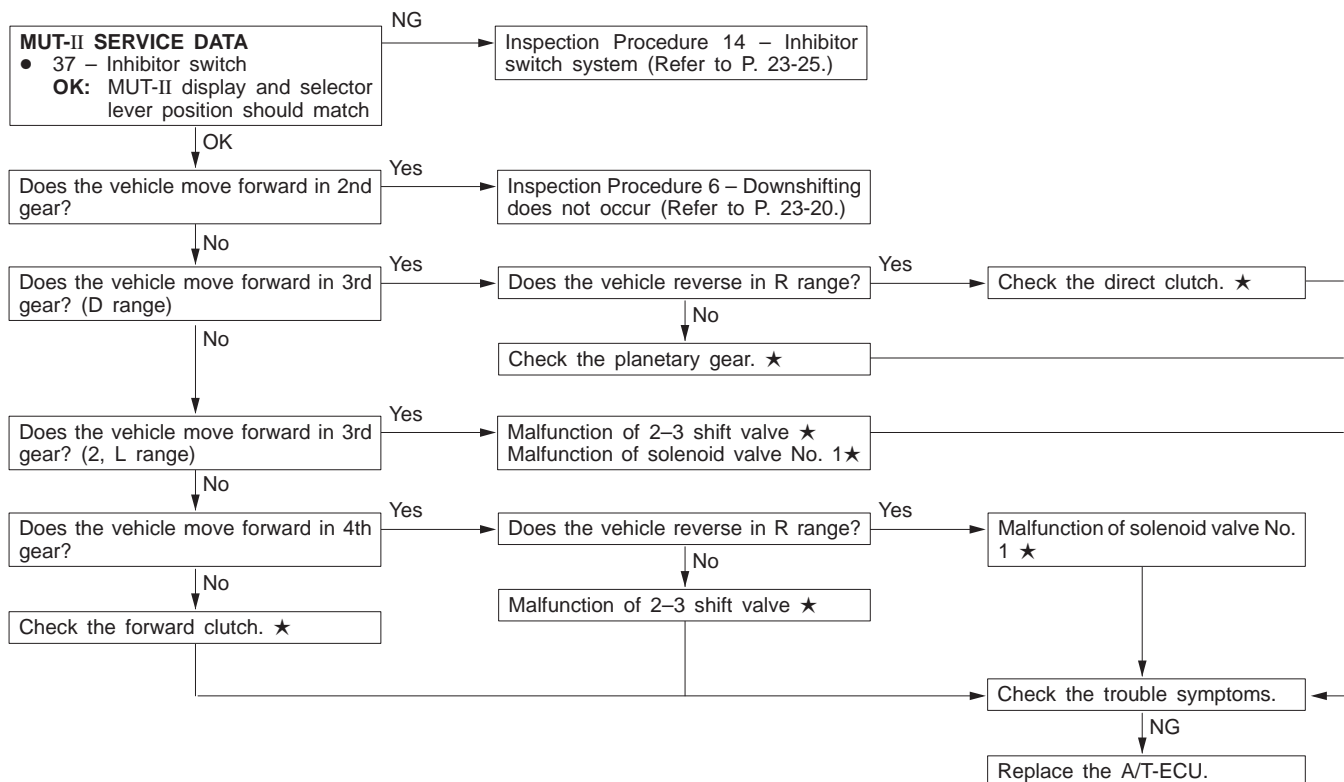

INSPECTION PROCEDURE 10

Large shocks	Probable cause
Shocks accompany shifting from N→D, N→R and during each upshift and downshift.	<ul style="list-style-type: none"> ● Malfunction of direct clutch ● Malfunction of brake No. 3 ● Malfunction of stop lamp switch ● Malfunction of inhibitor switch ● Malfunction of forward clutch ● Malfunction of valve body ● Malfunction of A/T-ECU


★: Refer to the Transmission Workshop Manual.

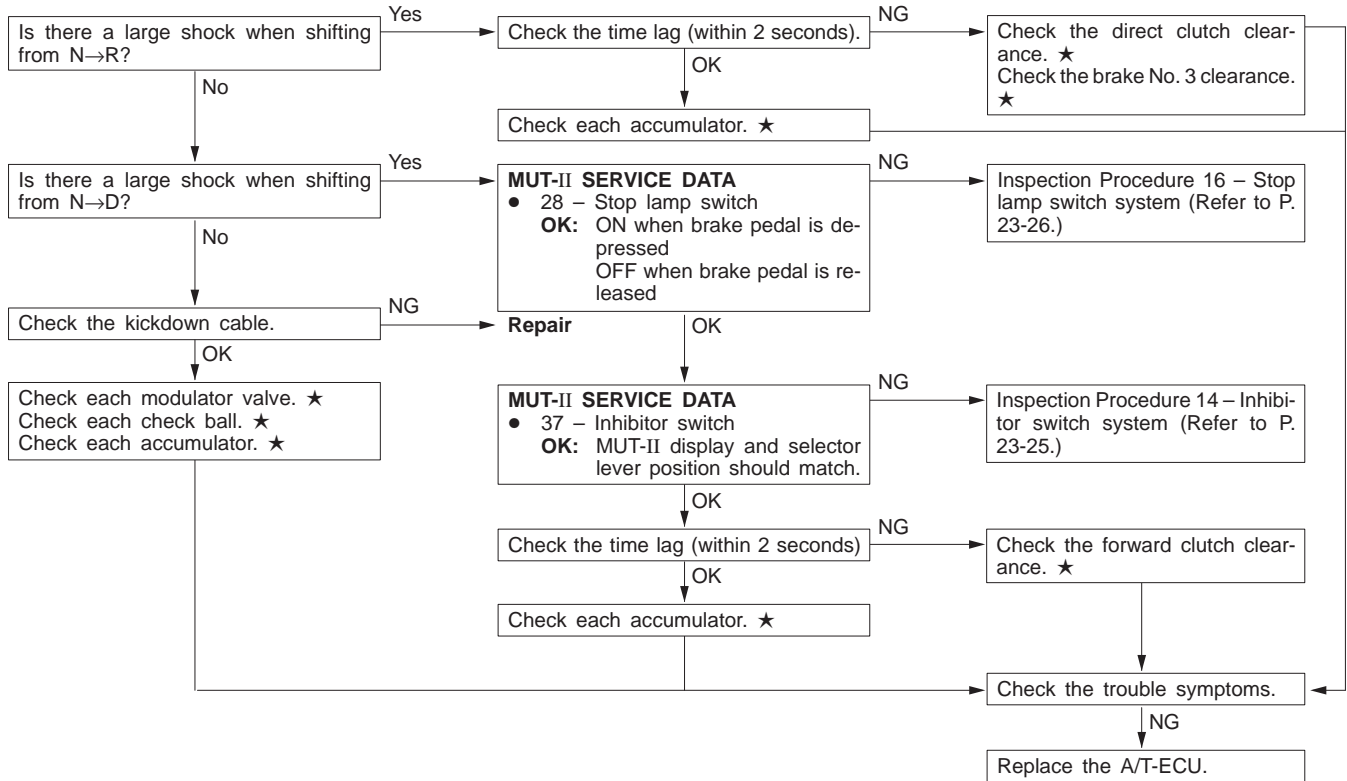

INSPECTION PROCEDURE 11

Slippage (vibration)	Probable cause
Occurs when a clutch or brake does not fully engage due to low hydraulic pressure or a worn facing. Appears as vibration when the problem is slight.	<ul style="list-style-type: none"> ● Malfunction of torque converter ● Malfunction of direct clutch ● Malfunction of forward clutch ● Malfunction of one-way clutch No. 1, No. 2 ● Malfunction of overdrive brake ● Malfunction of brake No. 1, No. 2, No. 3 ● Malfunction of overdrive one-way clutch ● Malfunction of A/T-ECU


★: Refer to the Transmission Workshop Manual.

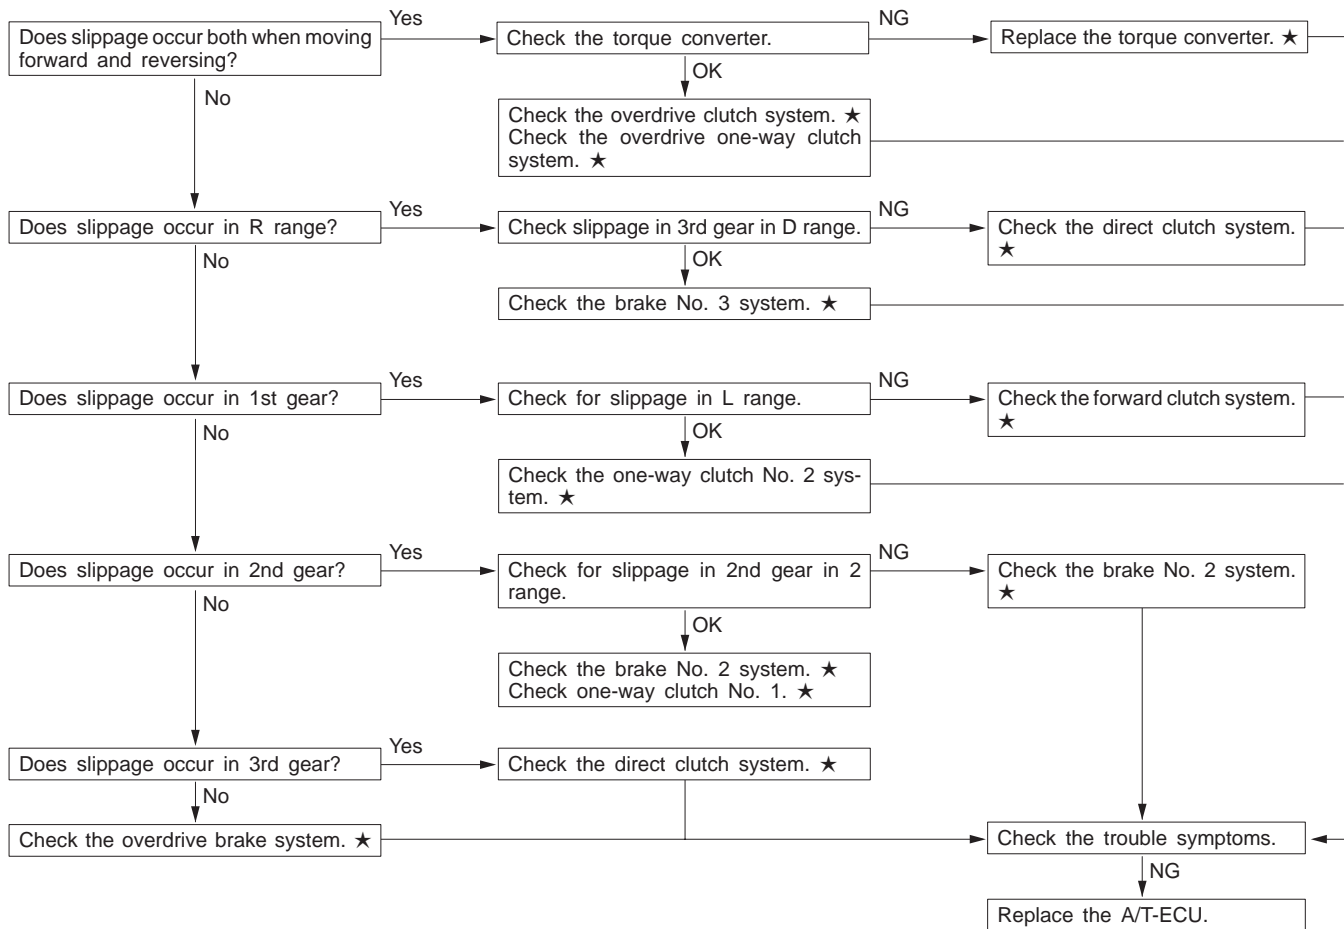

INSPECTION PROCEDURE 12

Lockup abnormality	Probable cause
When lockup does not operate even though in the lockup range, and also when lockup is operating and the engine is idling but then stalls.	<ul style="list-style-type: none"> ● Malfunction of torque converter ● Malfunction of valve body ● Malfunction of A/T-ECU


★: Refer to the Transmission Workshop Manual.

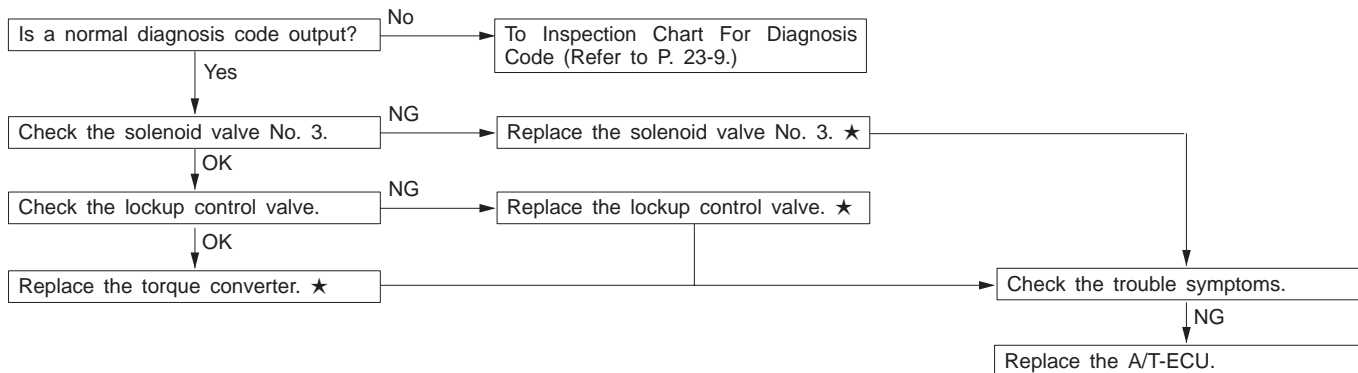

INSPECTION PROCEDURE 13


Abnormal engine braking	Probable cause
Engine braking effectiveness is poor after downshifting has occurred.	<ul style="list-style-type: none"> ● Malfunction of overdrive clutch ● Malfunction of brake No. 1, No. 3 ● Malfunction of valve body ● Malfunction of A/T-ECU

★: Refer to the Transmission Workshop Manual.

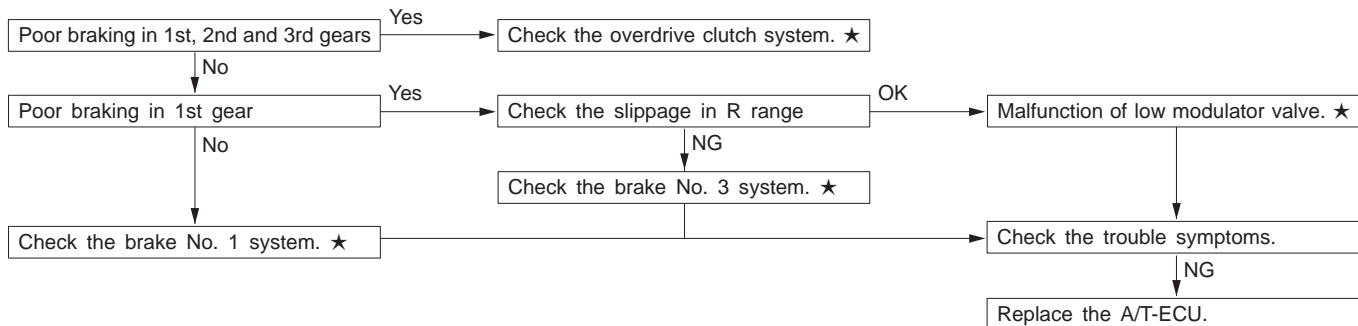


INSPECTION PROCEDURE 14

Inhibitor switch system	Probable cause
If the engine does not start in P or N range, the cause is probably a problem in the inhibitor switch system.	<ul style="list-style-type: none"> ● Malfunction of inhibitor switch ● Malfunction of harness or connector ● Malfunction of A/T-ECU

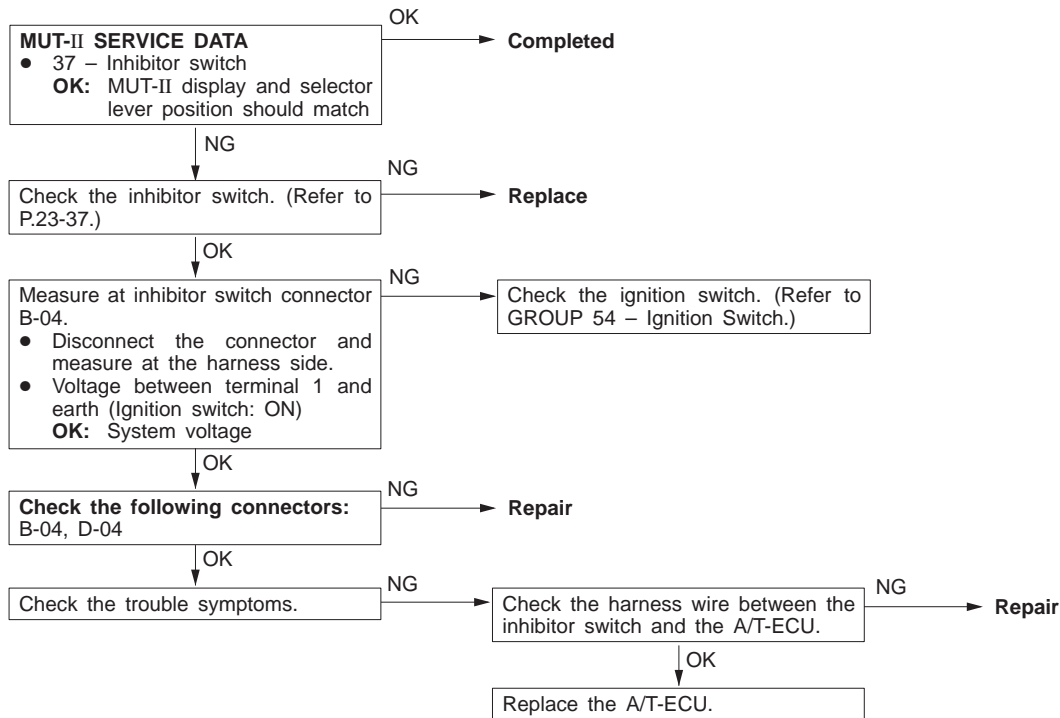


INSPECTION PROCEDURE 15

Overdrive switch system	Probable cause
If downshifting does not occur when overdrive switch is turned off while driving in 4th gear, or if shifting to 4th gear is not possible, the cause is probably a problem in the overdrive switch system.	<ul style="list-style-type: none"> ● Malfunction of overdrive switch ● Malfunction of harness or connector ● Malfunction of A/T-ECU ● Malfunction of ignition switch

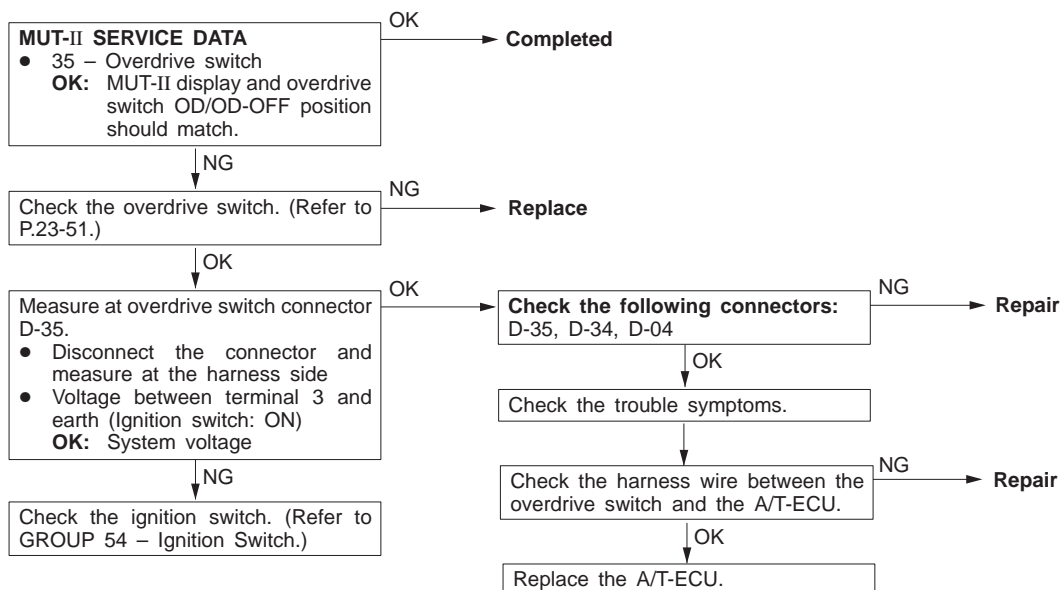

INSPECTION PROCEDURE 16

Stop lamp switch system	Probable cause
If large shocks occur during squat control, the cause is probably a problem with the stop lamp switch.	<ul style="list-style-type: none"> ● Malfunction of stop lamp switch ● Malfunction of harness or connector ● Malfunction of A/T-ECU

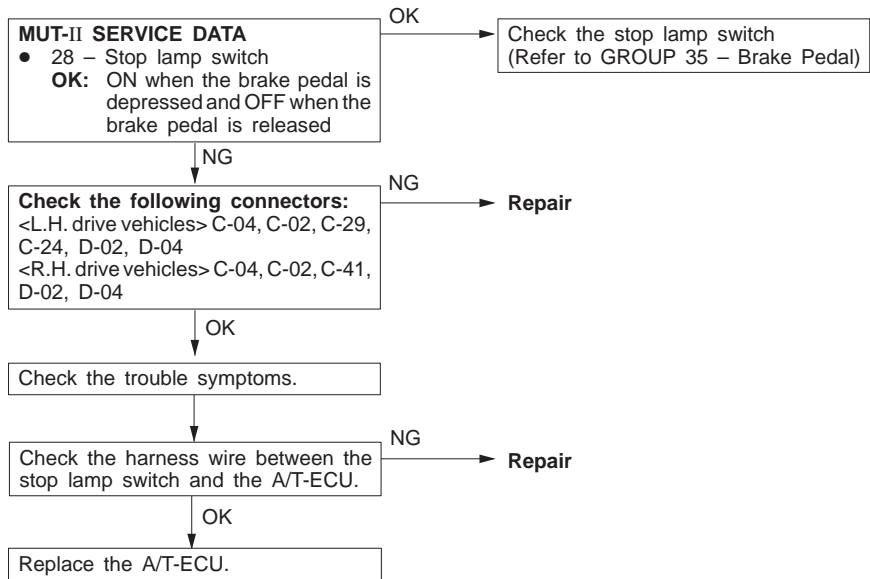

SERVICE DATA REFERENCE TABLE

Item No.	Inspection item	Inspection conditions		Normal value	
13	Accelerator pedal position sensor (throttle opening voltage)	Engine: Idle Selector lever position: N	Accelerator pedal: Fully released	0 – 5 %	
			Accelerator pedal: Depressed	Gradually rises from the above value	
			Accelerator pedal: Fully depressed (up to 2 seconds)	85 – 100 %	
14	Accelerator pedal position sensor (power supply voltage)	Ignition switch: ON Engine: Stopped	Ignition switch: ON	Approx. 5 V	
			Ignition switch: OFF	0 V	
15	A/T fluid temperature sensor	Driving with engine warmed up	Drive for 15 minutes or more until the A/T fluid temperature is 70 – 90°C.	Gradually increases to 70 – 90°C	
22	Wide open throttle switch	Accelerator pedal position	Released	OFF	
			Depressed	ON	
27	Shift position signal	Accelerator pedal: Fully released Engine: Idle (Vehicle stopped) Selector lever position: N Brake pedal: Depressed	Shifting from N to D	1st→3rd→1st	
			Selector lever position: L	Idle (Vehicle stopped)	1st
			Selector lever position: 2	Idle (Vehicle stopped)	1st
				Driving at 40 km/h (20 seconds or more)	2nd
			Selector lever position: D Overdrive switch: OFF	Driving at constant speed of 50 km/h (20 seconds or more)	3rd
			Selector lever position: D Overdrive switch: OFF	Driving at constant speed of 50 km/h (20 seconds or more)	4th
28	Stop lamp switch	Ignition switch: ON Engine: Stopped	Brake pedal: Depressed	ON	
			Brake pedal: Released	OFF	
31	Input shaft speed sensor	Selector lever position: D Overdrive switch: OFF	Driving at constant speed of 50 km/h	1,800 – 2,000 r/min	
32	Output shaft speed sensor	Selector lever position: D Overdrive switch: OFF	Driving at constant speed of 50 km/h	1,800 – 2,000 r/min	
35	Overdrive switch	Ignition switch: ON Engine: Stopped	Overdrive switch: OFF	OD-OFF	
			Overdrive switch: ON	OD	

Item No.	Inspection item	Inspection conditions	Normal value	
37	Inhibitor switch	Ignition switch: ON Engine: Stopped	Selector lever position: P	P, R, D
			Selector lever position: R	P, R, D
			Selector lever position: N	N
			Selector lever position: D	P, R, D
			Selector lever position: 2	2
			Selector lever position: L	L
38	Vehicle speed sensor	Selector lever position: L, D Overdrive switch: OFF	Idling in 1st gear (Vehicle stopped)	0 r/min
			Driving at constant speed of 50 km/h (3rd gear)	450 – 550 r/min
41	Solenoid valve No. 1	Selector lever position: D Overdrive switch: ON	Driving at constant speed of 5 km/h (1st gear)	ON
			Driving at constant speed of 50 km/h (4th gear)	OFF
43	Solenoid valve No. 2	Selector lever position: D Overdrive switch: OFF	Driving at constant speed of 5 km/h (1st gear)	OFF
			Driving at constant speed of 50 km/h (3rd gear)	ON
47	Solenoid valve No. 3	Selector lever position: D Overdrive switch: ON	Driving at constant speed of 5 km/h (1st gear)	OFF
			Driving at constant speed of 50 km/h (4th gear)	ON
53	N range switch	Ignition switch: ON Engine: Stopped	Selector lever position: N	ON
			Selector lever position: Other than N	OFF
55	2 range switch		Selector lever position: 2	ON
			Selector lever position: Other than 2	OFF
56	L range switch		Selector lever position: L	ON
			Selector lever position: Other than L	OFF
61	Free-wheeling engage switch	Ignition switch: ON Engine: Stopped	Transfer lever position: Other than 4WD	4WD
			Transfer lever position: 4WD	2WD
63	Dual-pressure switch	Engine: Stopped Selector lever position: N	A/C switch: ON	ON
			A/C switch: OFF	OFF

REFERENCE FOR FAIL-SAFE/BACKUP FUNCTIONS

When malfunctions of the main sensors or actuators are detected by the diagnosis system, the vehicle is controlled by means of the pre-set control logic to maintain safe conditions for driving.

Malfunctioning item	Control contents during malfunction
Output shaft speed sensor	If there is an open circuit in the output shaft speed sensor, upshifting to 4th gear and lockup control is stopped.
Inhibitor switch	If there is an open circuit in the N, 2 or L signal line, driving is possible in the case of 2 and L (same as D range) so that control can be performed as if the range is D range, and driving is not possible in N range. If more than one of the N, 2 or L signals are input, the order of priority for control is L→2→N.
Accelerator pedal position sensor	If the output is 0.335 V or less or 4.8 V or more during idling condition, gear shifting control when throttle is fully closed is carried out.
Solenoid valve No. 3	If a problem is detected, lockup is stopped over the whole range and the solenoid is turned off to prevent the engine from stalling during idling.
Solenoid valve No. 1, No. 2	If a problem is detected, each solenoid stops operating and is turned off. The gear shifting logic when a problem is detected is given in the table below

Selector lever position	Normal			When the solenoid valve No. 1 has broken			When the solenoid valve No. 2 has broken			When the solenoid valves No. 1 and No. 2 have broken		
	Gear	S1	S2	Gear	S1	S2	Gear	S1	S2	Gear	S1	S2
D	1	○	×	3		×→○	1	○		O/D		
	2	○	○	3		○	O/D	○→×		O/D		
	3	×	○	3		○	O/D	×		O/D		
	O/D	×	×	O/D		×	O/D	×		O/D		
2	1	○	×	3		×→○	1	○		3		
	2	○	○	3		○	3	○→×		3		
	3	×	○	3		○	3	×		3		
L	1	○	×	1		×	1	○		1		
	2	○	○	2		○	1	○		1		

- : Energized (ON)
- × : Not energized (OFF)

A/T-ECU TERMINAL VOLTAGE REFERENCE CHART

1	2	3	4			5	6	7	8					
9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
24	25	26	27	28	29	30	31	32	33	34	35			

W0181AG

Terminal No.	Inspection item	Inspection conditions	Standard value
1	Solenoid valve No. 1	When in 1st or 2nd gear	System voltage
		When in 3rd or 4th gear	0 V
2	Solenoid valve No. 2	When in 2nd or 3rd gear	System voltage
		When in 1st or 4th gear	0 V
3	Wide open throttle switch	Accelerator pedal: Released	4.5 – 5.5 V
		Accelerator pedal: Depressed	Less than 0.4 V
4	Output shaft speed sensor earth	–	–
5	Stop lamp switch	Brake pedal: Depressed	System voltage
		Brake pedal: Released	0 V
6	Free-wheeling engage switch	Transfer lever position: Other than 4WD	System voltage
		Transfer lever position: 4WD	0 V
8	Inhibitor switch (L)	Selector lever position: L	System voltage
		Selector lever position: Other than L	0 V
9	Back-up power supply	Ignition switch: OFF	System voltage
10	Solenoid valve No. 3	When lockup clutch is operating	System voltage
		When lockup clutch is not operating	0 V
11	Diagnosis control terminal	–	–
12	A/T fluid temperature sensor earth	–	–
13	Output shaft speed sensor	Vehicle: Stopped	Approx. 2.5 V
		Vehicle: Driving	Other than 2.5 V
14	Dual-pressure switch	A/C switch: OFF	0 V
		A/C switch: ON	System voltage
15	Input shaft speed sensor earth	–	–
16	Input shaft speed sensor	Ignition switch: OFF	0 V
		Ignition switch: ON	2.5 V

Terminal No.	Inspection item	Inspection conditions	Standard value
19	Communication with input signals from engine-ECU	Engine: Idling Selector lever position: D	Other than 0 V
21	Communication with output signals to engine-ECU	Engine: Idling Selector lever position: D	Other than 0 V
23	Inhibitor switch (2)	Selector lever position: 2	System voltage
		Selector lever position: Other than 2	0 V
24	Power supply	Ignition switch: OFF	0 V
		Ignition switch: ON	System voltage
25	Earth	Engine: Idling	0 V
27	Vehicle speed sensor	Vehicle: Slowly moving forward	Alternates between 0↔Approx. 5 V
28	A/T fluid temperature sensor	ATF temperature: 120°C	Approx. 0.3 V
		ATF temperature: 150°C	Approx. 0.15 V
29	Overdrive switch	Overdrive switch: ON	System voltage
		Overdrive switch: OFF	0 V
30	Accelerator pedal position sensor (throttle opening voltage)	Accelerator pedal: Released	Approx. 1 V
		Accelerator pedal: Fully depressed	Approx. 4 V
31	Accelerator pedal position sensor (power supply voltage)	Ignition switch: ON	Approx. 5 V
		Ignition switch: OFF	0 V
32	Diagnostic output terminal	–	–
33	N range lamp	Ignition switch: ON	System voltage
		Ignition switch: OFF	0 V
34	Inhibitor switch (N)	Selector lever position: N	System voltage
		Selector lever position: Other than N	0 V

TROUBLESHOOTING <A/T KEY INTERLOCK AND SHIFT LOCK MECHANISMS>

INSPECTION CHART FOR TROUBLE SYMPTOMS

Problem	Inspection Procedure No.	Reference page
Selector lever can be moved from P to R without depressing brake pedal when ignition key is at positions other than LOCK (OFF).	1	23-32
Selector lever cannot be moved from P to R with brake pedal depressed when ignition key is at positions other than LOCK (OFF).	2	23-32
Selector lever can be moved from P to R with brake pedal depressed when ignition key is at LOCK (OFF) position.	3	23-33
Selector lever cannot be moved from P to R smoothly.	4	23-33
Selector lever cannot be moved from R to P.	5	23-33
Ignition key cannot be turned to LOCK (OFF) position when selector lever is at P position.	6	23-33
Ignition key can be turned to LOCK (OFF) position when selector lever is at positions other than P.	7	23-33

INSPECTION CHART FOR TROUBLE SYMPTOMS

INSPECTION PROCEDURE 1

Selector lever can be moved from P to R without depressing brake pedal when ignition key is at positions other than LOCK (OFF).	Probable cause
Lock cam or shift lock cable may be defective.	<ul style="list-style-type: none"> ● Malfunction of lock cam ● Malfunction of shift lock cable

Check items described in the column “Probable cause”.

INSPECTION PROCEDURE 2

Selector lever cannot be moved from P to R with brake pedal depressed when ignition key is at positions other than LOCK (OFF).	Probable cause
Selector lever assembly, shift lock cable, key interlock cable, transmission control cable or lock cam may be defective.	<ul style="list-style-type: none"> ● Malfunction of selector lever assembly ● Malfunction of shift lock cable ● Malfunction of key interlock cable ● Malfunction of transmission control cable ● Malfunction of lock cam

Check items described in the column “Probable cause”.

INSPECTION PROCEDURE 3

Selector lever can be moved from P to R with brake pedal depressed when ignition key is at LOCK (OFF) position.	Probable cause
Lock cam or key interlock cable may be defective.	<ul style="list-style-type: none"> ● Malfunction of lock cam ● Malfunction of key interlock cable

Check items described in the column “Probable cause”.

INSPECTION PROCEDURE 4

Selector lever cannot be moved from P to R smoothly.	Probable cause
Key interlock cable, shift lock cable, lock cam, or selector lever assembly may be defective.	<ul style="list-style-type: none"> ● Malfunction of key interlock cable ● Malfunction of shift lock cable ● Malfunction of lock cam ● Malfunction of selector lever assembly

Check items described in the column “Probable cause”.

INSPECTION PROCEDURE 5

Selector lever cannot be moved from R to P.	Probable cause
Selector lever assembly or transmission control cable may be defective.	<ul style="list-style-type: none"> ● Malfunction of selector lever assembly ● Malfunction of transmission control cable

Check items described in the column “Probable cause”.

INSPECTION PROCEDURE 6

Ignition key cannot be turned to LOCK (OFF) position when selector lever is at P position.	Probable cause
Lock cam, key interlock cable or key cylinder slider may be defective.	<ul style="list-style-type: none"> ● Malfunction of lock cam ● Malfunction of key interlock cable ● Malfunction of key cylinder slider

Check items described in the column “Probable cause”.

INSPECTION PROCEDURE 7

Ignition key can be turned to LOCK (OFF) position when selector lever is at positions other than P.	Probable cause
Lock cam, key cylinder cover or key interlock cable may be defective.	<ul style="list-style-type: none"> ● Malfunction of lock cam ● Malfunction of key cylinder cover ● Malfunction of key interlock cable

Check items described in the column “Probable cause”.

ON-VEHICLE SERVICE

ESSENTIAL SERVICE

AUTOMATIC TRANSMISSION FLUID CHECK


Caution

When the transmission has been replaced or overhauled, or driving has been carried out under the severe condition, the A/T fluid cooler line flushing should always be carried out and also, the A/T fluid should always be replaced.

1. Drive the vehicle until the A/T fluid temperature rises to the normal temperature (70 – 90°C).
2. Park the vehicle on a level surface.
3. Move the selector lever through all positions to fill the torque converter and the hydraulic circuits with A/T fluid, and then move the selector lever to the N position.
4. After wiping off any dirt around the oil level gauge, remove the oil level gauge and check the condition of the A/T fluid.

NOTE

If the A/T fluid smells as if it is burning, it means that the A/T fluid has been contaminated by the particles from the bushes and friction materials, a transmission overhaul and flushing the A/T fluid cooler line may be necessary.

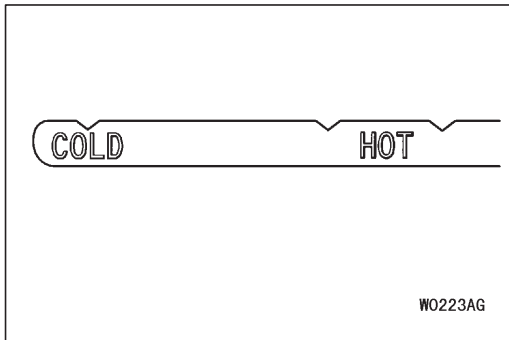

5. Check that the A/T fluid level is at the HOT mark on the oil level gauge. If the A/T fluid level is lower than this, pour in more A/T fluid until the level reaches the HOT mark.

**Automatic transmission fluid:
DEXRON II or equivalent**


NOTE

If the A/T fluid level is low, the oil pump will draw in air along with the A/T fluid, which will cause bubbles to form inside the hydraulic circuit. This will in turn cause the hydraulic pressure to drop, which will result in late shifting and slipping of the clutches and brakes.

If there is too much A/T fluid, the gears can churn it up into foam and cause the same conditions that can occur with low A/T fluid levels.

In either case, air bubbles can cause overheating and oxidation of the A/T fluid which can interfere with normal valve, clutch, and brake operation. Foaming can also result in A/T fluid escaping from the transmission vent hole, in which case it may be mistaken for a leak.

6. Securely insert the oil level gauge.

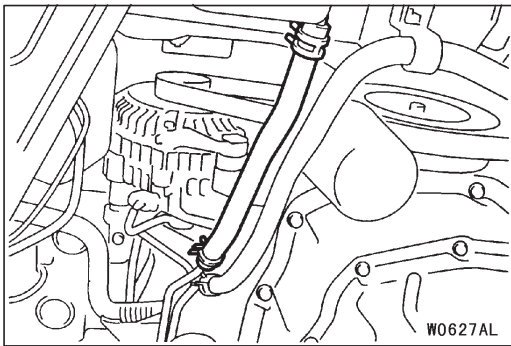

AUTOMATIC TRANSMISSION FLUID REPLACEMENT

Caution

When the transmission has been replaced or overhauled, the A/T fluid cooler line flushing should always be carried out before installing the A/T fluid cooler hose.

If you have a A/T fluid changer, use this changer to replace the A/T fluid. If you do not have a A/T fluid changer, replace the A/T fluid by the following procedure.


1. Disconnect the hose shown in the illustration which connects the transmission and the A/T fluid cooler (inside the radiator).
2. Start the engine and let the A/T fluid drain out.

Running conditions: N range with engine idling

Caution

The engine should be stopped within one minute after it is started. If the A/T fluid has all drained out before then, the engine should be stopped at that point.

Discharge volume: Approx. 3.4 ℓ

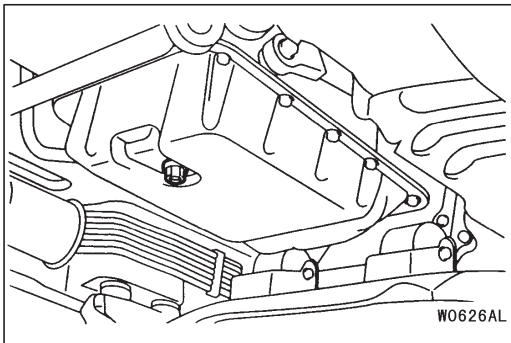

3. Remove the drain plug from the bottom of the transmission case to drain the A/T fluid.

Discharge volume: Approx. 0.8 ℓ

4. Install the drain plug via a new gasket, and tighten it to the specified torque.

Tightening torque: 20.1 Nm

5. Pour the new A/T fluid in through the oil filler tube.

Adding volume: Approx. 4.2 ℓ

Caution

Stop pouring if the full volume of A/T fluid cannot be poured in.

6. Repeat the procedure in step 2.



NOTE

Drain the A/T fluid from the cooler hose 6.0 ℓ at least in steps 2 and 5. Then drain the A/T fluid a little and check the A/T fluid for dirt.

If it has been contaminated, repeat the steps 5 and 6.

7. Pour the new A/T fluid in through the oil filler tube.

Adding volume: Approx. 3.4 ℓ

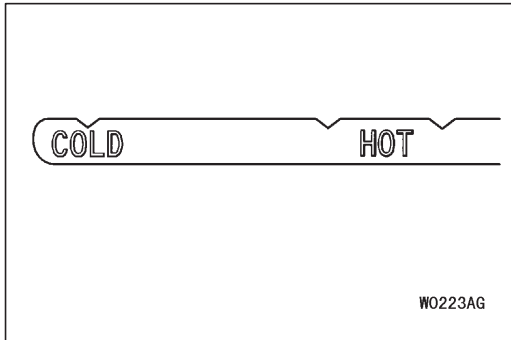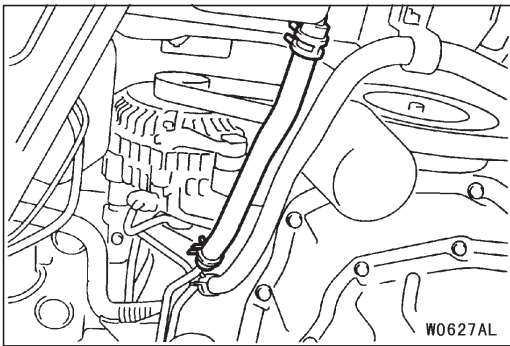


8. Reconnect the hose which was disconnected in step 1 above, and firmly replace the oil level gauge.
9. Start the engine and run it at idle for 1 – 2 minutes.
10. Move the selector lever through all positions, and then move it to the N position.

11. Check that the A/T fluid level is at the COLD mark on the oil level gauge. If the level is lower than this, pour in more A/T fluid.
12. Drive the vehicle until the A/T fluid temperature rises to the normal temperature (70 – 90°C), and then check the A/T fluid level again.
The A/T fluid level must be at the HOT mark.

NOTE

The COLD level is for reference only; the HOT level should be regarded as the standard level.

13. Firmly insert the oil level gauge into the oil filler tube.

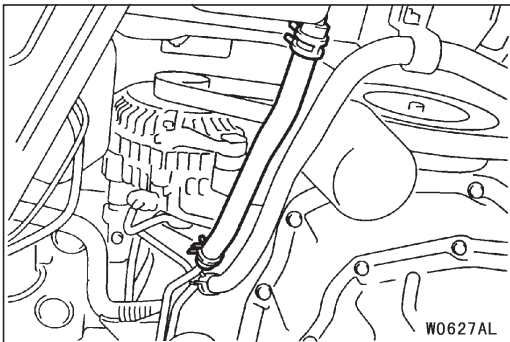

AUTOMATIC TRANSMISSION FLUID COOLER LINE FLUSHING

Caution

When the transmission has been replaced or overhauled, or A/T fluid is contaminated, the A/T fluid cooler line flushing should always be carried out.

1. Disconnect the hose shown in the illustration which connects the transmission and the A/T fluid cooler (inside the radiator).
2. Start the engine and let the A/T fluid drain out.

Running conditions: N range with engine idling

Caution

The engine should be stopped within one minute after it is started. If the A/T fluid has all drained out before then, the engine should be stopped at that point.

Discharge volume: Approx. 3.4 ℓ

3. Pour the new A/T fluid in through the oil filler tube.

Adding volume: Approx. 3.4 ℓ

Caution

Stop pouring if the full volume of A/T fluid cannot be poured in.


- Repeat the procedure in step 2.

NOTE

Drain the A/T fluid from the cooler hose 6.0 ℓ at least in step 2. Then drain the A/T fluid a little and check the A/T fluid for dirt.

If it has been contaminated, repeat the steps 3 and 4.

- Follow the automatic transmission fluid replacement procedure from the step 3.

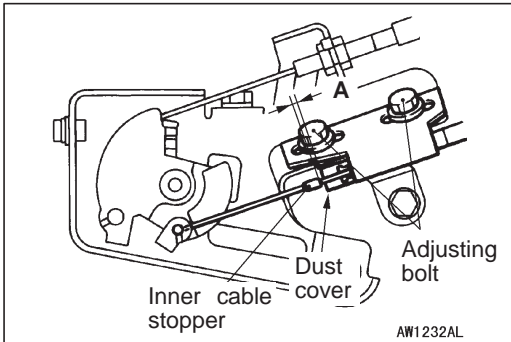



KICKDOWN CABLE CHECK AND ADJUSTMENT

- Release the accelerator pedal.
- Loosen the adjusting nut or adjusting bolt. Move the outer cable of the kickdown cable to adjust the clearance (A) between the inner cable stopper and dust cover end to the standard value, and then tighten the adjusting nut or adjusting bolt to secure the kickdown cable.

Standard value: 0.8 – 1.5 mm


Caution

Adjust the accelerator cable assembly after the kickdown cable adjustment.

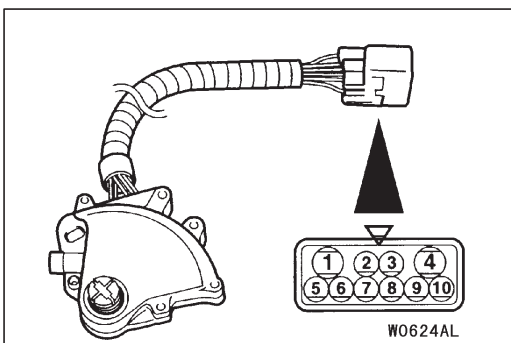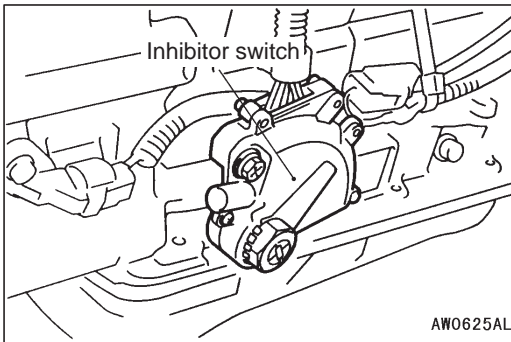

INHIBITOR SWITCH CONTINUITY CHECK


Position	Terminal No.									
	1	2	3	4	5	6	7	8	9	10
P	<input type="checkbox"/>			<input type="checkbox"/>		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		
R							<input type="checkbox"/>	<input type="checkbox"/>		
N	<input type="checkbox"/>			<input type="checkbox"/>	<input type="checkbox"/>			<input type="checkbox"/>		
D		<input type="checkbox"/>						<input type="checkbox"/>		
2								<input type="checkbox"/>		<input type="checkbox"/>
L			<input type="checkbox"/>					<input type="checkbox"/>		

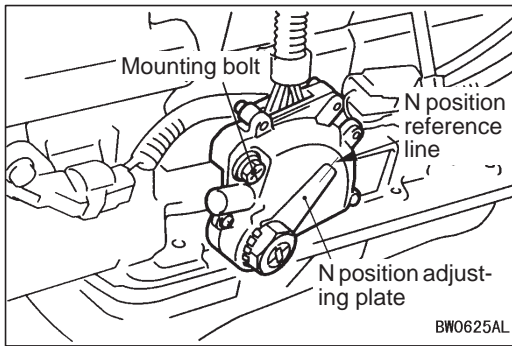

INHIBITOR SWITCH AND CONTROL CABLE ADJUSTMENT

1. Set the manual control lever to the N position.
2. Loosen the inhibitor switch mounting bolt.
3. Turn the inhibitor switch to align the N position reference line on the inhibitor switch with the scratched line on the N position adjusting plate.
4. Tighten the mounting bolt to the specified torque.


Tightening torque: 5.4 Nm

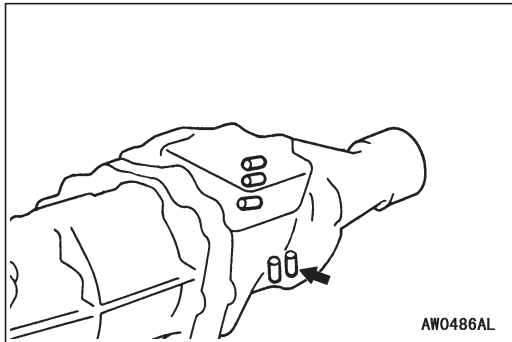

VCU LOCK DETECTION SWITCH CONTINUITY CHECK

Check the continuity between the terminal of the brown connector installed in the side of transfer case (shown in the illustration) and the transfer case.


Transfer lever position	Continuity
4H	No continuity
4HLc	Continuity

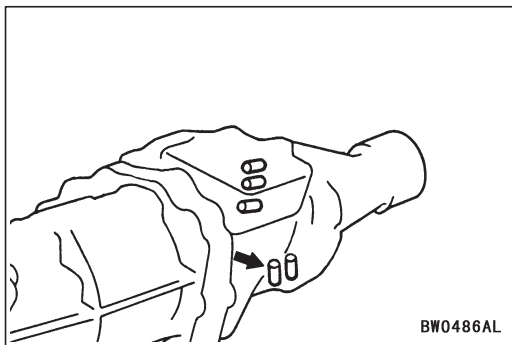

2WD/4WD DETECTION SWITCH CONTINUITY CHECK

Check the continuity between the terminal of the white connector installed in the side of transfer case (shown in the illustration) and the transfer case.


Transfer lever position	Continuity
2H	Continuity
4H	No continuity

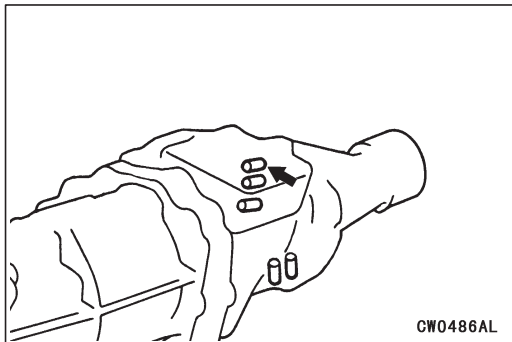

VCU LOCK OPERATION DETECTION SWITCH CONTINUITY CHECK

Check the continuity between the terminal of the brown connector installed in the top of transfer case (shown in the illustration) and the transfer case.


Transfer lever position	Continuity
4H	No continuity
4HLc	Continuity

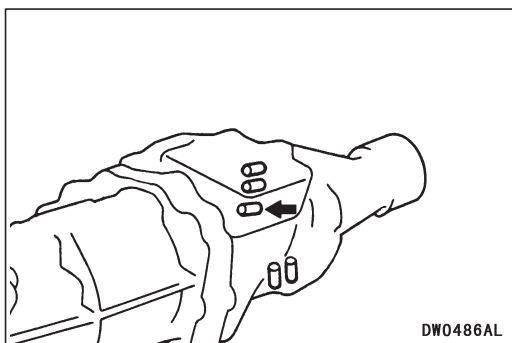

4WD OPERATION DETECTION SWITCH CONTINUITY CHECK

Check the continuity between the terminal of the white connector installed in the top of transfer case (shown in the illustration) and the transfer case.


Transfer lever position	Continuity
2H	No continuity
4H	Continuity

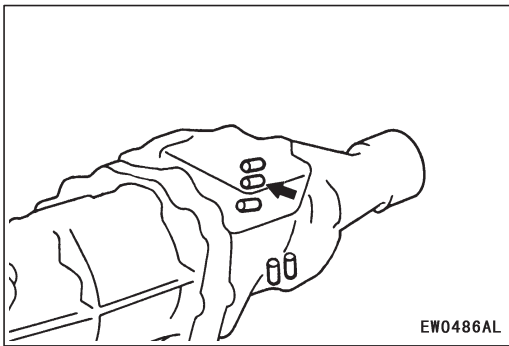

HIGH/LOW DETECTION SWITCH CONTINUITY CHECK

Check the continuity between the terminal of the black connector installed in the top of transfer case (shown in the illustration) and the transfer case.


Transfer lever position	Continuity
4HLc	Continuity
Between 4HLc and 4LLc	No continuity
4LLc	Continuity

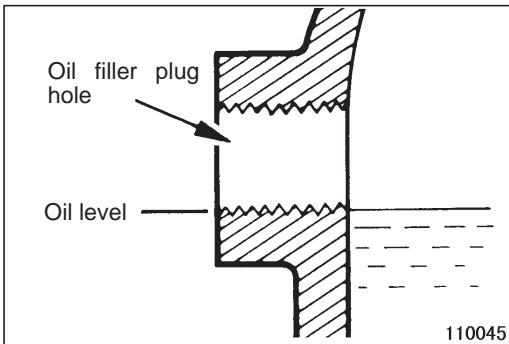

TRANSFER OIL CHECK

1. Remove the oil filler plug.
2. Check that the oil level is at the lower portion of the oil filler plug hole.
3. Check that the oil is not noticeably dirty, and that it has a suitable viscosity.
4. Tighten the oil filler plug to the specified torque.

Tightening torque: 29 – 34 Nm

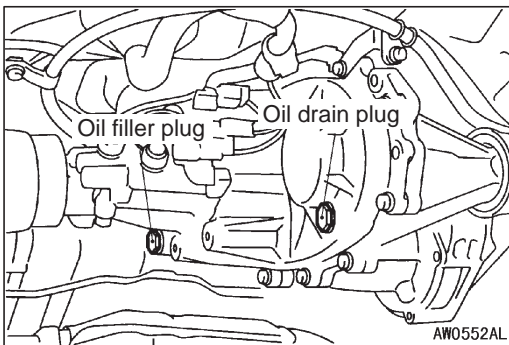

TRANSFER OIL REPLACEMENT

1. Remove the oil drain plug to drain oil.
2. Tighten the oil drain plug to the specified torque.
3. Remove the oil filler plug and fill with specified oil till the level comes to the lower portion of oil filler plug hole.

Specified oil:

Hypoid gear oil SAE 75W - 90 or 75W - 85W conforming to API GL-4


Quantity: 2.2 ℓ

4. Tighten the oil filler plug to the specified torque.


Tightening torque: 29 – 34 Nm

A/T CONTROL COMPONENT LOCATION


Name	Symbol	Name	Symbol
Accelerator pedal position sensor (APS)	K	Inhibitor switch	D
		Input shaft speed sensor	C
A/T-ECU	N	Output shaft speed sensor	F
A/T fluid temperature sensor	E	Overdrive switch	H
Diagnosis connector	M	Solenoid valves	E
Dual-pressure switch	A	Stop lamp switch	J
Engine-ECU	I	Vehicle speed sensor	G
Free wheeling engage switch	B	Wide open throttle position switch	L

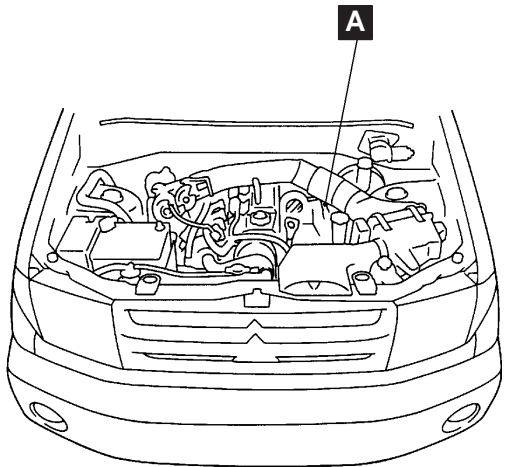


W1044AL

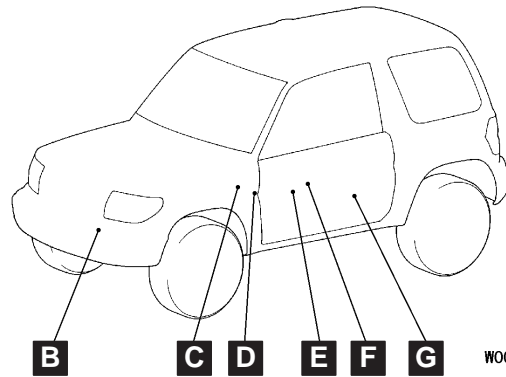

W0011AL

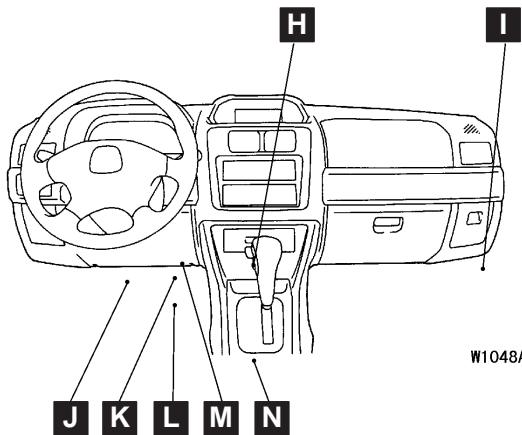

W1048AL

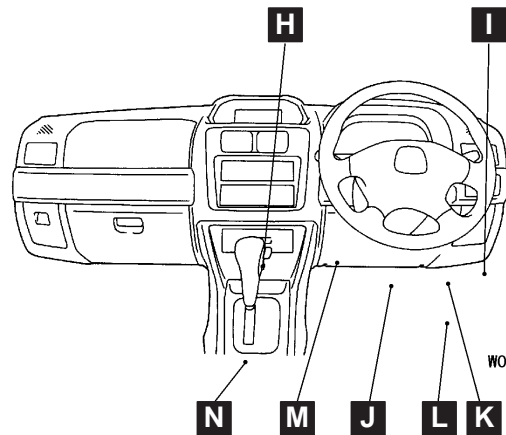

W0019AL

A/T CONTROL COMPONENT CHECK**OVERDRIVE SWITCH CHECK**

Refer to P.23-51.

WIDE OPEN THROTTLE SWITCH CHECK

Refer to P.23-51.

ACCELERATOR PEDAL POSITION SENSOR (APS) CHECK

Refer to GROUP 13A – On-vehicle Service.

INHIBITOR SWITCH CHECK

Refer to P.23-37.

STOP LAMP SWITCH CHECK

Refer to GROUP 35 – On-vehicle Service.

VEHICLE SPEED SENSOR CHECK


Refer to GROUP 54 – On-vehicle Service.

DUAL-PRESSURE SWITCH CHECK


Refer to GROUP 55 – On-vehicle Service.

FREE WHEELING ENGAGE SWITCH CHECK

Refer to GROUP 26 – On-vehicle Service.

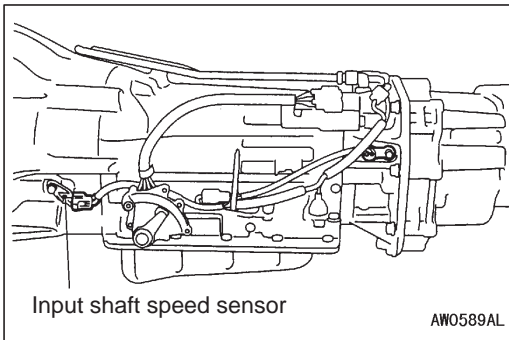**INPUT SHAFT SPEED SENSOR CHECK**



1. Disconnect the input shaft speed sensor connector.

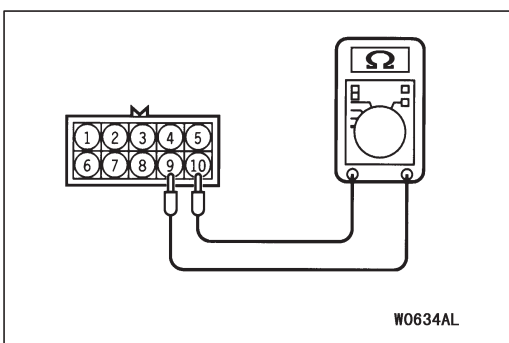

2. Measure the resistance between terminals 9 and 10 of the input shaft speed sensor connector.



Standard value: $620 \pm 60 \Omega$ (at $20 \text{ }^\circ\text{C}$)

3. If the resistance is not within the standard value, replace the input shaft speed sensor.

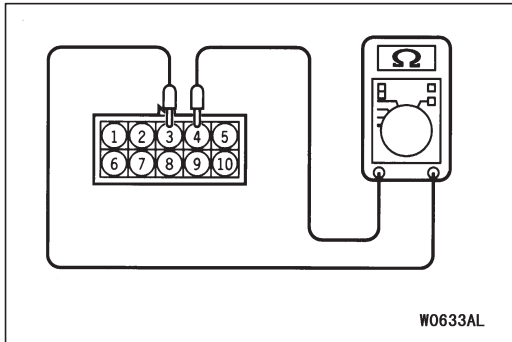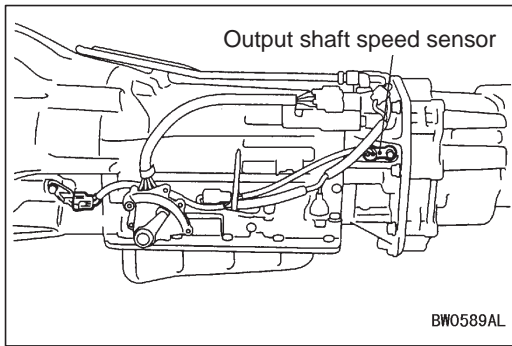

OUTPUT SHAFT SPEED SENSOR CHECK

1. Disconnect the output shaft speed sensor connector.
2. Measure the resistance between terminals 3 and 4 of the output shaft speed sensor connector.
Standard value: 430 ± 43 Ω (at 20 °C)
3. If the resistance is not within the standard value, replace the output shaft speed sensor.

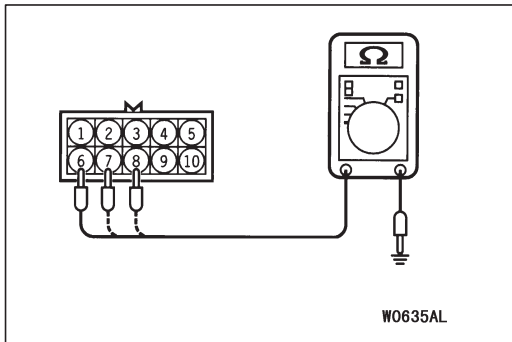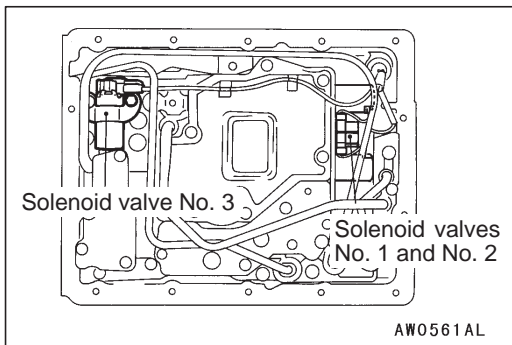


SOLENOID VALVE CHECK

1. Disconnect the solenoid valve connector.
2. Measure the solenoid valve resistance.
Standard value:


Item	Measurement terminal	Resistance
Solenoid valve No. 1	Between terminal 6 and earth	13 ± 2 Ω (at 25°C)
Solenoid valve No. 2	Between terminal 7 and earth	
Solenoid valve No. 3	Between terminal 8 and earth	

3. If the resistance is not within the standard value, replace the solenoid valve assembly.

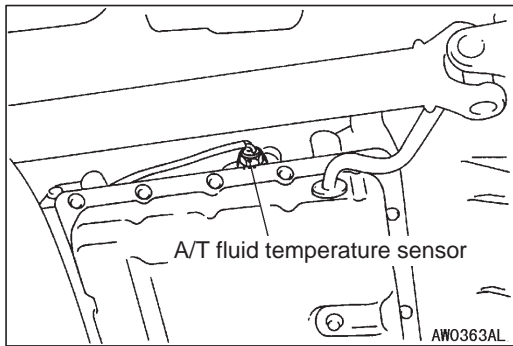

A/T FLUID TEMPERATURE SENSOR CHECK

1. Disconnect the A/T fluid temperature sensor connector.

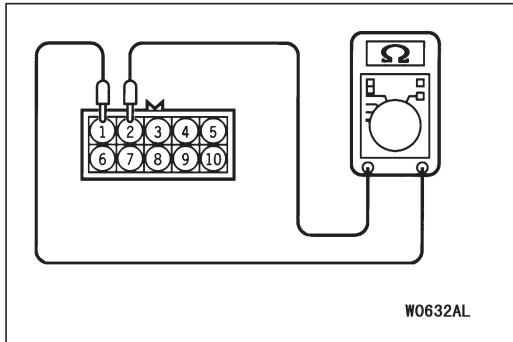


2. Measure the resistance between terminals 1 and 2 of the A/T fluid temperature sensor connector.

Standard value

Temperature (°C)	Resistance
25	1,100 Ω
120	57 Ω

3. If the resistance is not the standard value, replace the A/T fluid temperature sensor.

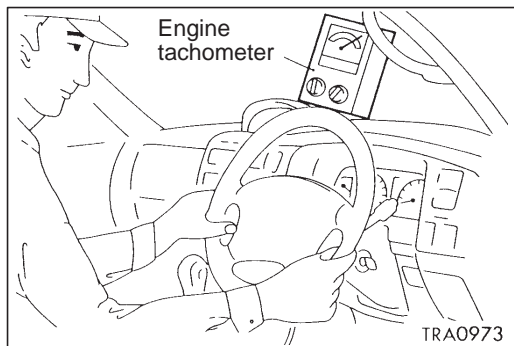

CONVERTER STALL TEST

In this test, the engine maximum speed when the torque converter stalls with the selector lever in the “D” or “R” range is measured to check operation of the torque converter, starter and one-way clutch and check holding performance of the transmission clutch (including brake).

Caution

Do not stand in front or at rear of the vehicle during this test.

1. Check the transmission fluid level. The fluid temperature should be at the level after normal operation (70 – 90°C). The engine coolant temperature should also be at the level after normal operation (80 – 95°C).
2. Apply chocks to the rear wheels (right and left).
3. Mount an engine tachometer.
4. Apply fully the parking and service brakes.
5. Start the engine.
6. With the selector lever in the “D” range, fully depress the accelerator pedal and read off the engine maximum speed.

NOTE


When doing so, do not keep the engine running with throttle full open for more than 5 seconds. If two or more stall tests are needed, place the selector lever in the “N” position and run the engine at about 1,000 r/min to allow the transmission fluid to cool before another stall test.

Standard value: 2,320 – 2,620 r/min

7. Place the selector lever in the “R” range and perform the test as above.

JUDGEMENT OF STALL TEST RESULTS

Stall speed in “D” and “R” range is equal to each other but lower than the nominal value.	<ol style="list-style-type: none"> (1) Engine output is low. (2) Starter one-way clutch is faulty. (Faulty torque converter is suspected if it is lower than nominal by more than 600 r/min)
Stall speed in “D” range is higher than nominal.	<ol style="list-style-type: none"> (1) Overdrive clutch slipping (2) Overdrive one-way clutch faulty (3) Forward clutch slipping (4) One-way clutch No. 2 faulty (5) Low line pressure
Stall speed in “R” range is higher than nominal.	<ol style="list-style-type: none"> (1) Overdrive clutch slipping (2) Overdrive one-way clutch faulty (3) Direct clutch slipping (4) Brake No. 3 slipping (5) Low line pressure

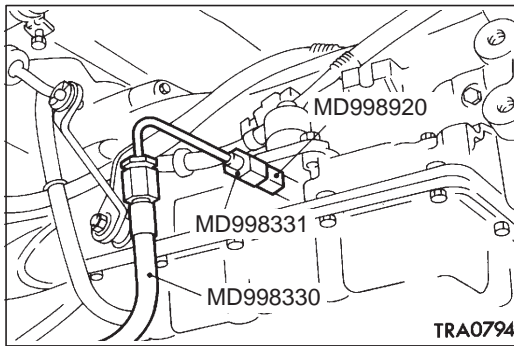

HYDRAULIC PRESSURE TEST

The hydraulic pressure test is important in determining the causes of transmission failures. Before conducting the test, fluid level and condition and throttle cable adjustment, etc. must be checked for defects or abnormalities. When conducting the test, the engine and transmission should be at correct operating temperatures, (engine coolant 80 – 95°C, transmission fluid 70 – 90°C.)

LINE PRESSURE TEST

1. Place the vehicle on a chassis dynamometer.
2. Remove the plug from the line pressure take off port.
3. Install special tools as shown in the figure and place the meter inside vehicle.
4. Apply the parking brake.
5. Start the engine.
6. Place the selector lever in the “D” range.
7. Depress the brake pedal firmly by the left foot and operate the accelerator pedal by the right foot to measure the line pressure at each engine r/min. If the measured pressure is not nominal, check adjustment of the throttle cable and readjust if necessary before conducting the test again.
8. Place the selector lever in the “R” range and test as above.


Standard value:

Items	Line pressure kPa	
	“D” range	“R” range
At idle	373 – 422	520 – 579
At stall	765 – 863	1,383 – 1,628

JUDGEMENT BY LINE PRESSURE


Hydraulic pressure higher than nominal in all ranges	(1) Regulator valve faulty (2) Throttle valve faulty (3) Throttle cable incorrectly adjusted
Hydraulic pressure lower than nominal in all ranges	(1) Oil pump faulty (2) Regulator valve faulty (3) Throttle valve faulty (4) Throttle cable incorrectly adjusted (5) Overdrive clutch faulty
Hydraulic pressure lower than nominal in “D” range	(1) Large fluid leaks in “D” range hydraulic circuit (2) Forward clutch faulty (3) Overdrive clutch faulty
Hydraulic pressure lower than nominal in “R” range	(1) Large fluid leaks in “R” range hydraulic circuit (2) Brake No. 3 faulty (3) Direct clutch faulty (4) Overdrive clutch faulty

HYDRAULIC CIRCUIT

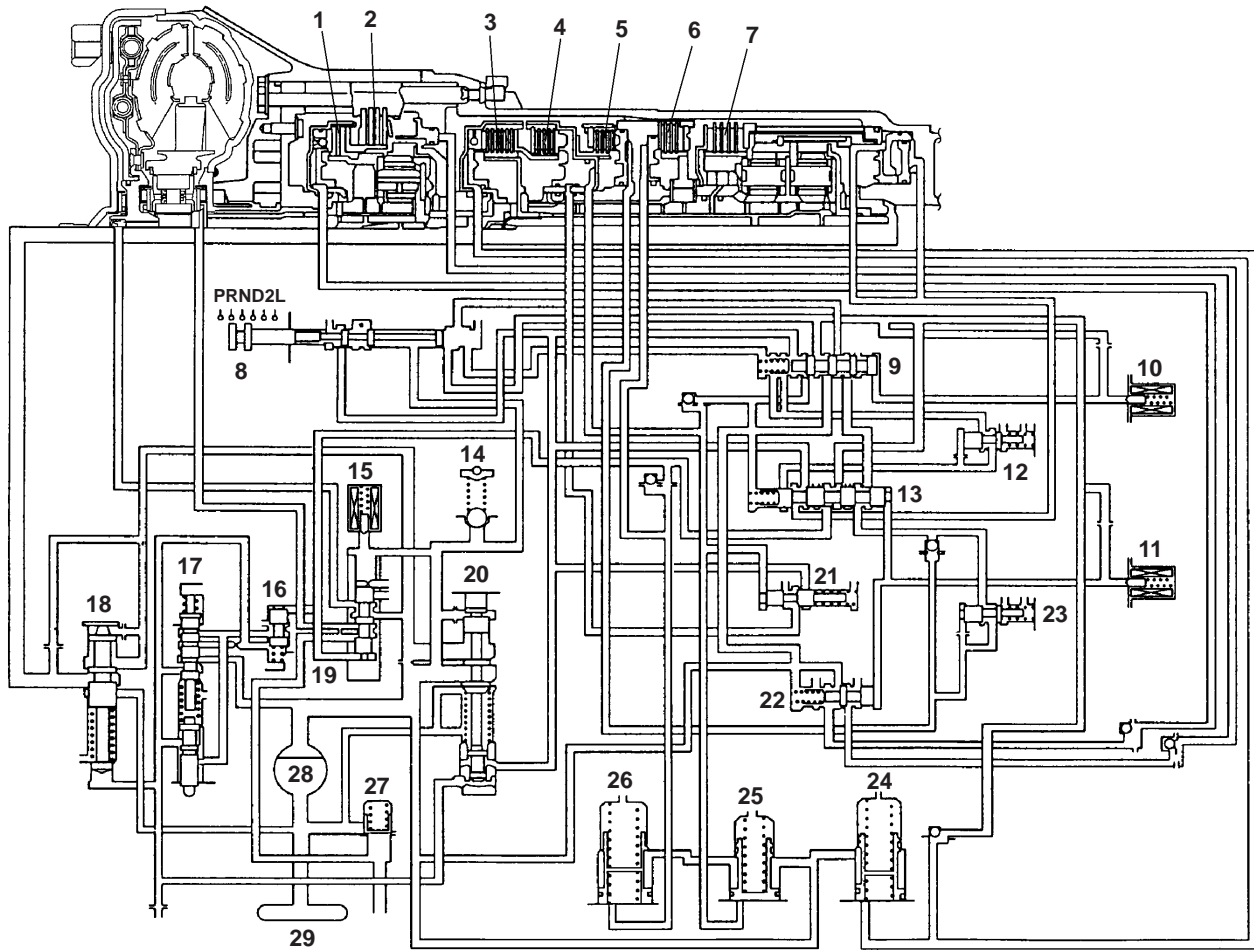

AW0179AG

- | | |
|-------------------------------|-----------------------------------|
| 1. Overdrive clutch | 16. Cut-back valve |
| 2. Overdrive brake | 17. Throttle valve |
| 3. Forward clutch | 18. Secondary regulator valve |
| 4. Direct clutch | 19. Lockup control valve |
| 5. Brake No. 1 | 20. Primary regulator valve |
| 6. Brake No. 2 | 21. Reverse clutch sequence valve |
| 7. Brake No. 3 | 22. 3-4 shift valve |
| 8. Manual valve | 23. Intermediate modulator valve |
| 9. 2-3 shift valve | 24. Accumulator C1 |
| 10. Solenoid valve No. 1 | 25. Accumulator C2 |
| 11. Solenoid valve No. 2 | 26. Accumulator B2 |
| 12. Low coast modulator valve | 27. Oil cooler bypass valve |
| 13. 1-2 shift valve | 28. Oil pump |
| 14. Pressure relief valve | 29. Oil strainer |
| 15. Solenoid valve No. 3 | |

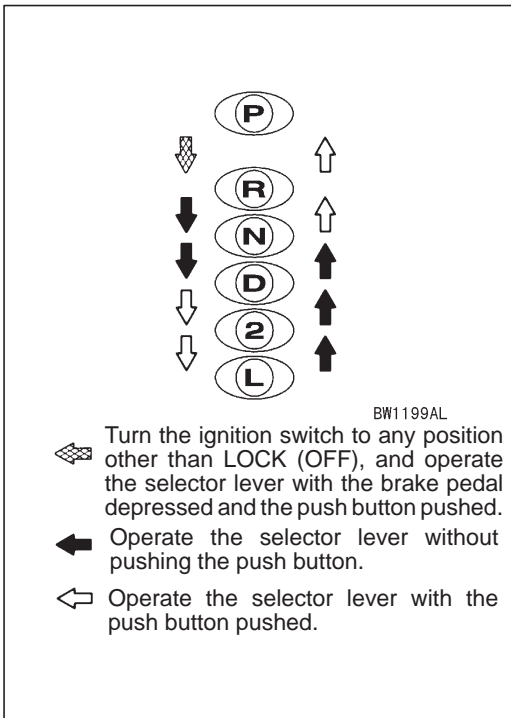

SELECTOR LEVER OPERATION CHECK

1. Apply the parking brake lever.
2. Move the selector lever from N position to each of D, 2 and L positions to check that the selector lever moves smoothly.
3. Check that the engine starts when the selector lever is in each of N and P positions, and that the engine does not start when the selector lever is in positions other than N and P.
4. Start the engine and release the parking brake. Check that the vehicle moves forward when the selector lever is moved from N position to each of D, 2 and L positions, and moves backward when the selector lever is moved to R position.
5. Stop the engine.
6. Turn the ignition switch to ON position. Check that the backup lamp illuminates and the buzzer sounds when the selector lever is moved from P position to R position.


NOTE

Because of the inclusion of an A/T mis-operation prevention device, the select or lever cannot be moved from the P position to an other position unless you turn the ignition key to a position other than LOCK (OFF) and depress the brake pedal first.

KEY INTERLOCK MECHANISM CHECK

1. Carry out the following inspection:

Inspection procedure	Requirements		Normal condition
1	Brake pedal: Depressed	Ignition key: LOCK (OFF) or removed	The selector lever push button can not be pushed, and the selector lever should not be moved from P position.
2		Ignition key: Other than above	If the selector lever push button is pushed, the selector lever can be moved from P position.
3	Brake pedal: Not depressed	Selector lever: Other than P	The ignition key can not be turned to LOCK (OFF) position.
4		Selector lever: P	The ignition key can be turned to LOCK (OFF) position.

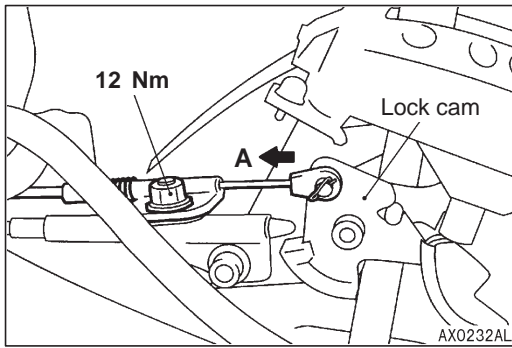

2. If there is a problem on the inspection above, adjust the key interlock cable as follows:
 - (1) Remove the rear floor console. (Refer to GROUP 52A.)
 - (2) Move the selector lever to P position.
 - (3) Turn the ignition key to LOCK (OFF) position.
 - (4) Loosen the key interlock cable fixing nut.
 - (5) Tighten the key interlock cable fixing nut to the specified torque with the lock cam pushed in the direction A (shown in the illustration).


Tightening torque: 12 Nm

- (6) Install the rear floor console. (Refer to GROUP 52A.)

SHIFT LOCK MECHANISM CHECK

1. Carry out the following inspection:


Inspection procedure	Requirements		Normal condition
1	Brake pedal: Depressed	Ignition key: ACC	If the selector lever push button is not pushed, the selector lever can not be moved from P position.
2			If the selector lever push button is pushed, the selector lever can be moved from P position.
3	Brake pedal: Not depressed		If the selector lever push button is pushed, the selector lever can be moved from R position to P position.

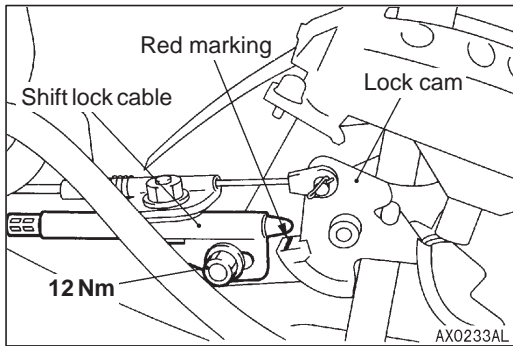

2. If there is a problem on the inspection above, adjust the shift lock cable as follows:
 - (1) Remove the rear floor console. (Refer to GROUP 52A.)
 - (2) Move the selector lever to P position.
 - (3) Loosen the shift lock cable fixing nut.
 - (4) Move the shift lock cable to position the shift lock cable end above the red marking painted on the lock cam, and then tighten the shift lock cable fixing nut to the specified torque.


Tightening torque: 12 Nm

- (5) Install the rear floor console. (Refer to GROUP 52A.)

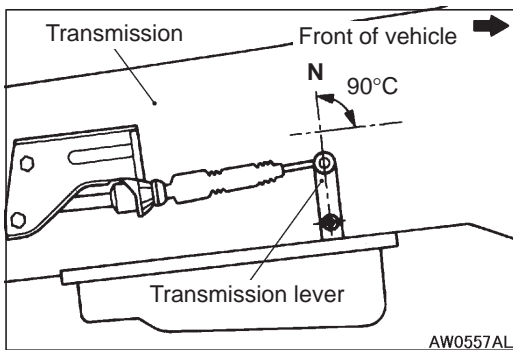

TRANSMISSION CONTROL CABLE ADJUSTMENT

1. Move the selector lever to N position, and set the transmission lever to N position.

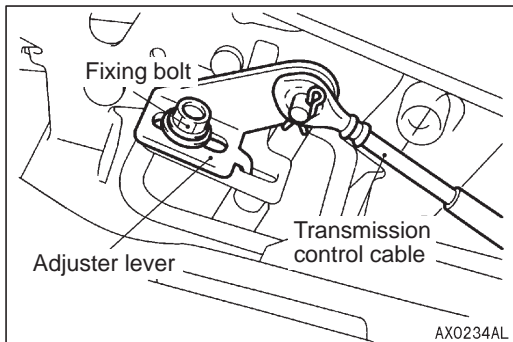





2. Loosen the fixing bolt. Adjust the adjuster lever position so that the transmission control cable will be tight, and then tighten the fixing bolt.

TRANSMISSION CONTROL

REMOVAL AND INSTALLATION

Caution

Do not strike the SRS-ECU when removing and installing the transmission control cable, key interlock cable, shift lever assembly and the A/T-ECU.

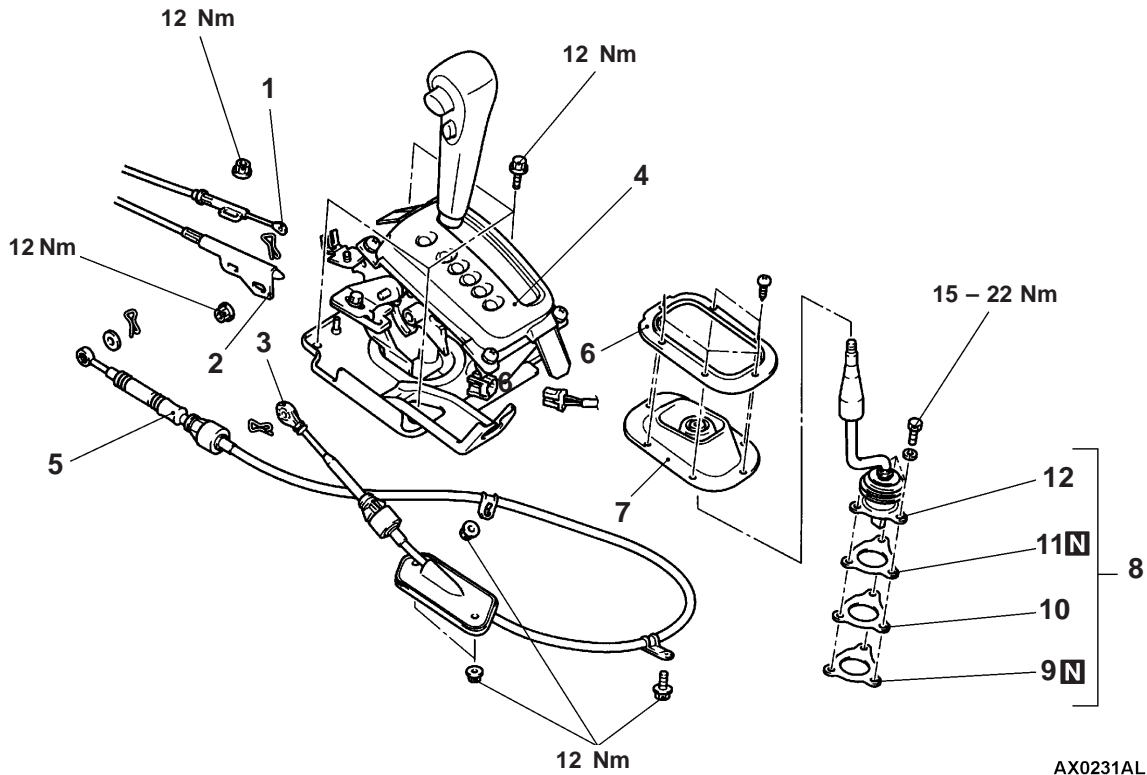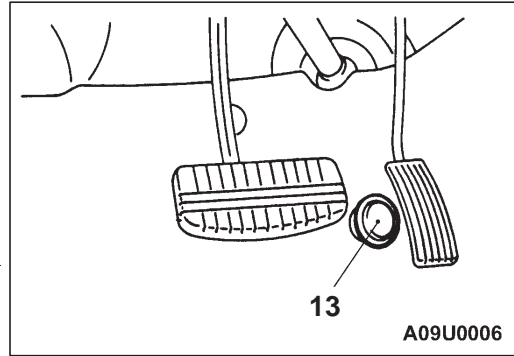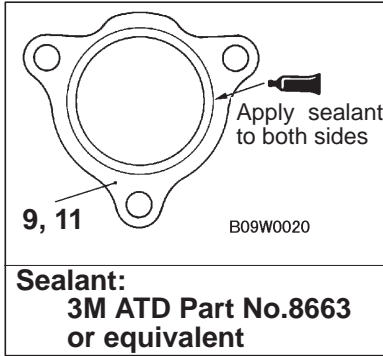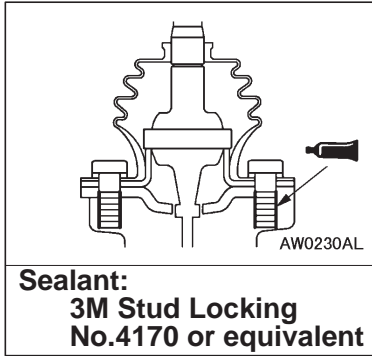

Selector lever assembly and transmission control cable assembly removal steps

- Rear floor console assembly (Refer to GROUP 52A.)
- 1. Key interlock cable connection
- 2. Shift lock cable connection
- 3. Transmission control cable connection (selector lever side)
- 4. Selector lever assembly
- 5. Transmission control cable connection (transmission side)




Transfer control lever assembly removal steps

- Front floor console assembly (Refer to GROUP 52A.)
- 6. Retainer plate
- 7. Transfer lever inner boot
- 8. Transfer control lever assembly
- 9. Gasket
- 10. Stopper plate
- 11. Gasket
- 12. Transfer control lever

Wide open throttle switch removal


- 13. Wide open throttle switch

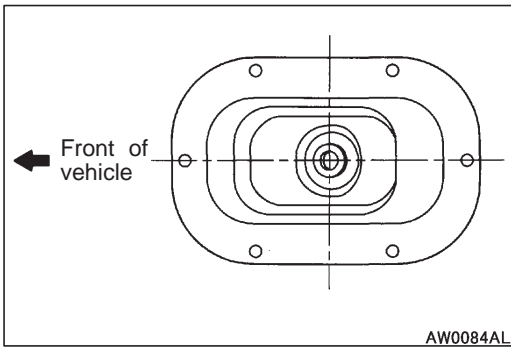

INSTALLATION SERVICE POINT

▶A◀ TRANSFER LEVER INNER BOOT INSTALLATION

Install the transfer lever inner boot as shown in the illustration.

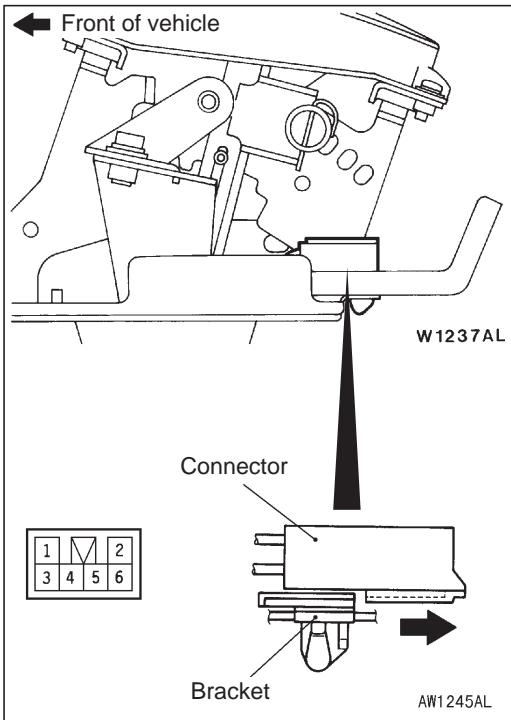

INSPECTION


Slide the connector in the direction of arrow shown in the illustration to remove it from the bracket.

POSITION INDICATOR LAMP CHECK

Check requirement	Terminal No.	
	1	2
Always	<input type="checkbox"/>	<input type="checkbox"/>

OVERDRIVE SWITCH CHECK


Switch position	Terminal No.		
	3	4	5
ON	<input type="checkbox"/>	<input type="checkbox"/>	
OFF	<input type="checkbox"/>		<input type="checkbox"/>

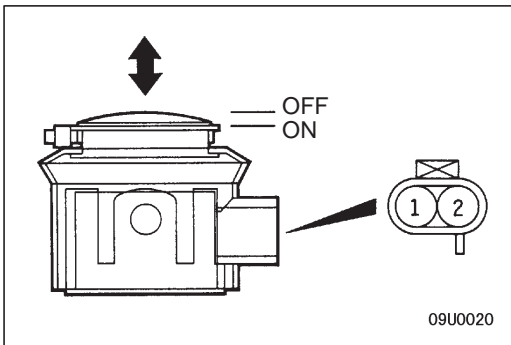

WIDE OPEN THROTTLE SWITCH CHECK

Switch position	Terminal No.	
	1	2
OFF		
ON	<input type="checkbox"/>	<input type="checkbox"/>

SELECTOR LEVER ASSEMBLY DISASSEMBLY AND REASSEMBLY

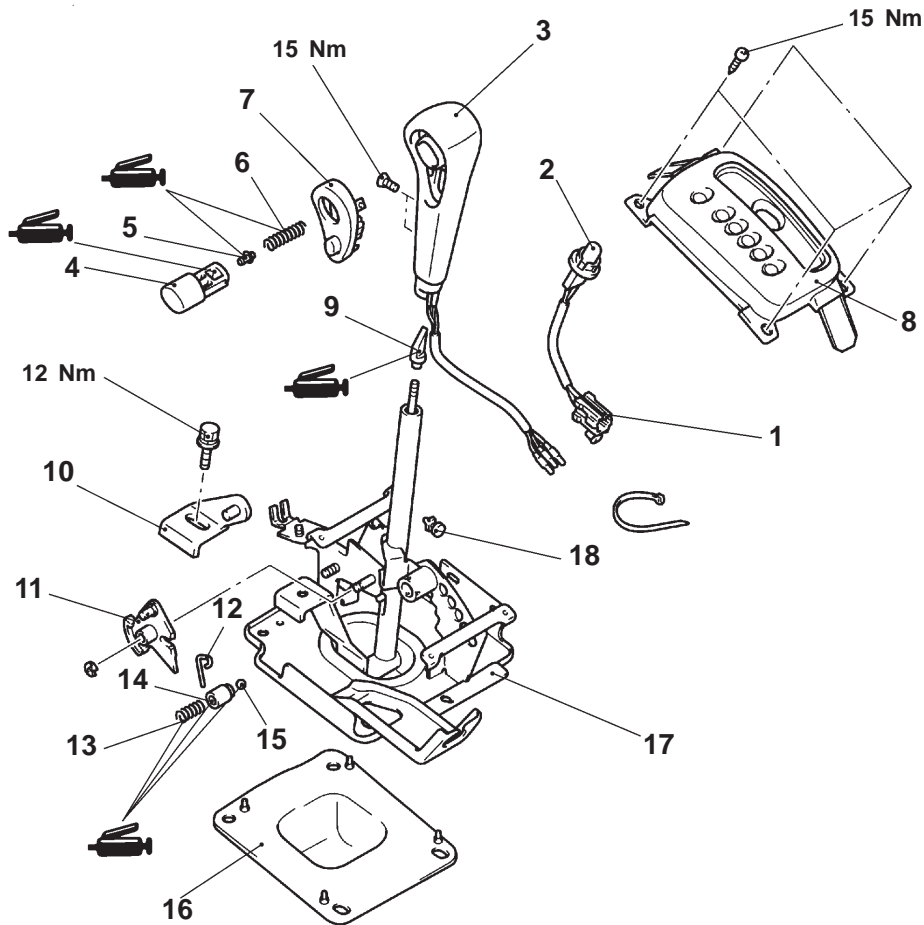

AX0235AL


Disassembly steps



1. Position indicator socket assembly
2. Bulb
3. Shift knob
4. Push button
5. Stopper
6. Spring
7. Overdrive switch
8. Indicator panel assembly
9. Sleeve




10. Adjuster lever
11. Lock cam
12. Pin
13. Ball spring
14. Ball support
15. Ball
16. Packing
17. Selector lever assembly
18. Stopper

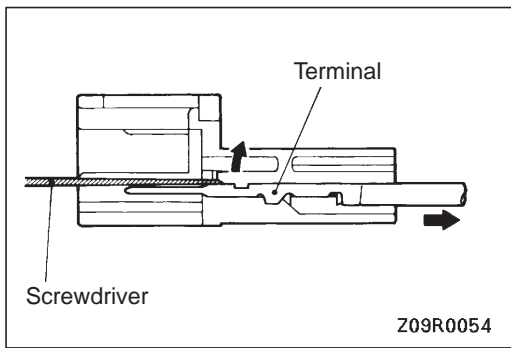

DISASSEMBLY SERVICE POINT

◀A▶ POSITION INDICATOR SOCKET ASSEMBLY REMOVAL

Use a flat-tipped screwdriver, etc. to remove the terminal of shift knob side from the position indicator socket assembly connector.

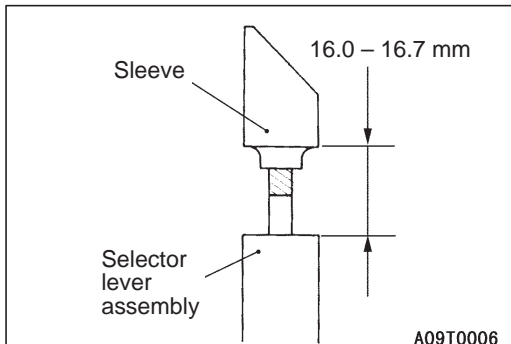


REASSEMBLY SERVICE POINT

▶A◀ SLEEVE INSTALLATION

Shift the selector lever to the N position, and then turn the sleeve so that the clearance between the sleeve and lever assembly end is within the dimension shown in the illustration.

A/T KEY INTERLOCK AND SHIFT LOCK MECHANISMS

REMOVAL AND INSTALLATION

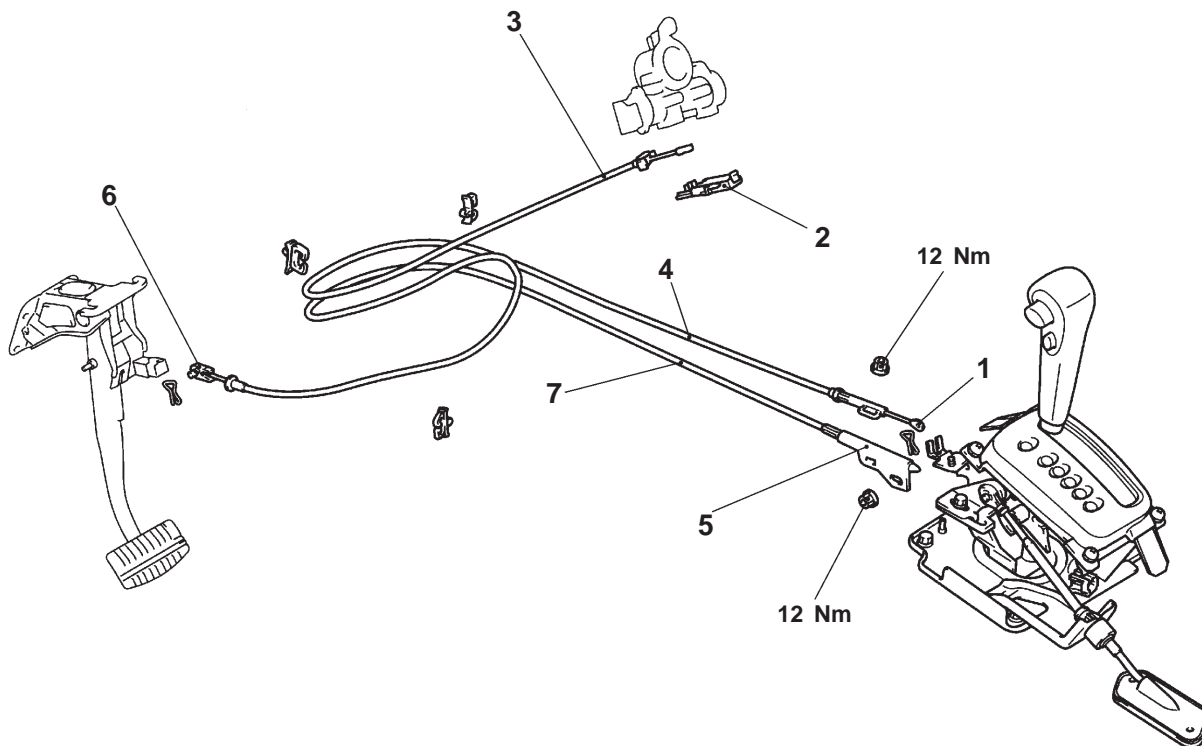


AX0230AL

Key interlock cable removal steps

- Front floor console (Refer to GROUP 52A.)
 - Instrument under cover (Refer to GROUP 52A.)
 - Lower column cover (Refer to GROUP 37A – Steering Wheel and Shaft.)
- ▶C◀ 1. Key interlock cable connection (selector lever side)
2. Cover
- ▶B◀ 3. Key interlock cable connection (steering lock cylinder side)
4. Key interlock cable

Shift lock cable removal steps

- Front floor console (Refer to GROUP 52A.)
- ▶A◀ 5. Shift lock cable connection (selector lever side)
6. Shift lock cable connection (brake pedal side)
7. Shift lock cable

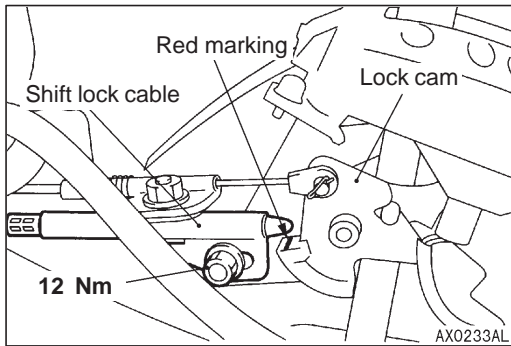

INSTALLATION SERVICE POINTS

▶A◀ SHIFT LOCK CABLE (SELECTOR LEVER SIDE) INSTALLATION


1. Move the selector lever to P position.
2. Move the shift lock cable to position the shift lock cable end above the red marking painted on the lock cam, and then tighten the shift lock cable fixing nut to the specified torque.

Tightening torque: 12 Nm

3. Check that the shift lock mechanism operates normally. (Refer to P. 23-49.)

▶B◀ KEY INTERLOCK CABLE (STEERING LOCK CYLINDER SIDE) INSTALLATION

Turn the ignition key to LOCK (OFF) position, and then install the key interlock cable.

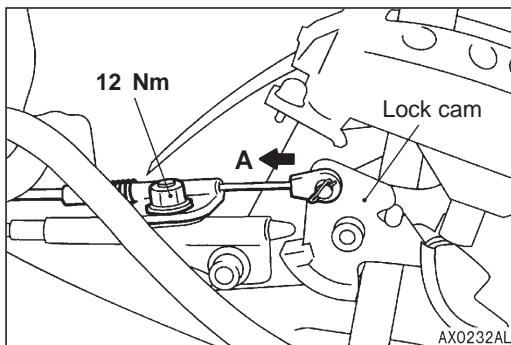

▶C◀ KEY INTERLOCK CABLE (SELECTOR LEVER SIDE) INSTALLATION

1. Move the selector lever to P position.
2. Turn the ignition key to LOCK (OFF) position.
3. Connect the key interlock cable end to the lock cam.
4. Install the key interlock cable temporarily.
5. Tighten the key interlock cable fixing nut to the specified torque with the lock cam pushed in the direction A (shown in the illustration).

Tightening torque: 12 Nm

6. Check that the key interlock mechanism operates normally. (Refer to P. 23-48.)

TRANSMISSION ASSEMBLY


REMOVAL AND INSTALLATION

Caution

Mounting locations marked by * should be provisionally tightened, and then fully tightened after placing the vehicle horizontally and loading the full weight of the transmission on the vehicle body.

Pre-removal and Post-installation Operation

- Transfer Control Lever Assembly Removal and Installation (Refer to P.23-50.)
- Under Cover Removal and Installation
- Transmission Fluid and Transfer Oil Draining and Filling (Refer to P.23-35, 39.)
- Front and Rear Propeller Shaft Removal and Installation (Refer to GROUP 25.)
- Air Cleaner Removal and Installation (Refer to GROUP 15 – Air Cleaner and Resonance Tank.)
- Front Exhaust Pipe and Catalytic Converter Removal and Installation (Refer to GROUP 15.)
- Vacuum Actuator Assembly Removal and Installation (Refer to GROUP 26 – Main Shaft.)
- Kick-down Cable Adjustment <Only after installation> (Refer to P.23-37.)
- Accelerator Cable Assembly Check and Adjustment <Only after installation> (Refer to GROUP 17 – On-vehicle Service.)

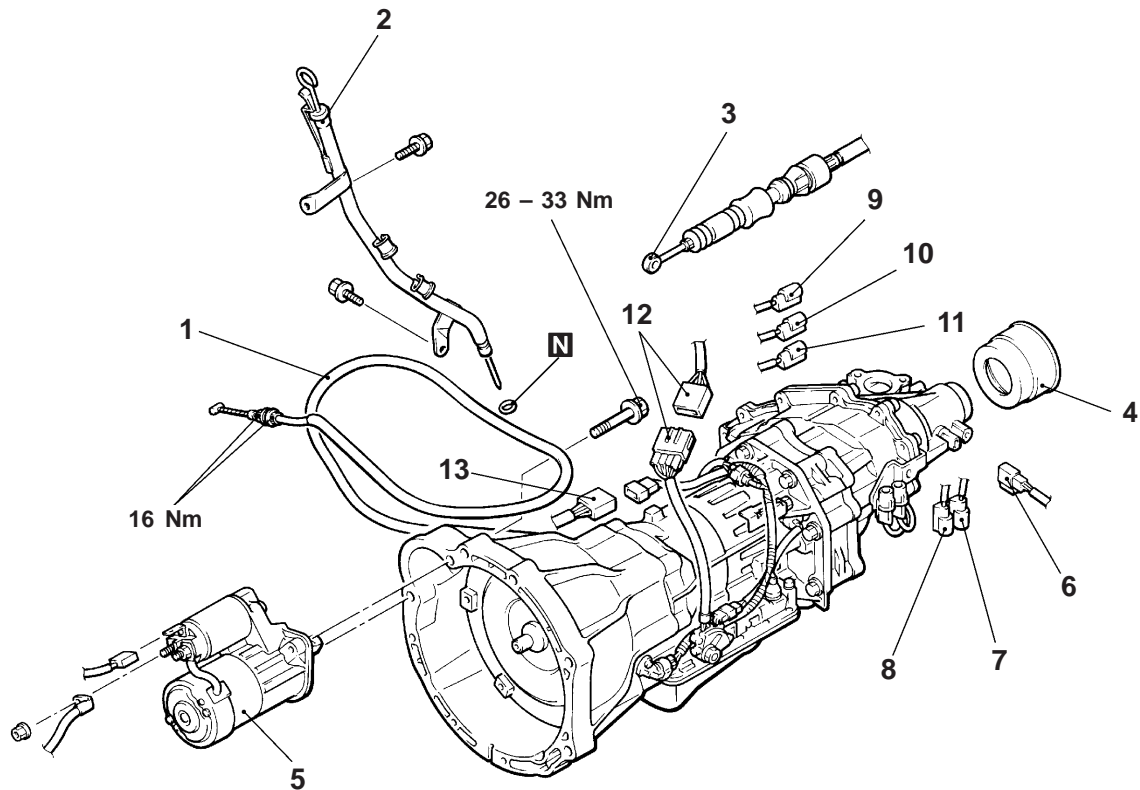


AW1238AL

Removal steps

1. Kick-down cable connection
2. Oil level gauge assembly
3. Transmission control cable connection
4. Dust shield guard
5. Starter motor
6. Vehicle speed sensor connector
7. VCU lock detection switch connector
8. 2WD/4WD detection switch connector
9. VCU lock operation detection switch connector
10. High/Low detection switch connector
11. 4WD operation detection switch connector
12. Harness connector
13. Inhibitor switch connector



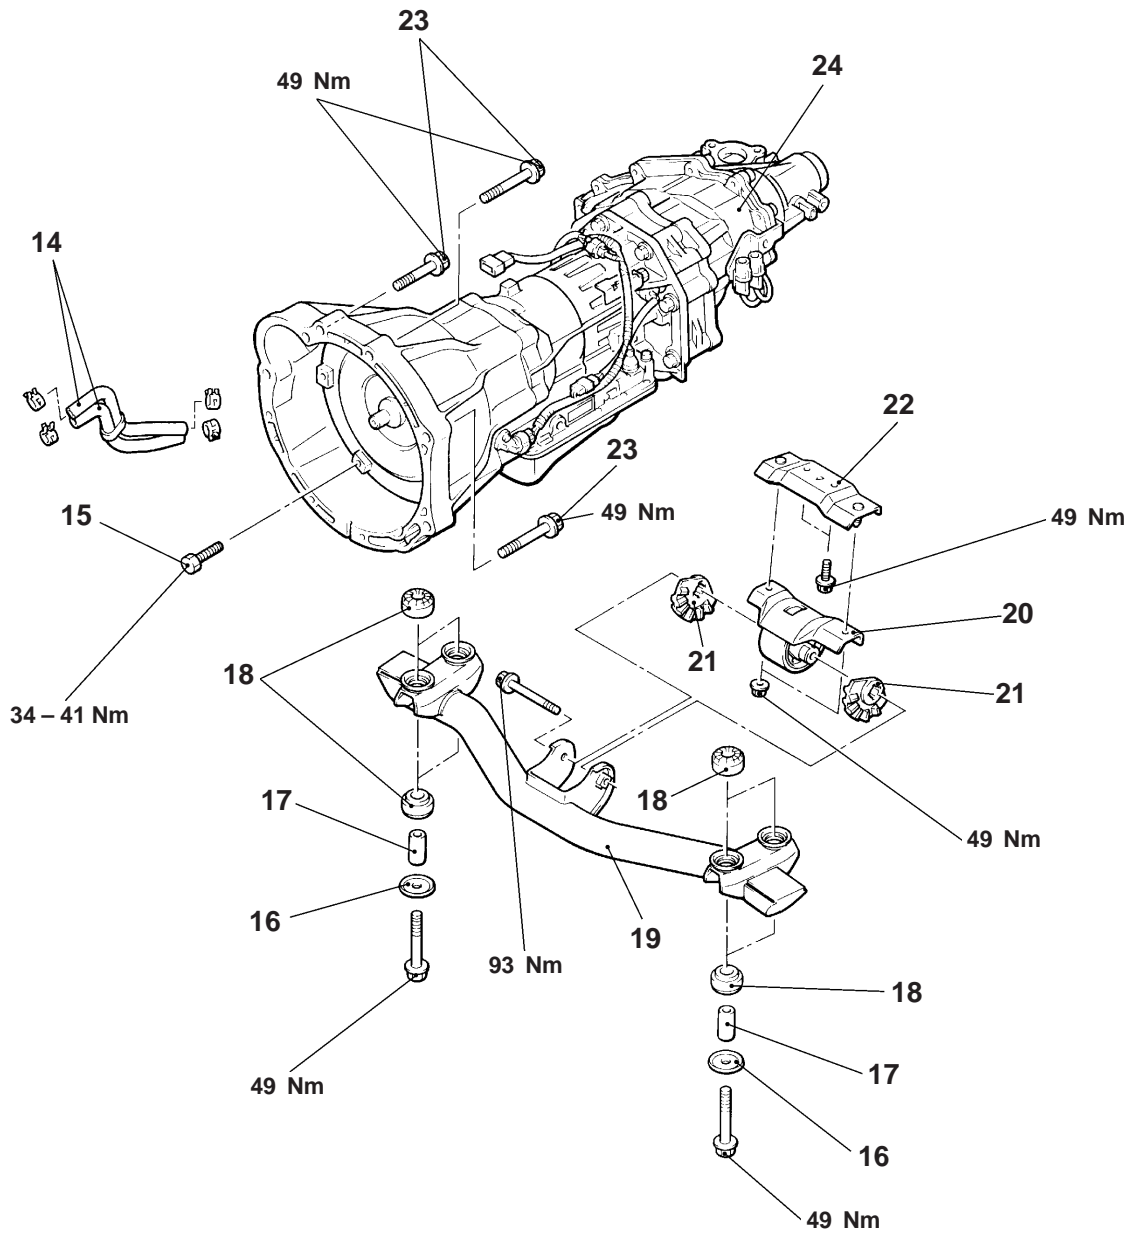

BW0699AL

14. Oil cooler hose
- Oil pan removal (Refer to GROUP 11A.)
15. Drive plate connection bolt
- Support the transmission with a transmission jack
16. Washer
17. Spacer

18. Transmission mount bushing
19. Transmission mount crossmember
20. Transmission mount insulator assembly
- ▶B◀ 21. Transmission mount stopper
22. Adapter
- ▶A◀ 23. Transmission upper part coupling bolts
24. Transmission assembly




REMOVAL SERVICE POINTS

◀A▶ STARTER MOTOR REMOVAL

Remove the starter motor with the starter motor harnesses still connected, and secure it inside the engine compartment.

◀B▶ DRIVE PLATE CONNECTION BOLTS REMOVAL


1. Remove the connection bolts (6 places) while turning the crankshaft.
2. Press in the torque converter to the transmission side so the torque converter does not remain on the engine side.

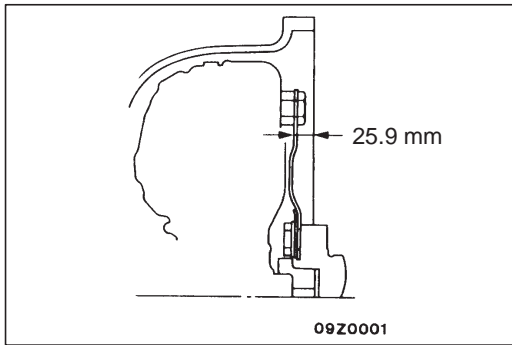

INSTALLATION SERVICE POINTS

▶A▶ TRANSMISSION ASSEMBLY INSTALLATION

Press in the torque converter to the transmission side completely, and then install the transmission assembly to the engine.

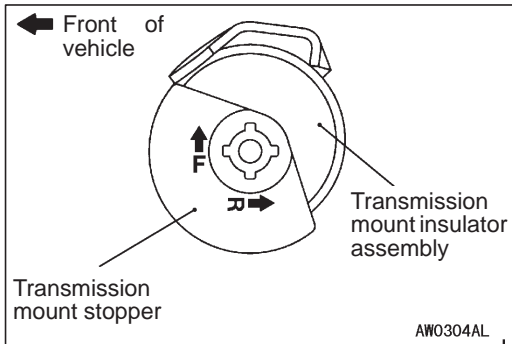


▶B▶ TRANSMISSION MOUNT STOPPER INSTALLATION

1. Install the transmission mount stopper so that the arrow faces the direction shown.

NOTE

Disregard F and R stamped as a shared part.

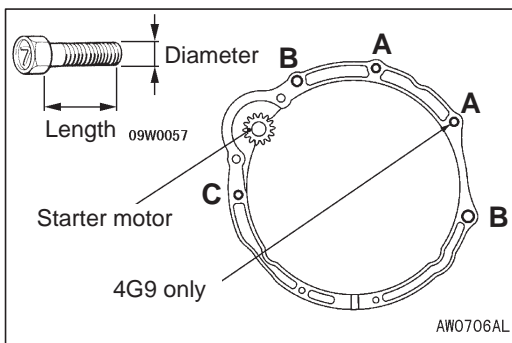

2. The sizes of the mounting bolts are different. So be sure not to confuse them.


Bolt	Diameter x Length mm
A	10 x 50
B	10 x 60
C	10 x 40

TRANSMISSION OIL COOLER

REMOVAL AND INSTALLATION

Pre-removal and Post-installation Operation

- Transmission Fluid Draining and Supplying (Refer to P.23-35.)
- Under Cover Removal and Installation

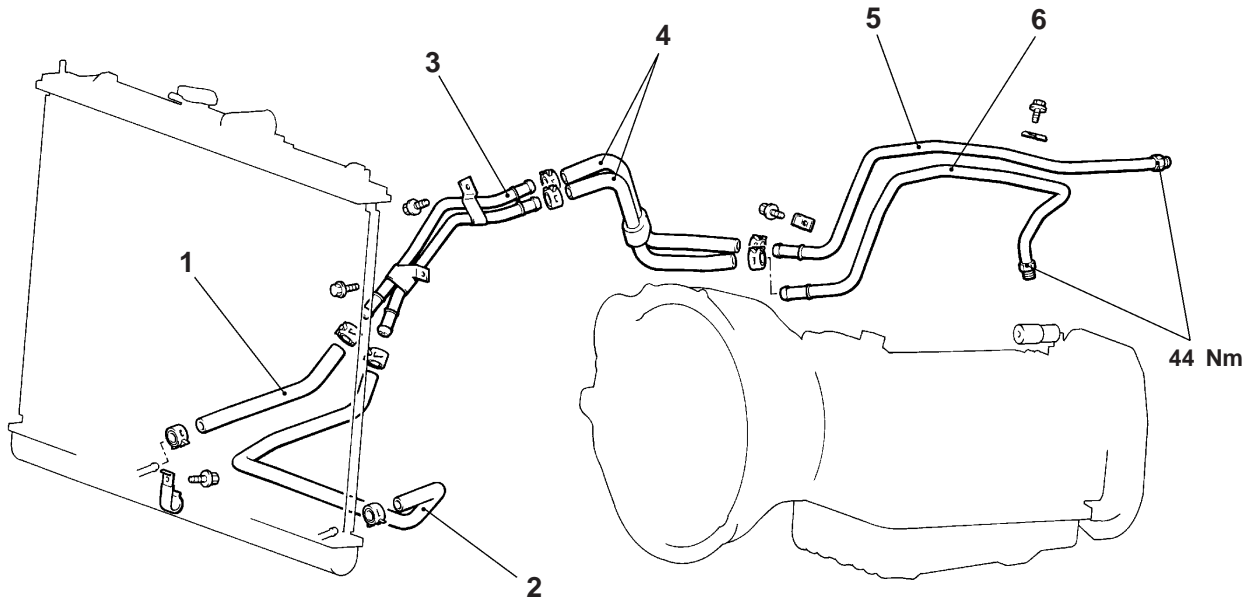

AW0086AL

Removal steps

1. Return hose
2. Feed hose
3. Oil cooler pipe assembly
4. Hose assembly

- Transmission assembly (Refer to P.23-56.)
- 5. Oil return pipe
- 6. Oil feed pipe


A/T-ECU

REMOVAL AND INSTALLATION

Caution

Do not strike the G sensor when removing and installing the A/T-ECU.

Pre-removal and Post-installation Operation
Rear Floor Console Removal and Installation

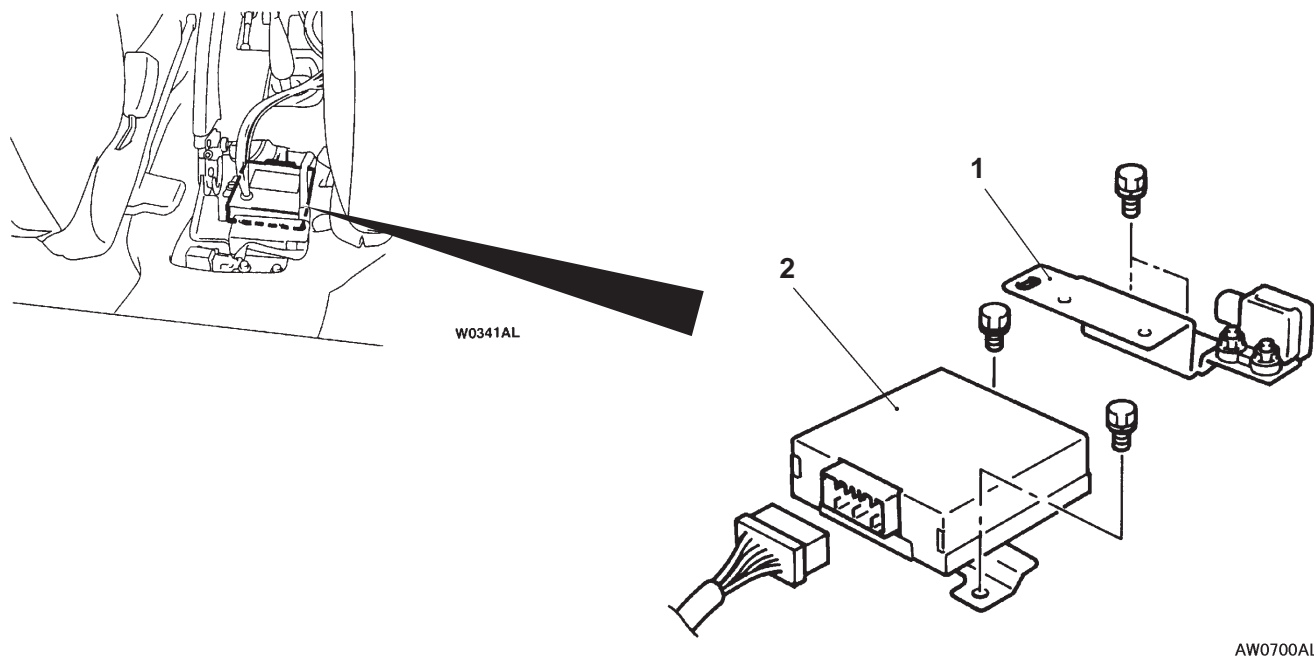

Removal steps

1. Floor console bracket
2. A/T-ECU

4WD INDICATOR CONTROL UNIT


REMOVAL AND INSTALLATION

Refer to GROUP 22.

AUTOMATIC TRANSMISSION

CONTENTS

GENERAL	2	TROUBLESHOOTING <A/T>	2
Outline of Changes	2		



GENERAL

OUTLINE OF CHANGES


The following service procedures for items which are different from before have been established to correspond to the following changes:

- The A/T-ECU has been changed.
- The shift pattern has been changed.

TROUBLESHOOTING <A/T>

SHIFT PATTERN

D range (Overdrive switch: ON)

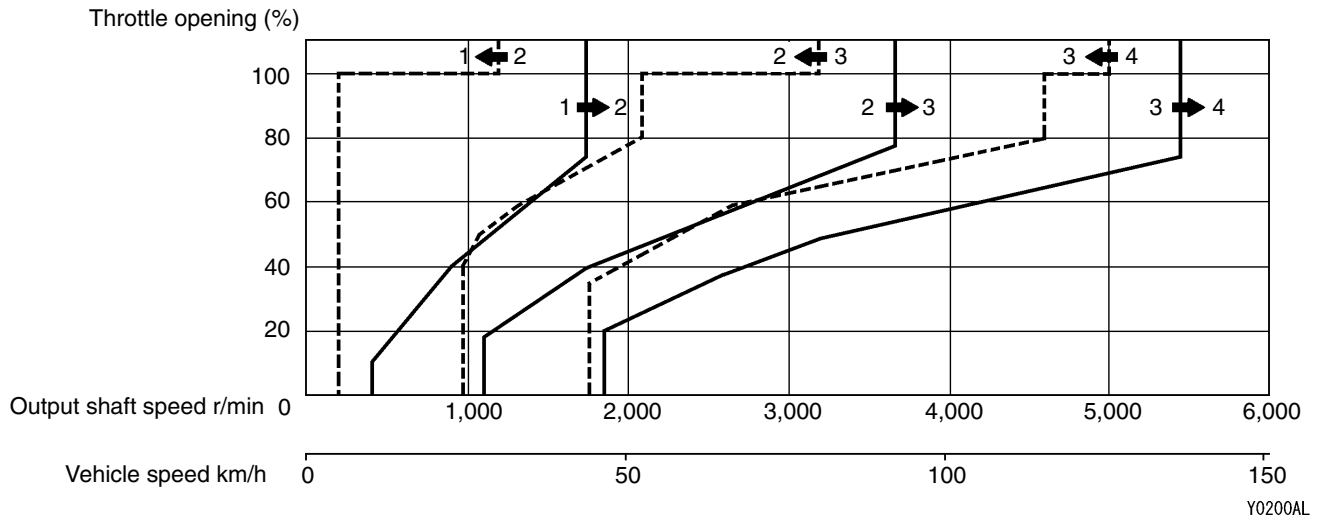

INSPECTION CHART FOR DIAGNOSIS CODE


Code	Diagnosis item	Reference page
13	Accelerator pedal position sensor system (Throttle opening voltage)	Sensor malfunction/ open circuit/short circuit 23-3
14	Accelerator pedal position sensor system (Throttle power supply voltage)	Open circuit/short circuit 23-3
15	A/T fluid temperature sensor system	Open circuit 23-4
16	A/T fluid temperature sensor system	Short circuit 23-4
22	Wide open throttle system	Open circuit/short circuit 23-4
29	Inhibitor switch system	Open circuit 23-5
30	Inhibitor switch system	Short circuit 23-5
31	Input shaft speed sensor system	Open circuit 23-6
32	Output shaft speed sensor system	Open circuit 23-6
38	Vehicle speed sensor system	Open circuit 23-7
41	Solenoid valve No. 1 system	Open circuit 23-8
42	Solenoid valve No. 1 system	Short circuit 23-8

Code	Diagnosis item	Reference page
43	Solenoid valve No. 2 system Open circuit	23-8
44	Solenoid valve No. 2 system Short circuit	23-8
47	Solenoid valve No. 3 system Open circuit	23-8
48	Solenoid valve No. 3 system Short circuit	23-8
55	Abnormal communication with engine-ECU Open circuit	23-9

INSPECTION PROCEDURES FOR DIAGNOSIS CODES


Code No. 13, 14 Accelerator pedal position sensor (APS)	Probable cause
<p>If the APS output voltage (APS opening voltage) is 4.8 V or higher when the engine is idling, the output voltage is judged to be too high and diagnosis code No. 13 is output. If the APS output voltage (APS opening voltage) is 0.335 V or lower when the engine is idling, the output voltage is judged to be too low and diagnosis code No. 13 is output.</p> <p>If the APS output voltage (APS power supply voltage) is 3.0 V or lower or if it is 5.7 V or higher when the engine is idling, the APS is judged to be faulty and diagnosis code No. 14 is output.</p>	<ul style="list-style-type: none"> • Malfunction of the accelerator pedal position sensor • Malfunction of harness or connector • Malfunction of the A/T-ECU

*: Refer to '00 PAJERO PININ Workshop Manual (Pub. No. CKRE00E1).

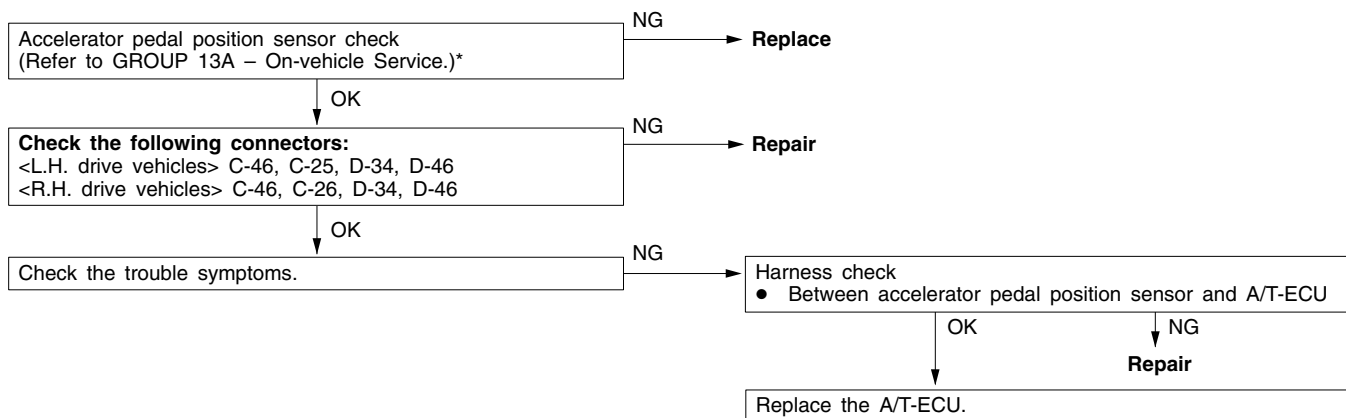


Code No. 15, 16 A/T fluid temperature sensor system	Probable cause
If the A/T fluid temperature sensor output is 10°C or less (5.6 kΩ or more) even after running the engine for 15 minutes or more, it is judged that there is an open circuit in the A/T fluid temperature sensor and diagnosis code No. 15 is output. If the A/T fluid temperature sensor output is 240°C or more (10 kΩ or less), it is judged that there is a short circuit in the A/T fluid temperature sensor and diagnosis code No. 16 is output.	<ul style="list-style-type: none"> ● Malfunction of the A/T fluid temperature sensor ● Malfunction of harness or connector ● Malfunction of the A/T-ECU

*: Refer to '00 PAJERO PININ Workshop Manual (Pub. No. CKRE00E1).

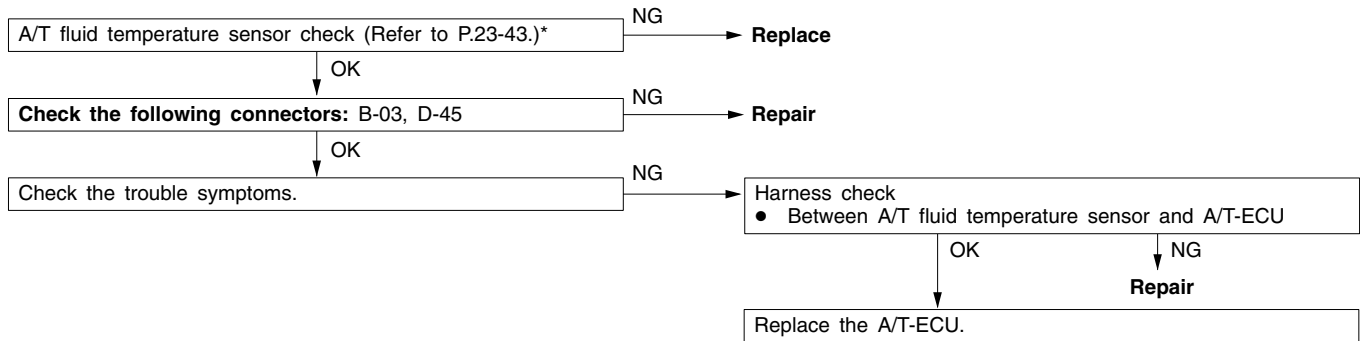


Code No. 22 Wide open throttle switch system	Probable cause
If the wide open throttle switch dose not turn OFF with the accelerator pedal is not depressed, there is a short circuit in the wide open throttle switch and diagnosis code No. 22 is output.	<ul style="list-style-type: none"> ● Malfunction of the wide open throttle switch ● Malfunction of harness or connector ● Malfunction of the A/T-ECU

*: Refer to '00 PAJERO PININ Workshop Manual (Pub. No. CKRE00E1).

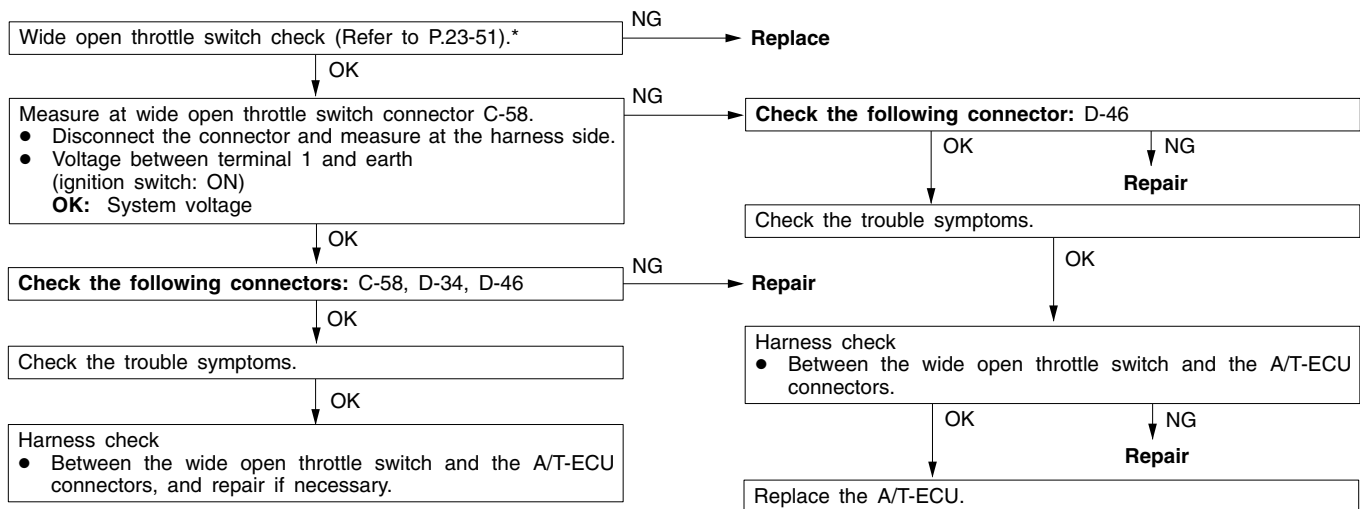

Code No. 29, 30 Inhibitor switch system	Probable cause
If the inhibitor switch has not sent any signal for 2 seconds while the ignition switch is on, it is judged that there is an open circuit in the inhibitor switch and diagnosis code No.29 is set. If the inhibitor switch has sent at least two signals simultaneously for 2 seconds while the ignition switch is on, it is judged that there is an short circuit in the inhibitor switch and diagnosis code No.30 is set.	<ul style="list-style-type: none"> ● Malfunction of the inhibitor switch ● Malfunction of harness or ● Malfunction of the A/T-ECU


*: Refer to '00 PAJERO PININ Workshop Manual (Pub. No. CKRE00E1).

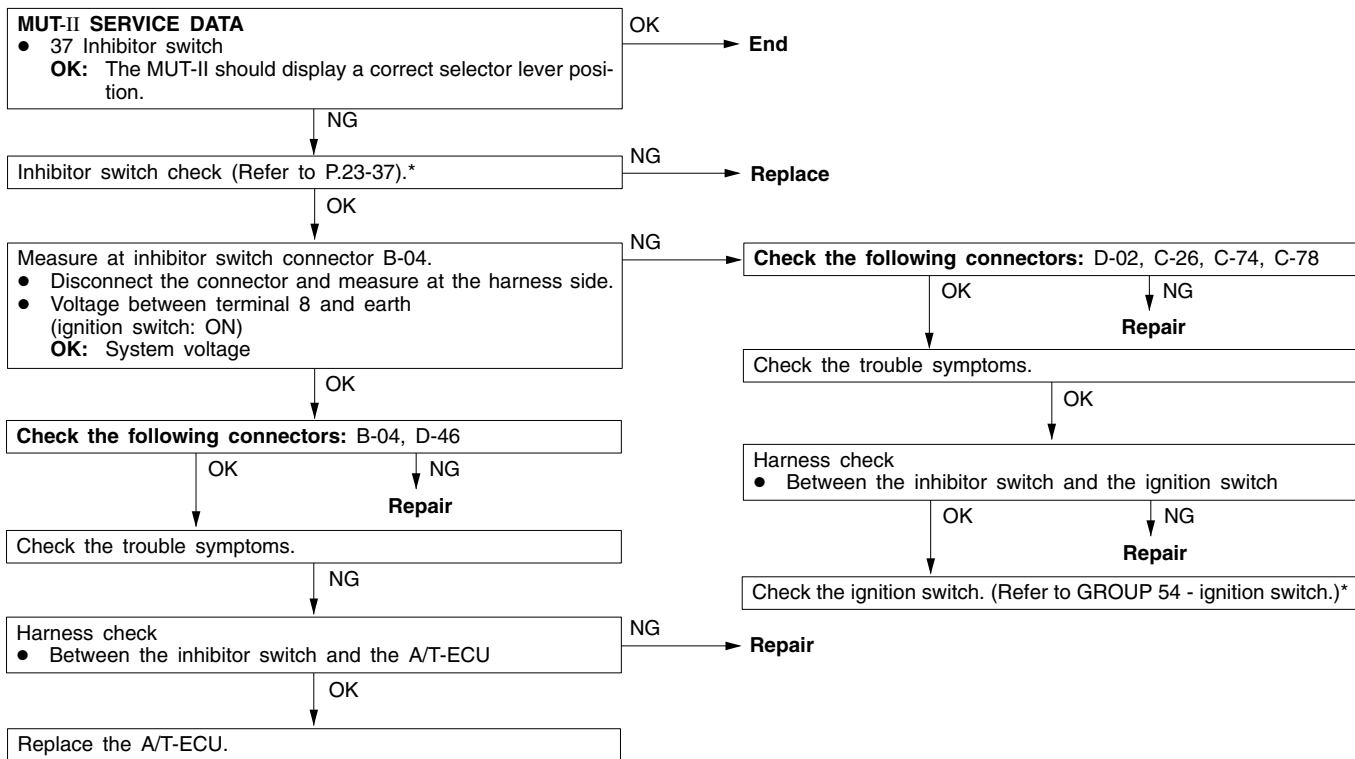

Code No. 31, 32 Input shaft speed sensor system, output shaft speed sensor system	Probable cause
If no output pulse is detected from the input shaft speed sensor for 120 seconds or more while driving in 3rd gear at a speed of 60 km/h or more, there is judged to be an open circuit in the input shaft speed sensor and diagnosis code No. 31 is output. If not output pulse is detected from the output shaft speed sensor for 120 seconds or more while driving in 3rd gear at a speed of 60 km/h or more, there is judged to be an open circuit in the output shaft speed sensor and diagnosis code No. 32 is output.	<ul style="list-style-type: none"> ● Malfunction of the input shaft speed sensor ● Malfunction of the output shaft speed sensor ● Malfunction of harness or connector ● Malfunction of the sensor rotor ● Malfunction of A/T-ECU ● Electrical noise


*: Refer to '00 PAJERO PININ Workshop Manual (Pub. No. CKRE00E1).

★: Refer to the Transmission Workshop Manual

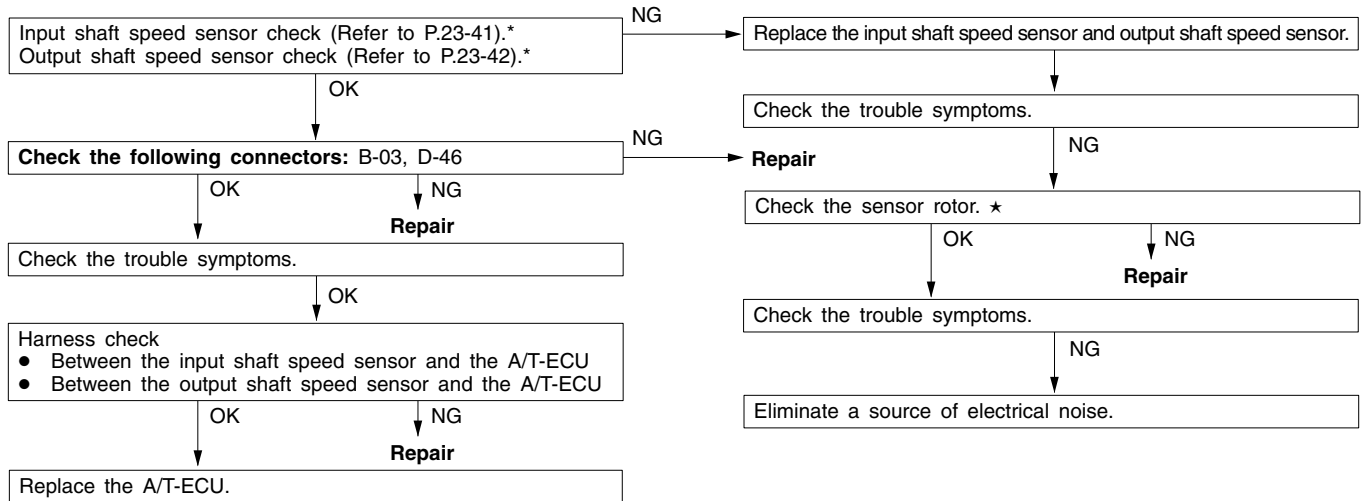


Code No. 38 Vehicle speed sensor system	Probable cause
If no output pulse is detected from the vehicle speed sensor for 120 seconds or more continuously while driving at a speed of 60 km/h or more, there is judged to be an open circuit in the vehicle speed sensor and diagnosis code No. 38 is output.	<ul style="list-style-type: none"> ● Malfunction of the vehicle speed sensor ● Malfunction of harness or connector ● Malfunction of the A/T-ECU ● Malfunction of the ignition switch

*: Refer to '00 PAJERO PININ Workshop Manual (Pub. No. CKRE00E1).

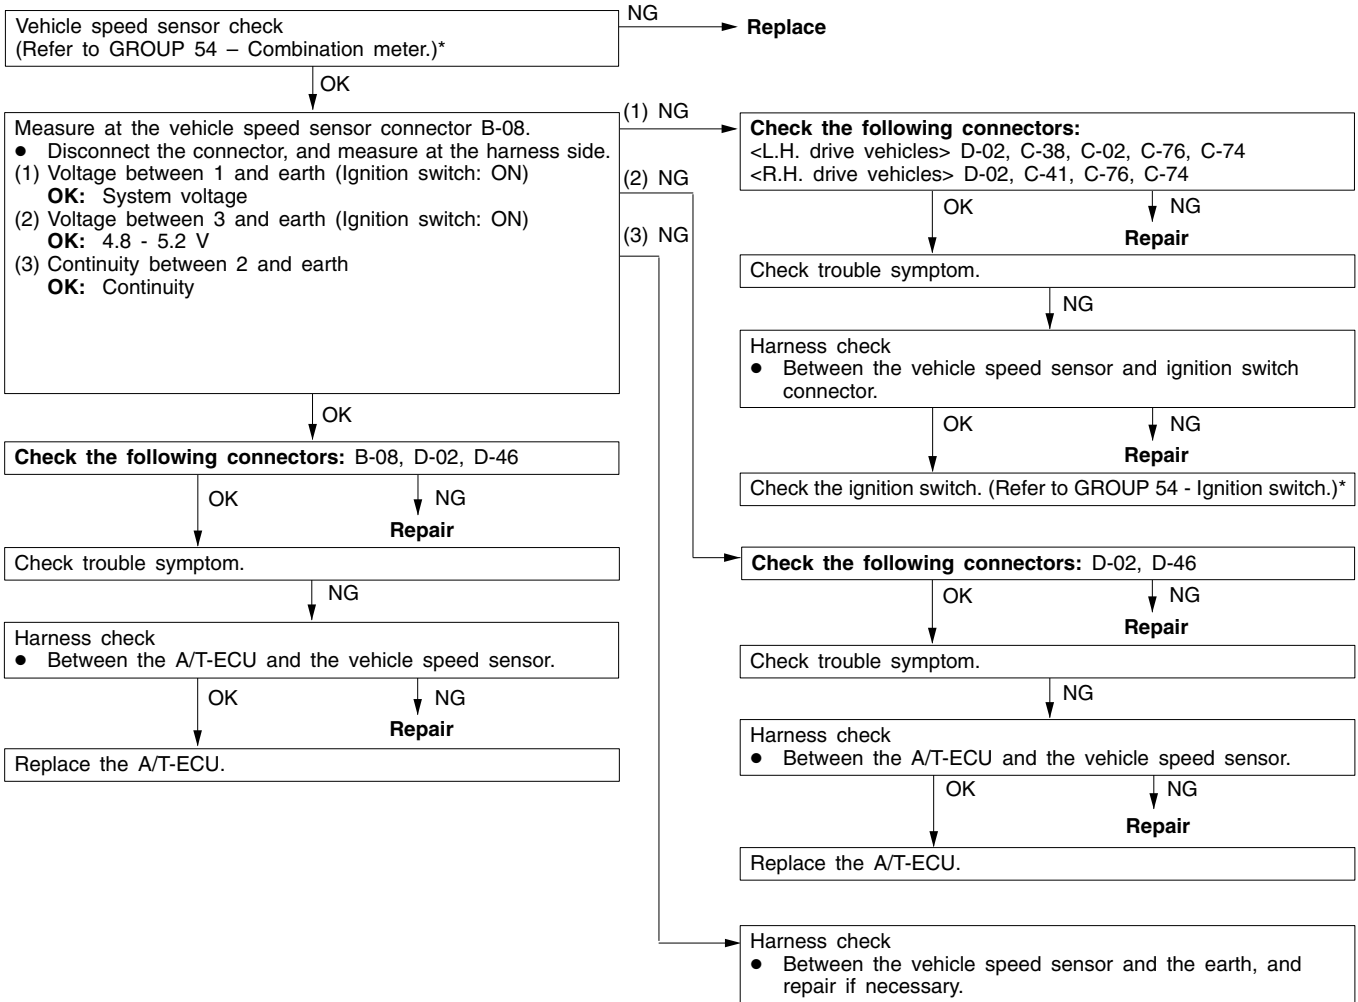


Code No. 41, 42 Solenoid valve No.1 system	Probable cause
<p>If the resistance value for a solenoid valve No.1 is too large, it is judged that there is an open circuit in the solenoid valve No.1 and the diagnosis code No.41 is output. If the resistance value for a solenoid valve No.1 is too small, it is judged that there is a short-circuit in the solenoid valve No.1 and the diagnosis code No.42 is output.</p>	<ul style="list-style-type: none"> ● Malfunction of solenoid valve No.1 ● Malfunction of harness or connector ● Malfunction of the A/T-ECU

*: Refer to '00 PAJERO PININ Workshop Manual (Pub. No. CKRE00E1).

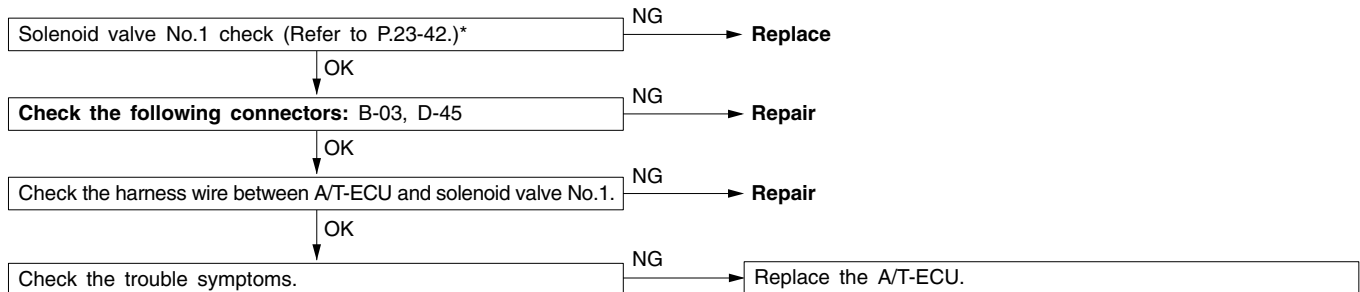


Code No. 43, 44 Solenoid valve No.2 system	Probable cause
<p>If the resistance value for a solenoid valve No.2 is too large, it is judged that there is an open circuit in the solenoid valve No.2 and the diagnosis code No.43 is output. If the resistance value for a solenoid valve No.2 is too small, it is judged that there is a short-circuit in the solenoid valve No.2 and the diagnosis code No.44 is output.</p>	<ul style="list-style-type: none"> ● Malfunction of solenoid valve No.2 ● Malfunction of harness or connector ● Malfunction of the A/T-ECU

*: Refer to '00 PAJERO PININ Workshop Manual (Pub. No. CKRE00E1).

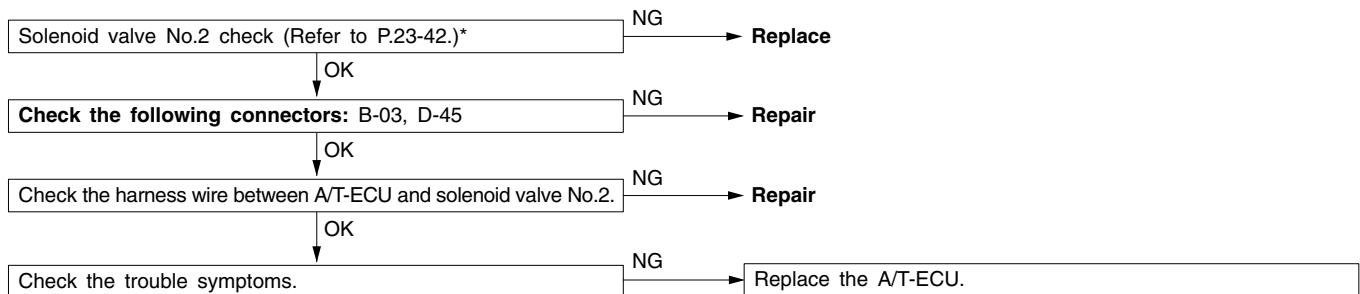


Code No. 47, 48 Solenoid valve No.3 system	Probable cause
<p>If the resistance value for a solenoid valve No.3 is too large, it is judged that there is an open circuit in the solenoid valve No.3 and the diagnosis code No.47 is output. If the resistance value for a solenoid valve No.3 is too small, it is judged that there is a short-circuit in the solenoid valve No.3 and the diagnosis code No.48 is output.</p>	<ul style="list-style-type: none"> ● Malfunction of solenoid valve No.3 ● Malfunction of harness or connector ● Malfunction of the A/T-ECU

*: Refer to '00 PAJERO PININ Workshop Manual (Pub. No. CKRE00E1).

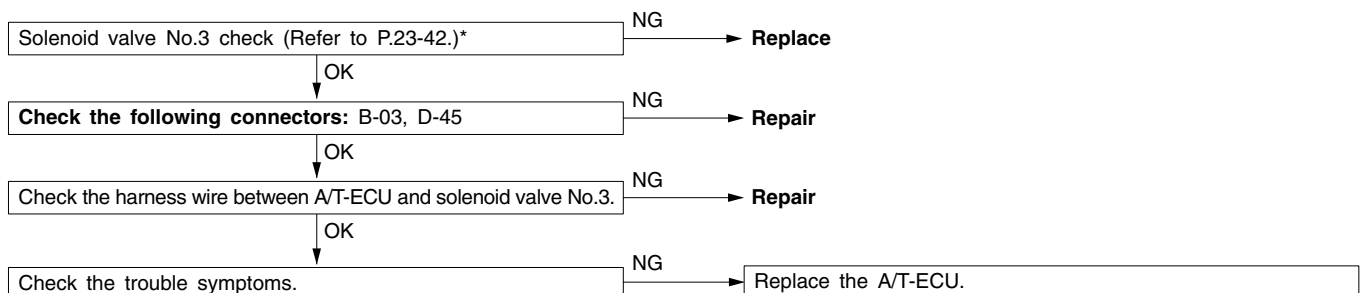

Code No. 55 Abnormal communication with engine-ECU	Probable cause
If normal communication is not possible for a continuous period of 1 second or more when the ignition switch is at the ON position and the battery voltage is 10 V or more, diagnosis code No. 55 is output. Diagnosis code No. 55 is also output if the data being received is abnormal for a continuous period of 1 second under the same conditions.	<ul style="list-style-type: none"> • Malfunction of harness or connector • Malfunction of the engine-ECU • Malfunction of the A/T-ECU

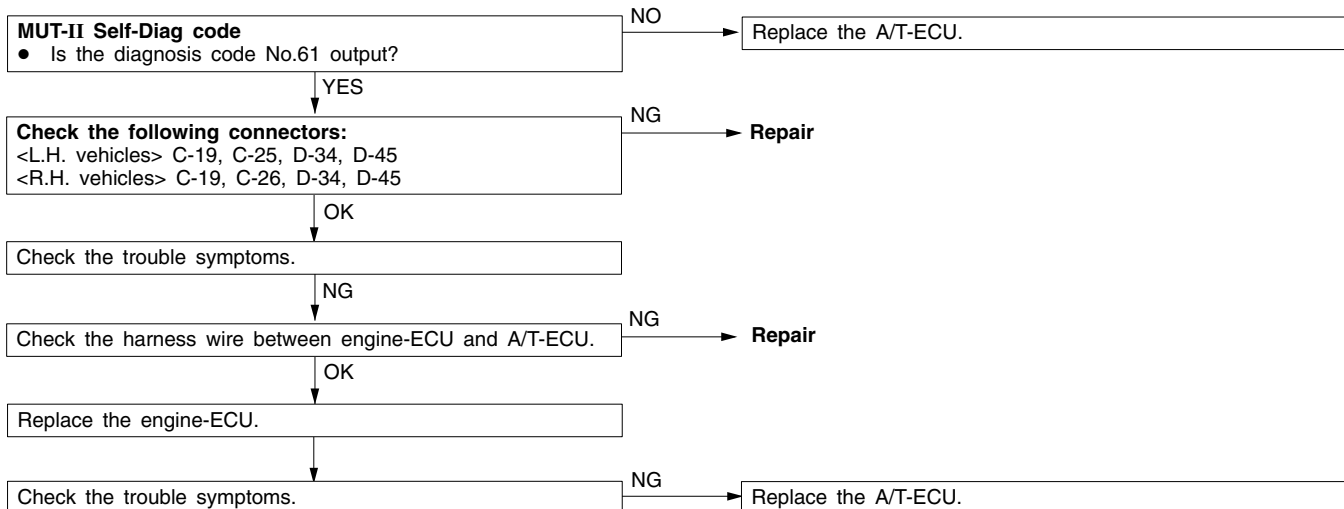

INSPECTION CHART FOR TROUBLE SYMPTOMS


*: Refer to '00 PAJERO PININ Workshop Manual (Pub. No. CKRE00E1).

Trouble symptom		Inspection procedure No.	Reference page
Communication with the MUT-II is not possible		1	23-10
Does not move	Does not move forward and reverse	2	23-17*
	Does not move forward only	3	23-18*
	Does not reverse only	4	23-18*
Malfunction when shifting	Upshifting does not occur	5	23-19*
	Downshifting does not occur	6	23-20*
	Shifting point abnormality	7	23-20*
	Upshifting occurs spontaneously	8	23-21*
	Incorrect drive gear position	9	23-21*
Large shocks		10	23-22*
Slippage (vibration)		11	23-23*
Lockup malfunction		12	23-24*
Abnormal engine braking		13	23-24*
Electronic circuit systems	Overdrive switch system	14	23-11
	Stop lamp switch system	15	23-11

INSPECTION PROCEDURE FOR TROUBLE SYMPTOMS

INSPECTION PROCEDURE 1


Communication with the MUT-II is not possible	Probable cause
If communication with the MUT-II is not possible, the cause is probably a malfunction in the self-diagnosis system or the A/T-ECU is not functioning.	<ul style="list-style-type: none"> ● Malfunction of self-diagnosis system ● Malfunction of A/T-ECU power circuit ● Malfunction of A/T-ECU earth circuit ● Malfunction of A/T-ECU ● Malfunction of harness and connector

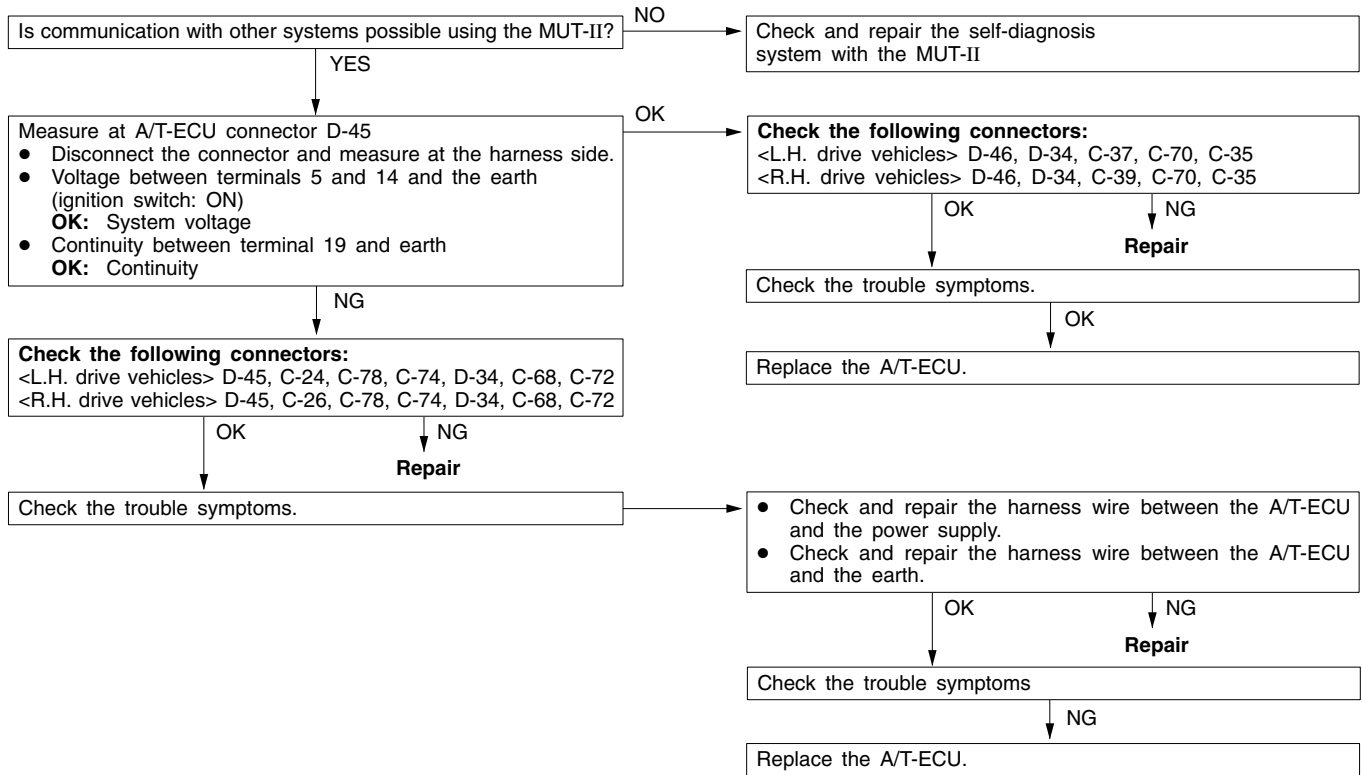

INSPECTION PROCEDURE 14

Overdrive switch system	Probable cause
If downshifting does not occur when overdrive switch is turned off while driving in 4th gear, or if shifting to 4th gear is not possible, the cause is probably a problem in the overdrive switch system.	<ul style="list-style-type: none"> ● Malfunction of overdrive switch ● Malfunction of harness or connector ● Malfunction of A/T-ECU ● Malfunction of ignition switch


*: Refer to '00 PAJERO PININ Workshop Manual (Pub. No. CKRE00E1).

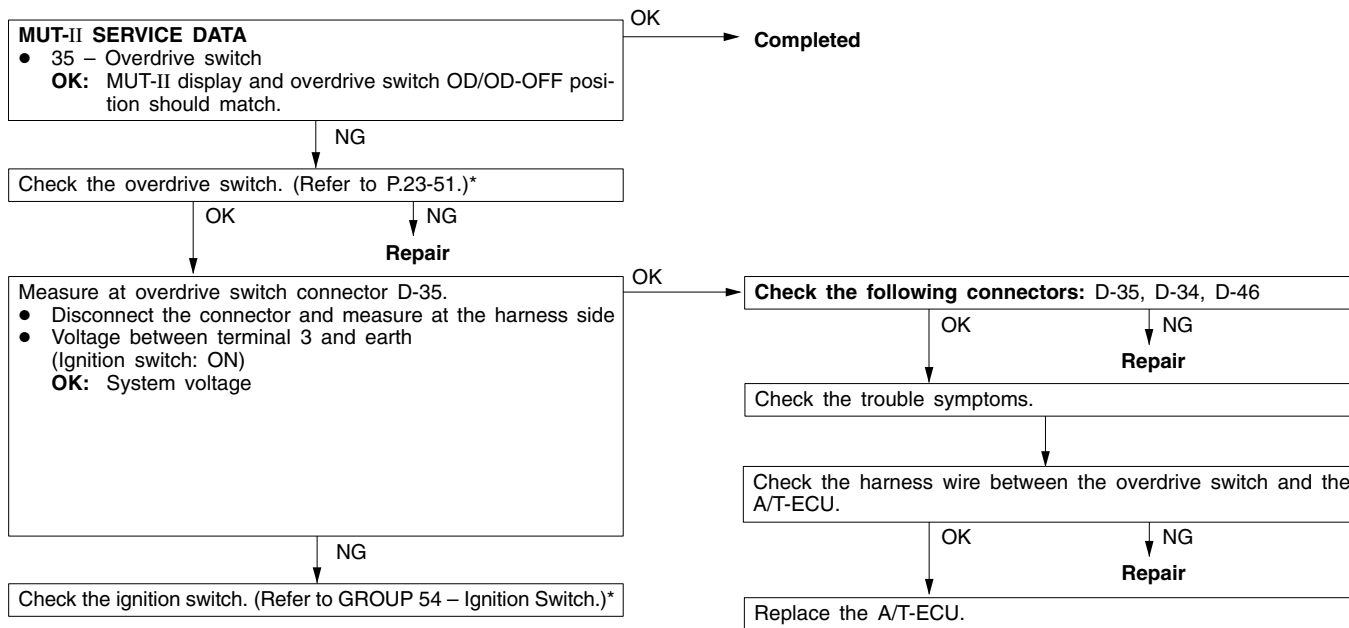

INSPECTION PROCEDURE 15

Stop lamp switch system	Probable cause
If large shocks occur during squat control, the cause is probably a problem with the stop lamp switch.	<ul style="list-style-type: none"> ● Malfunction of stop lamp switch ● Malfunction of harness or connector ● Malfunction of A/T-ECU

*: Refer to '00 PAJERO PININ Workshop Manual (Pub. No. CKRE00E1).

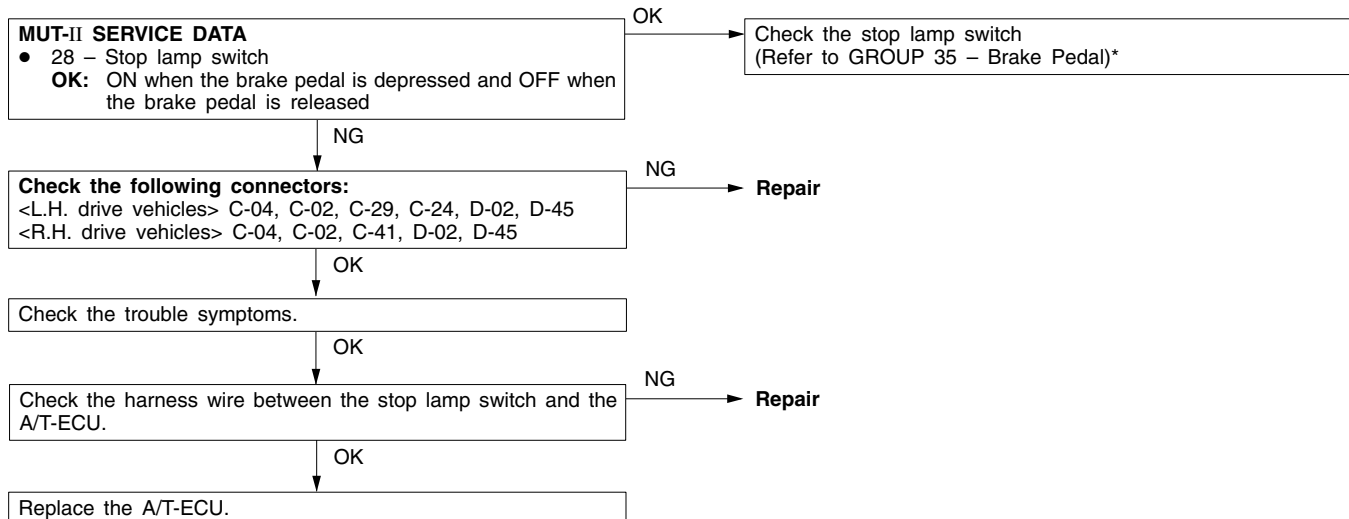


Terminal No.	Inspection item	Inspection conditions	Standard value
18	Stop lamp switch	Brake pedal: Depressed	System voltage
		Brake pedal: Released	0 V
19	Earth	Engine: Idling	0 V
20	A/T fluid temperature sensor earth	–	–
21	Diagnostic output terminal	–	–
23	Input shaft speed sensor	Ignition switch: OFF	0 V
		Ignition switch: ON	2.5 V
24	Output shaft speed sensor	Vehicle: Stopped	Approx. 2.5 V
		Vehicle: Driving	Other than 2.5 V
25	Overdrive switch	Overdrive switch: ON	System voltage
		Overdrive switch: OFF	0 V
26	Inhibitor switch P	Selector lever position: P	System voltage
		Selector lever position: Other than P	0 V
27	Inhibitor switch R	Selector lever position: R	System voltage
		Selector lever position: Other than R	0 V
30	Input shaft speed sensor earth	–	–
31	Output shaft speed sensor earth	–	–
33	Wide open throttle switch	Accelerator pedal: Released	4.5 – 5.5 V
		Accelerator pedal: Depressed	Less than 0.4 V
34	Dual-pressure switch	A/C switch: OFF	0 V
		A/C switch: ON	System voltage
37	N range lamp	Ignition switch: ON	System voltage
		Ignition switch: OFF	0 V
38	Inhibitor switch N	Selector lever position: N	System voltage
		Selector lever position: Other than N	0 V
39	Inhibitor switch D	Selector lever position: D	System voltage
		Selector lever position: Other than D	0 V
41	Diagnosis control terminal	–	–
42	Accelerator pedal position sensor (power supply voltage)	Ignition switch: ON	Approx. 5 V
		Ignition switch: OFF	0 V

Terminal No.	Inspection item	Inspection conditions	Standard value
43	Accelerator pedal position sensor (throttle opening voltage)	Accelerator pedal: Released	Approx. 1 V
		Accelerator pedal: Fully depressed	Approx. 4 V
44	Vehicle speed sensor	Vehicle: Slowly moving forward	Alternates between 0↔Approx. 5 V
47	Inhibitor switch 2	Selector lever position: 2	System voltage
		Selector lever position: Other than 2	0 V
48	Inhibitor switch L	Selector lever position: L	System voltage
		Selector lever position: Other than L	0 V

AUTOMATIC TRANSMISSION

CONTENTS

GENERAL	2	ON-VEHICLE SERVICE	4
Outline of Changes	2	Kickdown Cable Check and Adjustment	4
TROUBLESHOOTING <A/T>	2		



GENERAL

OUTLINE OF CHANGES

Since the vehicles with the 4G93-MPI engine have been added, the V4AW4 type transmission has been adopted. This transmission is basically the same as that of the vehicles with 4G94 engine. Due to the changes shown below, some new service procedures have been added.

- On the vehicles with 4G93-MPI engine, the APS has been used for the transmission control (input signal of the throttle opening angle). Due to this, the road test, the inspection procedures for diagnosis codes, and the service data have been reviewed.
- On the vehicles with 4G93-MPI engine, the shift pattern has been established. On the vehicles with 4G94 engine, the shift pattern has been changed.
- On the vehicles with 4G93-MPI engine, the kick-down cable adjustment procedure has been established.
- A full-time 4WD model has been added to the vehicles with 4G93-MPI engine (Refer to GROUP 22 – Manual Transmission).
- Due to the addition of a full-time 4WD model, the transfer control lever and the 4WD indicator control unit on the vehicles with 4G93-MPI engine have been discontinued.
- On all models, the quantity of the transfer oil has been changed from 2.3 litre to 2.2 litre.
- On all models, the wide open throttle switch has been discontinued.

TROUBLESHOOTING <A/T>


ROAD TEST

No.	State prior to test and operation	Test and operation	Judgement value	Check item	Inspection item if there is an abnormality
1	Ignition switch: ON Engine: Stopped	Ignition switch (1) ON (2) OFF	Data list No.12 (1) Approx. 5V (2) 0V	APS (Power supply voltage)	Code No.11, 12 APS system (P.23-4)
4	Engine: Idling Selector lever position: N	Accelerator pedal (1) Released (2) Half depressed (3) Fully depressed (approx. 2 seconds)	Data list No.11 (1) 0 - 5 % (2) Gradually rises from (1) (3) 85 - 100 %	APS (Throttle opening angle)	Code No.11, 12 APS system (P.23-4)

SHIFT PATTERN

<4G93 – MPI>


D range (Overdrive switch: ON)

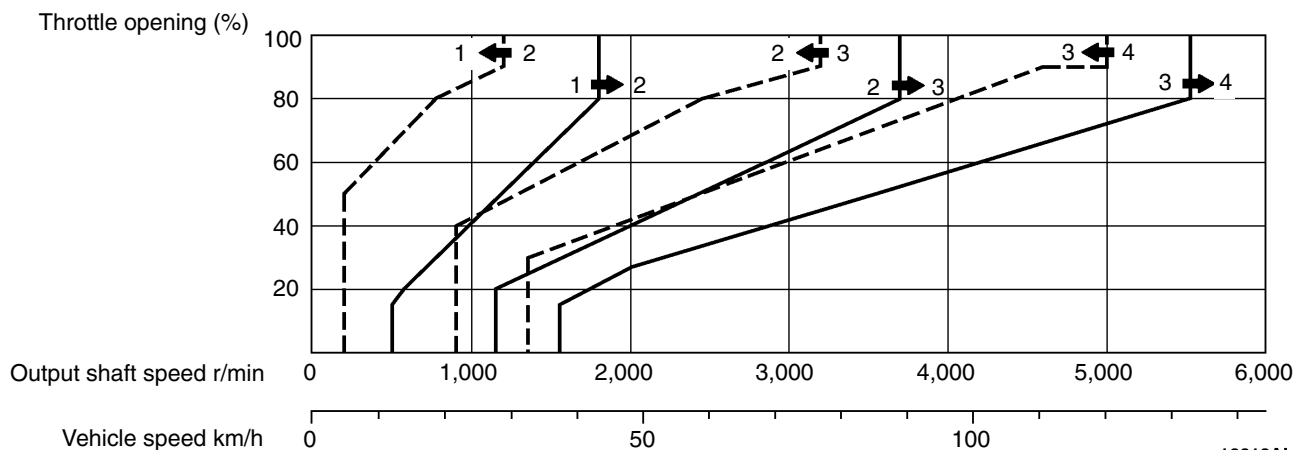

<4G94>

D range (Overdrive switch: ON)

DOWNSHIFT PATTERN

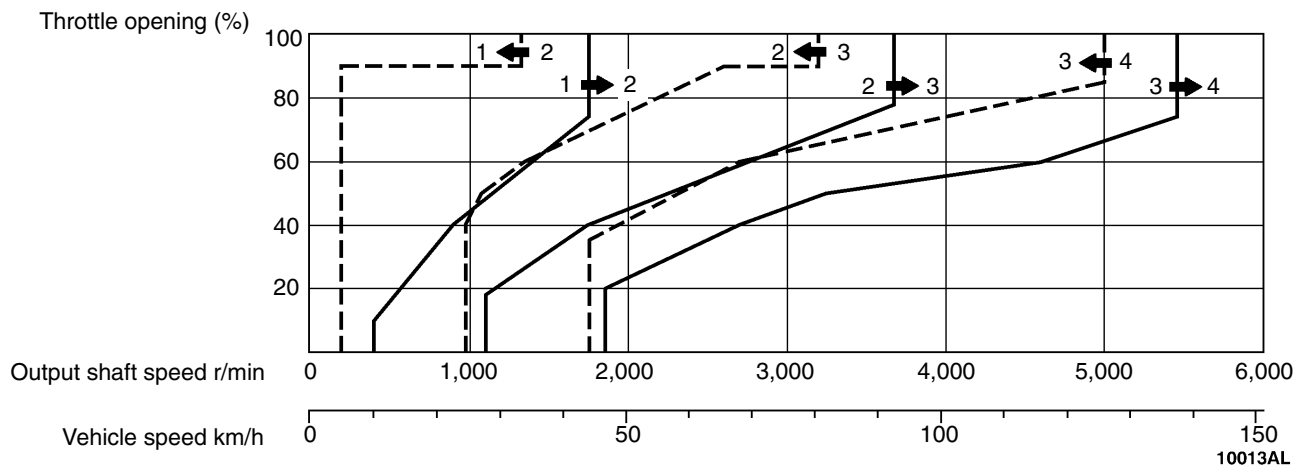


INSPECTION CHART FOR DIAGNOSIS CODE

Code	Diagnosis item	Reference page
11	Accelerator pedal position sensor system (APS) (Throttle opening voltage)	Sensor malfunction/ open circuit/short circuit
12	Accelerator pedal position sensor system (APS) (Throttle power supply voltage)	Open circuit/short circuit


INSPECTION PROCEDURES FOR DIAGNOSIS CODES

Code No.11, 12 Accelerator pedal position sensor (APS)	Probable cause
<p>If the APS output voltage (APS opening voltage) is 4.8 V or higher when the engine is idling, the output voltage is judged to be too high and diagnosis code No. 13 is output. If the APS output voltage (APS opening voltage) is 0.335 V or lower when the engine is idling, the output voltage is judged to be too low and diagnosis code No. 13 is output.</p> <p>If the APS output voltage (APS power supply voltage) is 3.0 V or lower or if it is 5.7 V or higher when the engine is idling, the APS is judged to be faulty and diagnosis code No. 14 is output.</p>	<ul style="list-style-type: none"> ● Malfunction of the accelerator pedal position sensor ● Malfunction of harness or connector ● Malfunction of the A/T-ECU

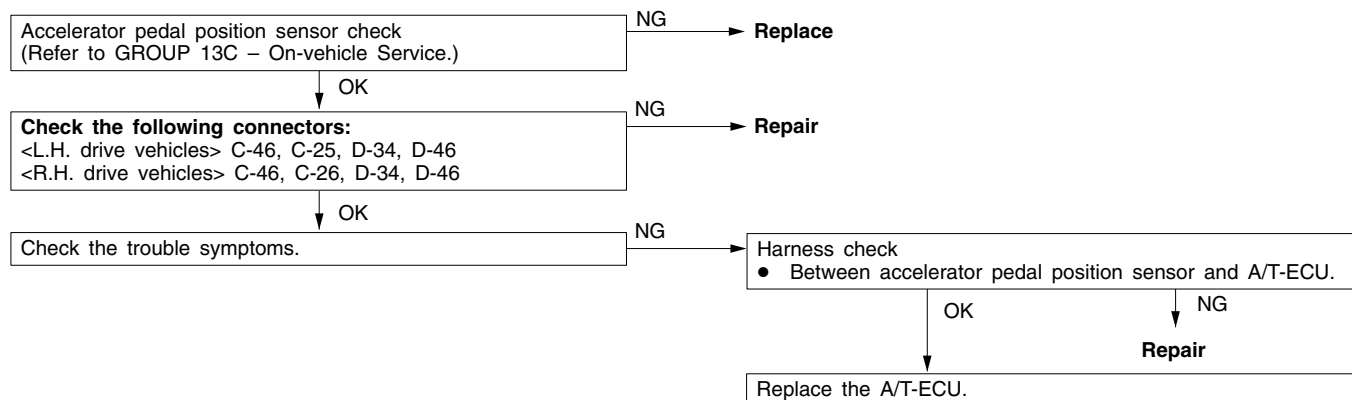

SERVICE DATA REFERENCE TABLE

Item No.	Inspection item	Inspection conditions	Normal value	
11	Accelerator pedal position sensor (Throttle opening voltage)	Engine: Idle Selector lever position: N	Accelerator pedal: Fully released	0 – 5 %
			Accelerator pedal: Depressed	Gradually rises from the above value
			Accelerator pedal: Fully depressed (up to 2 seconds)	85 – 100 %
12	Accelerator pedal position sensor (Power supply voltage)	Ignition switch: ON Engine: Stopped	Ignition switch: ON	Approx. 5
			Ignition switch: OFF	0 V

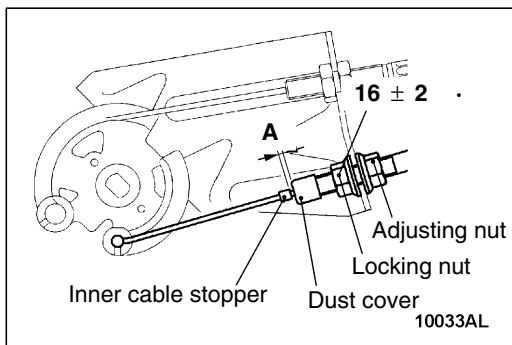

ON-VEHICLE SERVICE

KICKDOWN CABLE CHECK AND ADJUSTMENT

1. Release the accelerator pedal.
2. Loosen the adjusting nut and locking nut. Move the outer cable of the kickdown cable to adjust the clearance (A) between the inner cable stopper and dust cover end to the standard value, and then tighten the adjusting nut to secure the kickdown cable.
3. Tighten the locking nut to the specified torque.

Standard value: 0.8 – 1.5 mm

Caution

Adjust the accelerator cable assembly after the kickdown cable adjustment.