
BODY

BODY

CONTENTS

HOOD	3	SEALANT	18
FENDER*	4	SPECIAL TOOLS	18
SEALANT	4	TROUBLESHOOTING	18
FENDER	5	ON-VEHICLE SERVICE	19
FUEL FILLER DOOR	6	Door Fit Adjustment	19
WINDOW GLASS	8	Door Window Glass Adjustment	19
ADHESIVE	8	Defective Power Window Adjustment and Replacement	20
SPECIAL TOOLS	8	Power Window Safety Mechanism Check	20
WINDOW REPAIR	8	Door Outside Handle Play Check	20
WINDSHIELD	10	Power Window Operation Current Check ...	21
QUARTER WINDOW GLASS	14	Circuit Breaker (Incorporated in the Power Window Motor) Check	21
BACK DOOR GLASS	16	Door Inside Handle Play Check and Adjustment	21
DOOR	18		
SERVICE SPECIFICATIONS	18		

CONTINUED ON NEXT PAGE

WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.
- (3) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) before beginning any service or maintenance of any component of the SRS or any SRS-related component.


NOTE

The SRS includes the following components: SRS-ECU, SRS warning lamp, air bag module, clock spring, side impact sensors and interconnecting wiring. Other SRS-related components (that may have to be removed/installed in connection with SRS service or maintenance) are indicated in the table of contents by an asterisk (*).

DOOR ASSEMBLY	22	BACK DOOR HANDLE AND LATCH	37
DOOR TRIM AND WATERPROOF FILM	23	KEYLESS ENTRY SYSTEM	38
DOOR GLASS AND REGULATOR	26	TROUBLESHOOTING	38
DOOR HANDLE AND LATCH	30	ON-VEHICLE SERVICE	38
WINDOW GLASS RUNCHANNEL AND DOOR OPENING WEATHERSTRIP	32	How to Replace a Battery of the Transmitter	38
BACK DOOR	33	Encrypted Code Registration Method	39
SERVICE SPECIFICATION	33	Hazard Lamp Answerback Adjustment	40
SEALANT	33	KEYLESS ENTRY SYSTEM	41
SPECIAL TOOL	33	SUNROOF	42
TROUBLESHOOTING	33	SERVICE SPECIFICATION	42
ON-VEHICLE SERVICE	33	TROUBLESHOOTING	42
Back Door Fit Adjustment	33	ON-VEHICLE SERVICE	46
Back Door Handle Play Check	33	Water Test	46
BACK DOOR ASSEMBLY	34	Sunroof Fit Adjustment	46
BACK DOOR TRIM AND WATERPROOF FILM	36	SUNROOF	47

HOOD

REMOVAL AND INSTALLATION

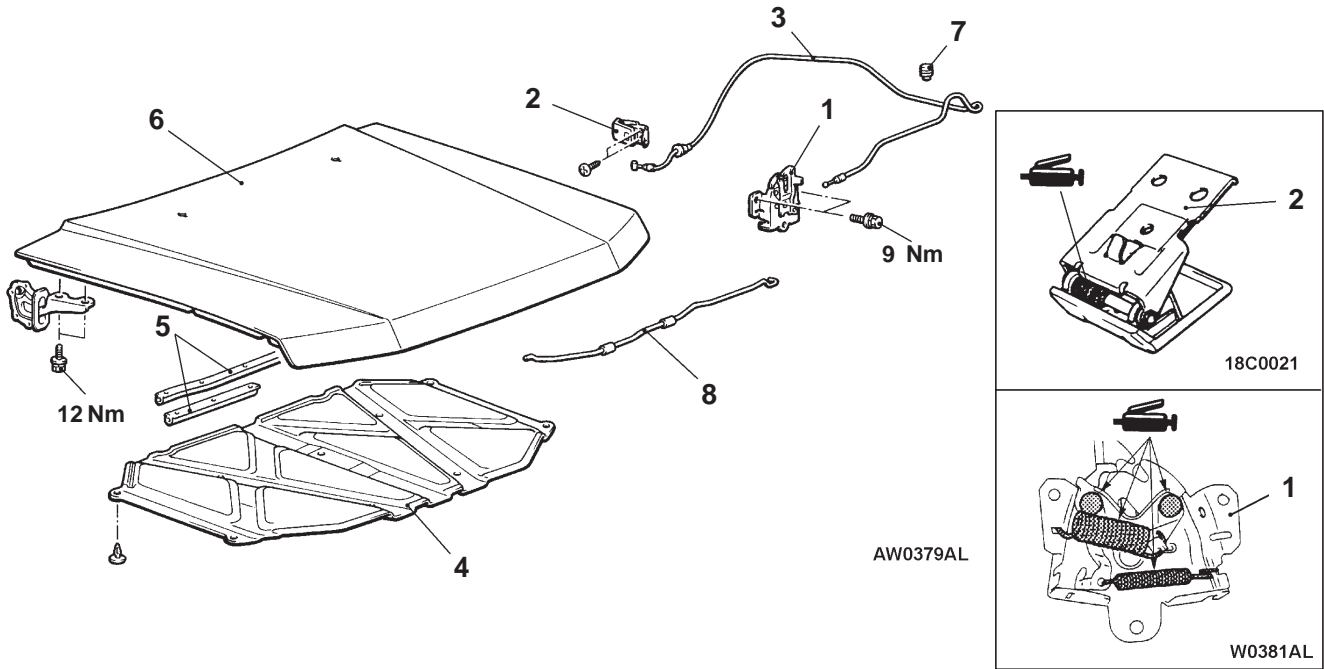

<p style="text-align: right;">AW0382AL</p>	<p style="text-align: right;">18H0050</p>	<p style="text-align: right;">18H0049</p>
<p>Adjustment of hood step and hood striker linkage</p>	<p>Adjustment of clearance around hood</p>	<p>Adjustment of hood height</p>

Hood latch removal steps


- Front grille (Refer to GROUP 51.)
- 1. Hood latch

Hood lock release cable removal steps

- 2. Hood lock release handle
- 3. Hood lock release cable

Hood removal steps

- 4. Hood silencer
- 5. Hood weatherstrip
- Washer hose (Refer to GROUP 51.)
- 6. Hood
- 7. Hood bumper
- 8. Hood support rod

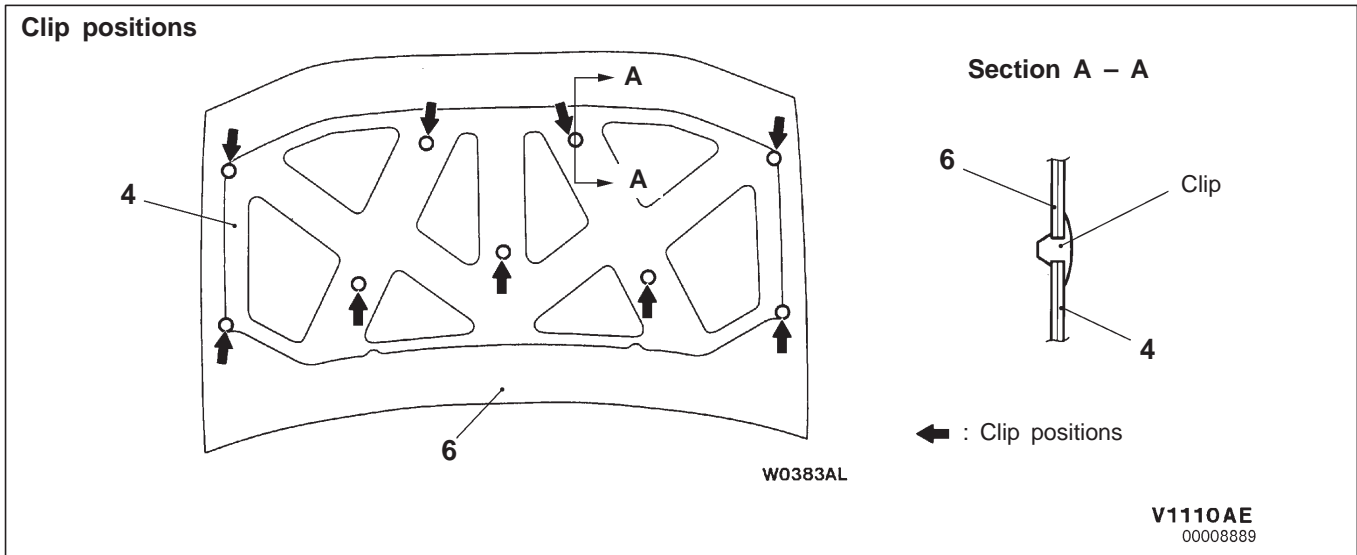

FENDER

SEALANT

Item	Specified sealant	Remark
Splash shield	3M ATD Part No. 8625 or equivalent	Ribbon sealer

FENDER


REMOVAL AND INSTALLATION

Caution: SRS

Do not strike the front impact sensor when removing or installing the fender.

Pre-removal and Post-installation Operation

- Front Bumper Removal and Installation
(Refer to GROUP 51.)

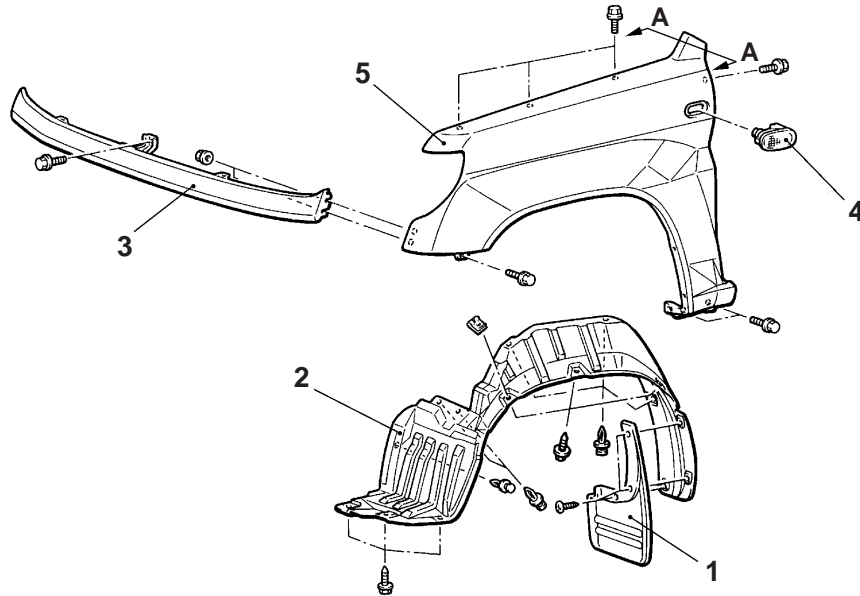


W0537AL
00008890

<p style="text-align: center;">Section A – A</p> <p style="text-align: center;">W0385AL W0386AL</p>	<p style="text-align: center;">Section B – B</p> <p style="text-align: center;">W0387AL W0260AL</p> <p style="text-align: right;">← : Clip positions</p>
<p>Sealant: 3M ATD Part No. 8625 or equivalent</p>	

Removal steps

1. Mud guard
2. Splash shield
3. Grille filler panel


- ▶A◀
4. Side turn signal lamp
(Refer to GROUP 54.)
 5. Fender

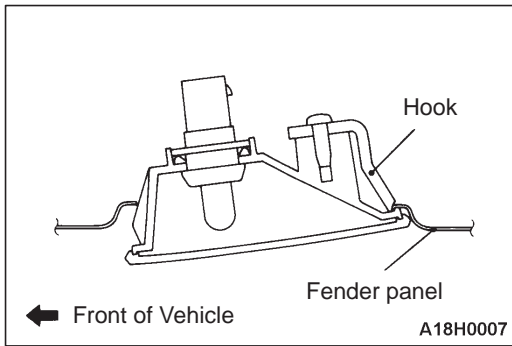**INSTALLATION SERVICE POINT****◀A▶ SIDE TURN SIGNAL LAMP REMOVAL**

Engage the hook with the fender panel.

FUEL FILLER DOOR**REMOVAL AND INSTALLATION****Pre-removal and Post-installation Operations**

- Rear Floor Console Removal and Installation (Refer to GROUP 52A.)
- Front Seat (Driver's side), Rear Seat Removal and Installation (Refer to GROUP 52A.)
- Quarter Trim, Lower (R.H.) Removal and Installation (Refer to GROUP 52A.)

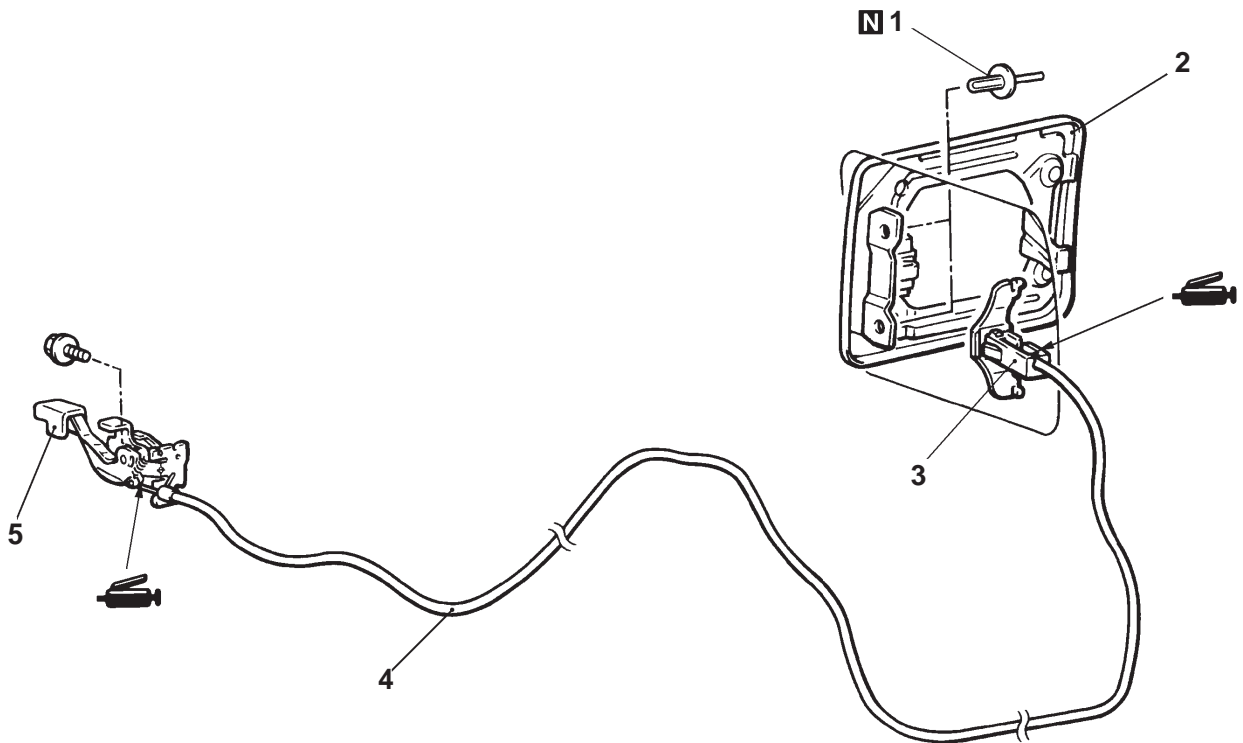


BW1195AL

Removal steps

1. Rivet
2. Fuel filler door panel assembly
3. Fuel filler door lock assembly


4. Fuel filler door lock release cable
5. Lid lock release handle

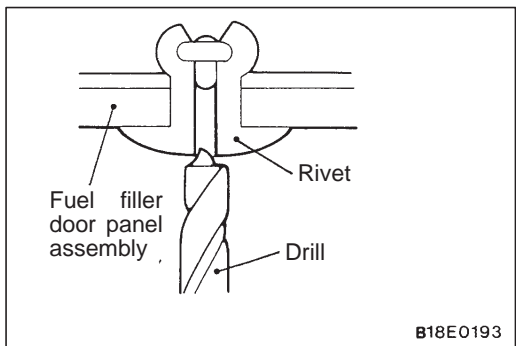

REMOVAL SERVICE POINT

◀A▶ RIVET REMOVAL

Use a drill (Ø4.0 – 5.5 mm) to break the rivet by drilling a hole, and then remove the rivet.

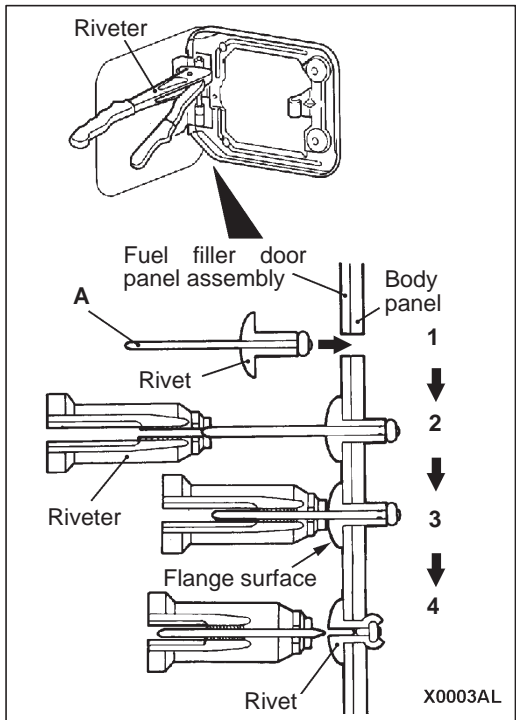

INSTALLATION SERVICE POINT

▶A◀ RIVET INSTALLATION

Use a riveter shown to install rivets as follows:



1. Insert a rivet in the body panel and fuel filler door panel assembly.
2. Insert the riveter to the rod (A shown) of a rivet.
3. Pressing the flange surface of the rivet with the riveter, handle the riveter.
4. The rod is cut at its thinnest point and the rivet is held in position.

WINDOW GLASS

ADHESIVE

Items	Specified adhesive
Windshield	3M ATD Part No. 8609 Super Fast Urethane Auto Glass Sealant or equivalent
Quarter window glass	
Back door glass	

SPECIAL TOOLS

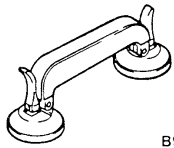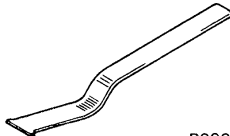Tool	Number	Name	Use
 B990480	MB990480	Window glass holder	Removal and installation of windshield
 B990449	MB990449	Window moulding remover	Removal of roof drip moulding

WINDOW REPAIR

The following glass parts are installed with a liquid urethane adhesive method:

- Windshield
- Quarter window glass
- Back door window glass

ITEMS NEEDED

Name	Remarks
Adhesive	3M ATD Part No. 8609 Super Fast Urethane Auto Glass Sealant or equivalent
Primer	3M ATD Part No. 8608 Super Fast Urethane Primer or equivalent
Spacers	Available as service part
Dam	Available as service part
Anti-rust solvent (or Tectyl 506T...Valvoline Oil Company)	For rust prevention
Isopropyl alcohol	For grease removal from bonded surface
Steel piano wire	Dia. × length...0.6mm × 1m For cutting adhesive
Adhesive gun	For pressing-out adhesive


HANDLING OF AUTO WINDOW SEALER

Keep the sealant in a cool place, not exposed to the direct rays of the sun. Do not place any heavy article on the sealant nor press it, otherwise it will become deformed. Avoid storing the sealant for more than 6 months, because it will lose its sealing effect.

BODY PINCH-WELD FLANGE SERVICING

Before servicing the body pinch-weld flange, remove old adhesive completely. If the flange requires painting, bake it after painting is completed.

WORKING PROCESS


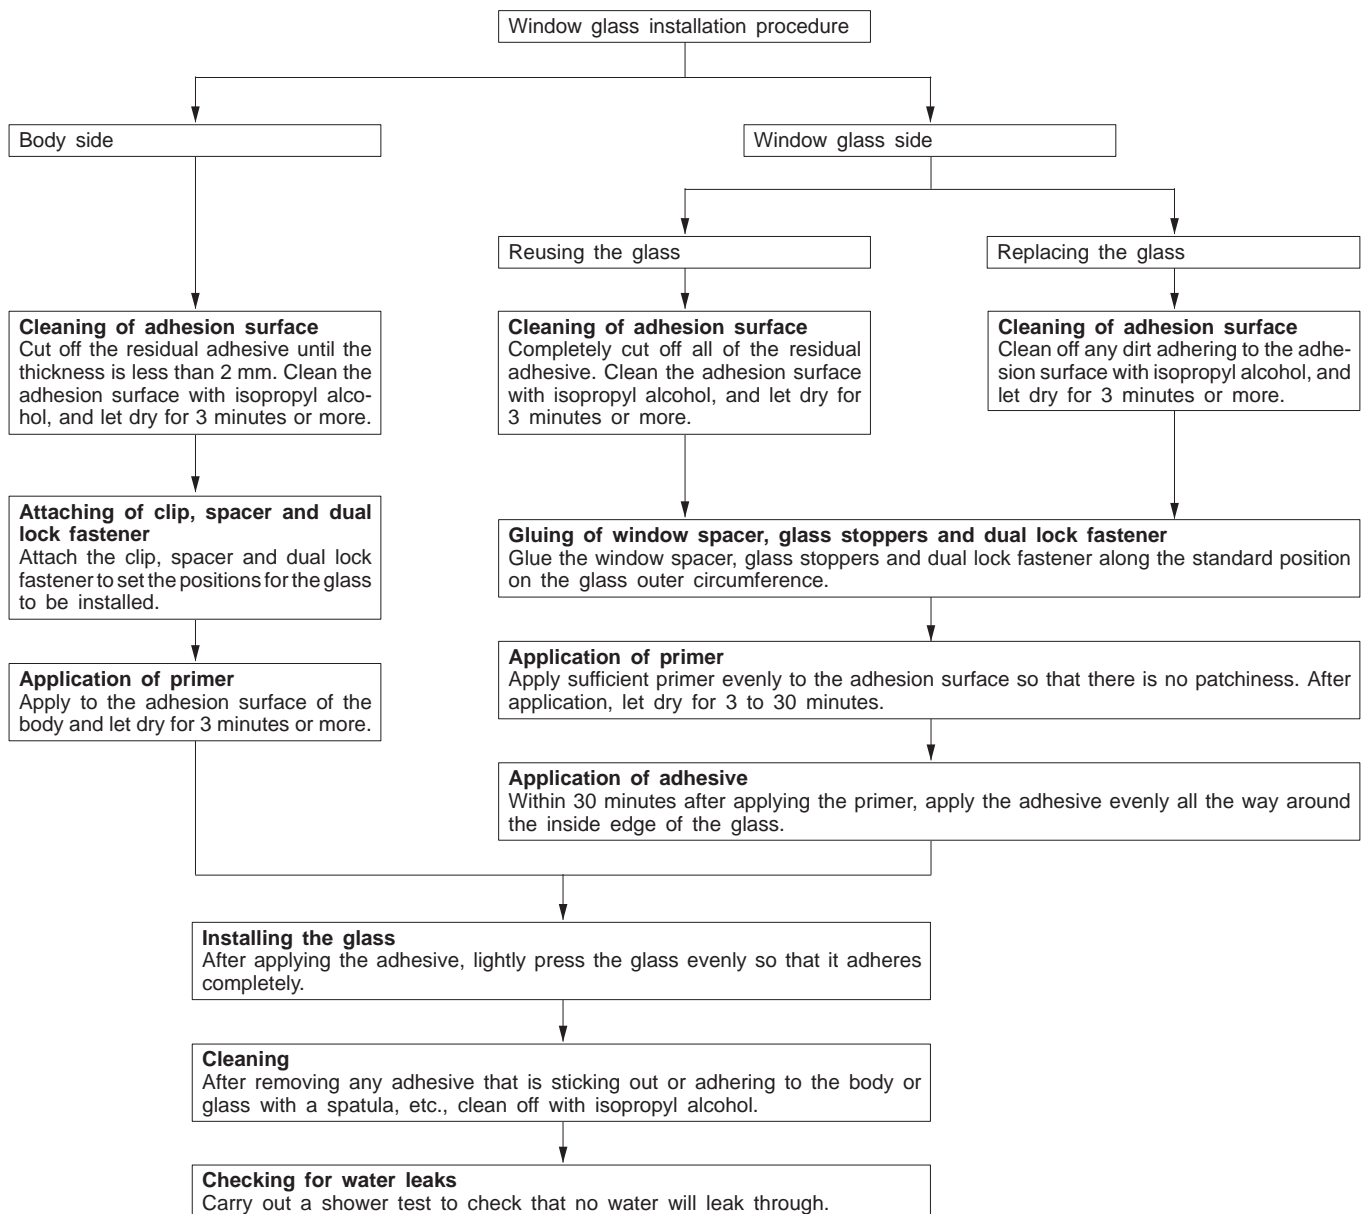


WINDSHIELD

REMOVAL AND INSTALLATION

Pre-removal and Post-installation Operations

- Front Pillar Trim Removal and Installation (Refer to GROUP 52A.)
- Headlining Removal and Installation (Refer to GROUP 52A.)

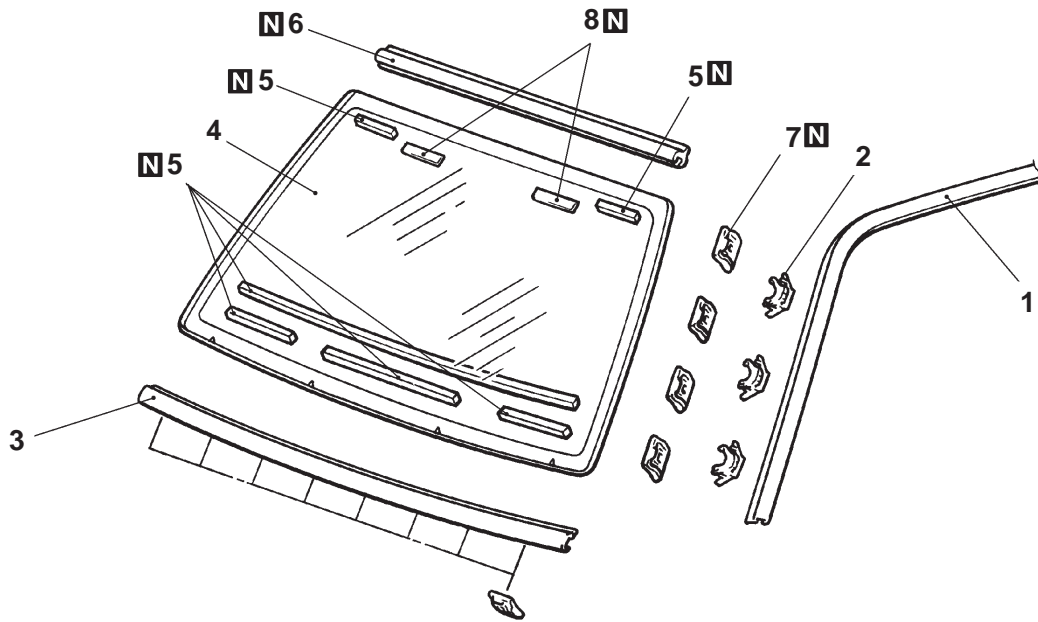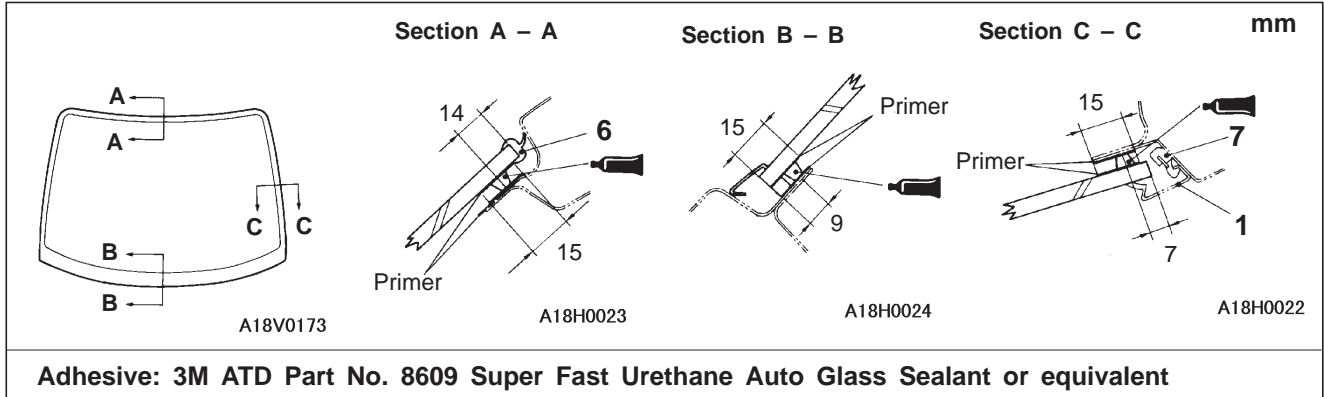


W0784AL

Removal steps

- ◀A▶ 1. Roof drip moulding (Refer to GROUP 51.)
- ▶A▶ 2. Roof drip moulding clip
- ▶A▶ 3. Windshield lower moulding
- ▶A▶ 4. Windshield

- ▶A▶ 5. Windshield spacer
- ▶A▶ 6. Windshield upper moulding
- ▶A▶ 7. Clip
- ▶A▶ 8. Glass stopper

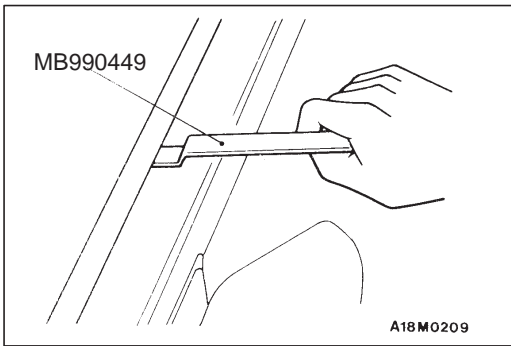


REMOVAL SERVICE POINTS

◀A▶ ROOF DRIP MOULDING REMOVAL

Use the special tool to lever out the moulding.

Caution

If the moulding has become warped, it should not be reused.

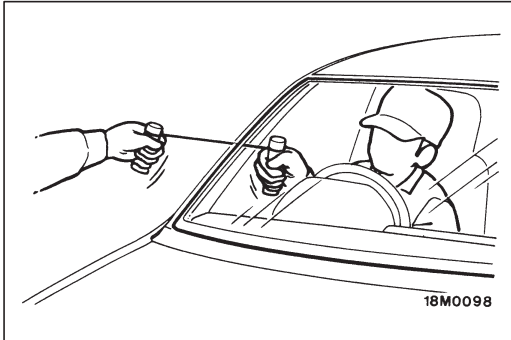


◀B▶ WINDSHIELD REMOVAL


1. In order to protect the body (paint surface), apply cloth tape to all body areas around the installed windshield.
2. Using a sharp-point drill, make hole in the windshield adhesive.
3. Pass the piano wire from the inside of the vehicle through the hole.
4. Pull the piano wire alternately from the inside and outside along the windshield to cut the adhesive.

Caution

Do not let the piano wire touch the edge of the windshield.

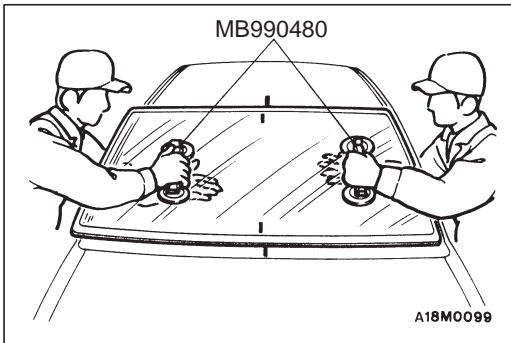

5. Make alignment marks on the windshield and body.
6. Use the special tool to remove the windshield.

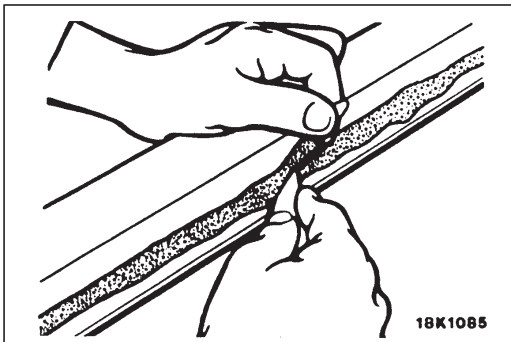

7. Use a knife to cut away remaining adhesive to 2 mm thick or less around the entire circumference of the body flange.
8. Smooth the flange surface.

Caution

- (1) Use care not to remove more adhesive than necessary, or the adhesive could weaken.
- (2) Be careful also not to damage the paintwork on the body surface with the knife. If the paintwork is damaged, repair the damaged area with repair paint or anti-rust agent.

9. When reusing windshield, remove the remaining adhesive on the windshield completely. Then, decrease the windshield with isopropyl alcohol.
10. Decrease the body flange in the same way.

Caution


Before the next job, leave the decreased parts for 3 minutes or more to dry. Also, do not touch any cleaned surface.

INSTALLATION SERVICE POINTS

▶A◀ GLASS STOPPER/CLIP/WINDSHIELD UPPER MOULDING/WINDSHIELD SPACER/WINDSHIELD INSTALLATION

1. When installing new windshield, temporarily position the windshield on the body. Make alignment marks on the windshield and body.
2. Use isopropyl alcohol to degrease the inside of windshield circumference, and also the body flanges.
3. Apply primer soaked in a sponge evenly to the specified positions on the windshield and body flange.
4. Dry 3 minutes or more.
5. Install the glass stoppers and windshield spacers as shown to prevent the inside of windshield from warp or separation.

Glass stopper and windshield spacer installation position

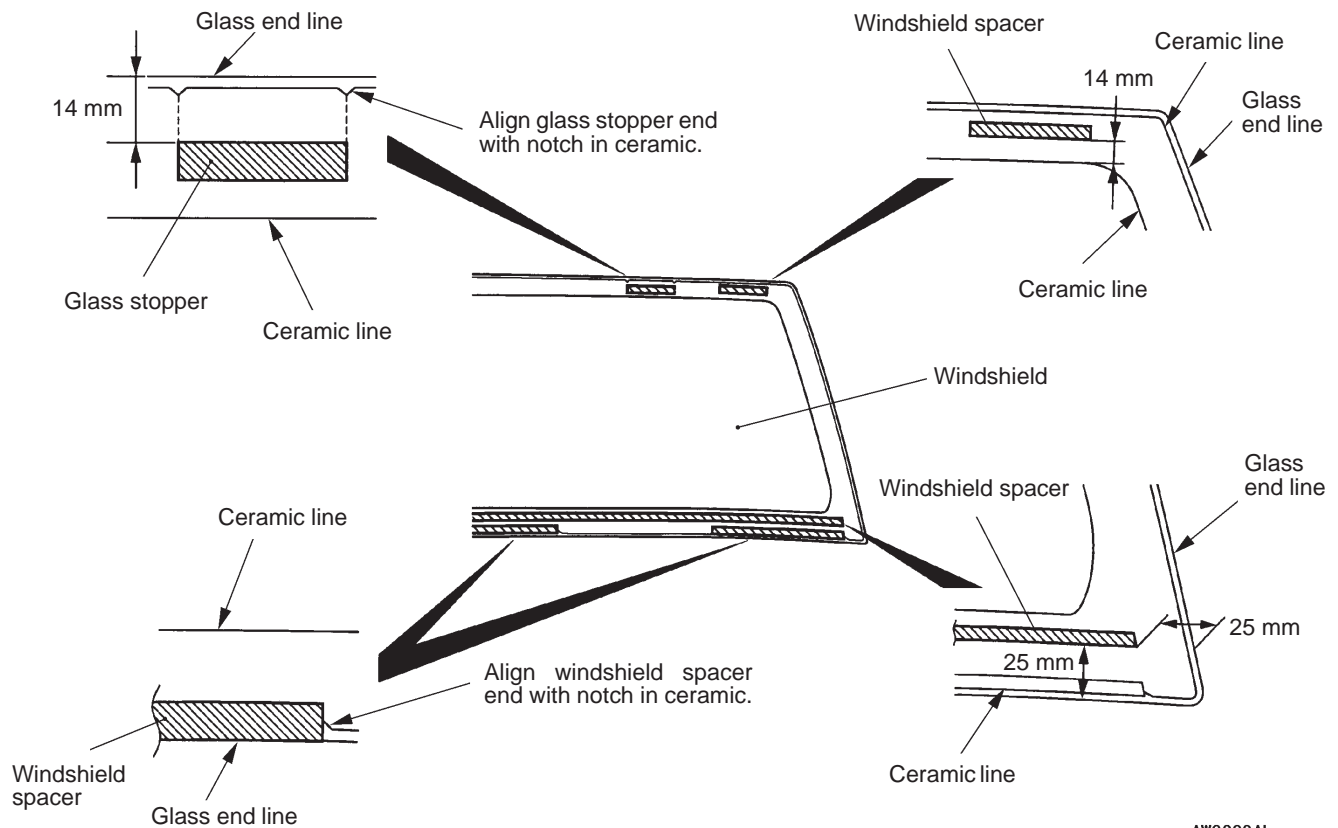


AW0389AL

Caution

- (1) Be sure to apply the primer to strengthen adhesion evenly around the entire position. Note that too thick application weakens the adhesion.
- (2) Never touch the surfaces where the primer is applied.


6. Install the windshield upper moulding to the windshield.

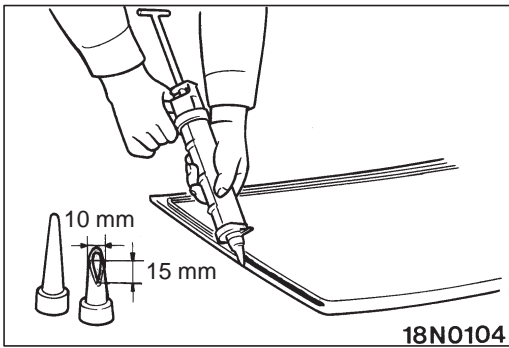

7. Fill a sealant gun with adhesive. Then apply the adhesive evenly around the windshield within 30 minutes after applying the primer.

NOTE

Cut the tip of the sealant gun nozzle into a V shape to simplify adhesive application.

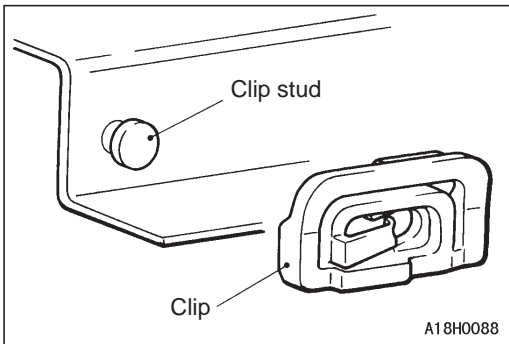

8. Install the clip to the clip stud.
9. After applying the adhesive, align the alignment marks on the windshield and body. Then, press the windshield gently to seat.
10. Use a spatula or the like to remove any excessive adhesive. Then clean the surface with isopropyl alcohol. Install the windshield moulding before the adhesive hardens.
11. Wait 30 minutes or more, and then test for water leakage.

Caution



- (1) Do not move the vehicle unless necessary. If doing so, move it very gently.
- (2) When testing for water leakage, do not pinch the end of the hose to spray the water.

QUARTER WINDOW GLASS

REMOVAL AND INSTALLATION

Pre-removal and Post-installation Operation

- Quarter Trim, Lower (R.H.) Removal and Installation (Refer to GROUP 52A.)
- Headlining Removal and Installation (Refer to GROUP 52A.)

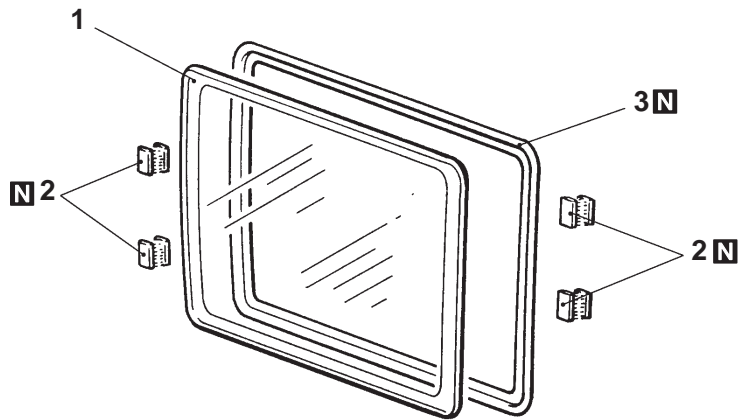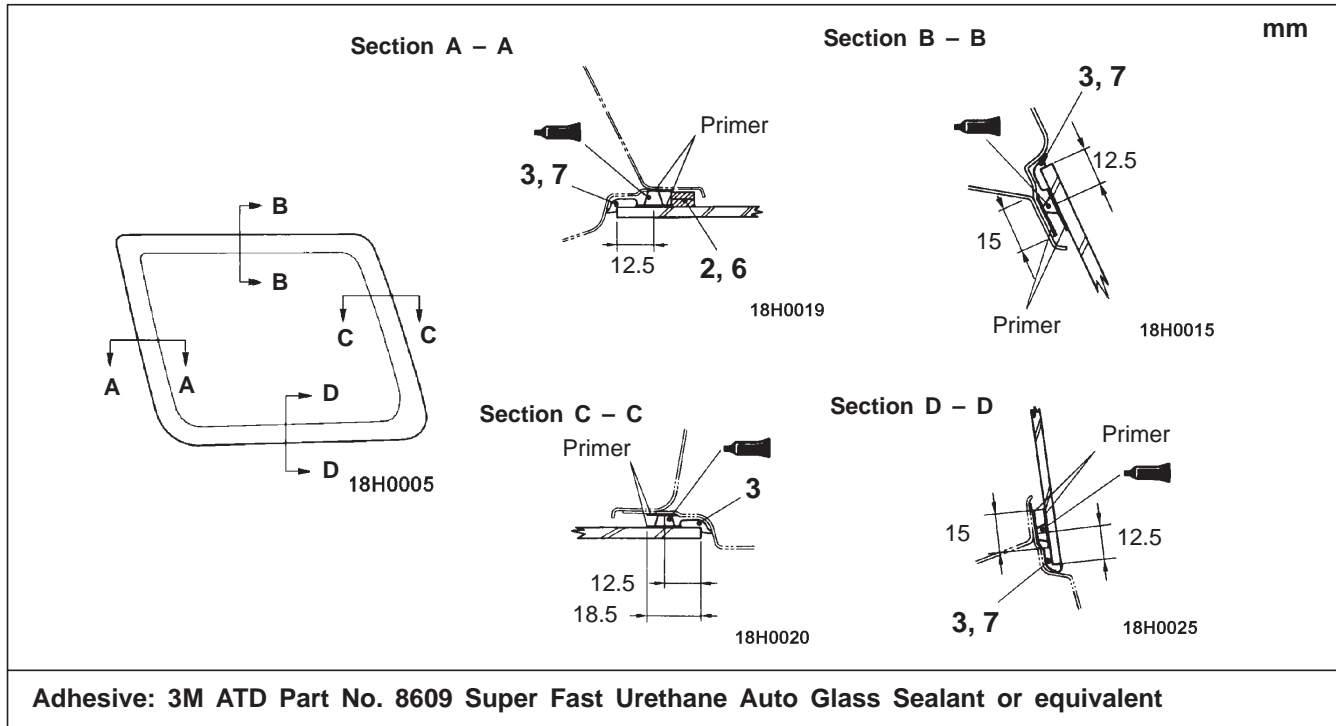

W0390AL
00008893

Removal steps

- ◀A▶ ▶A▶ 1. Quarter window glass
▶A▶ ▶A▶ 2. Dual lock fastener
▶A▶ ▶A▶ 3. Window dam

REMOVAL SERVICE POINT


◀A▶ QUARTER WINDOW GLASS REMOVAL

Remove the quarter window glass in the same manner as for the windshield. (Refer to P.42-11.)

INSTALLATION SERVICE POINT

▶A◀ WINDOW DAM/DUAL LOCK FASTENER/ QUARTER WINDOW GLASS INSTALLATION

1. Use a isopropyl alcohol to decrease the glass and body surfaces where the window dam and dual lock fasteners are installed.
2. Install the window dam.

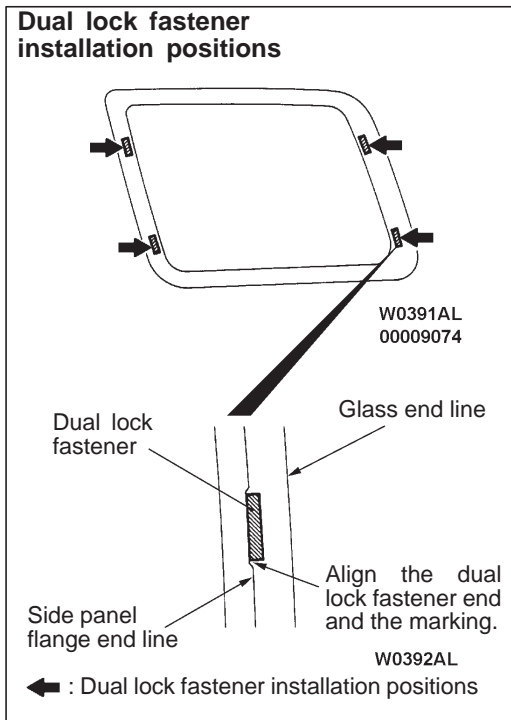



3. Install the dual lock fasteners to the body flange in the specified positions.
4. Install the dual lock fasteners to the windshield in the positions corresponding to the ones on the body flange where the dual lock fasteners have been installed.
5. Apply the primer and adhesive.
6. Install the glass in the same manner as for the windshield. (Refer to P.42-12.)

BACK DOOR GLASS

REMOVAL AND INSTALLATION

Pre-removal and Post-installation Operation

- High-mounted Stop Lamp Assembly Removal and Installation (Refer to GROUP 52A.)
- Back Door Trim Removal and Installation (Refer to P.42-34.)

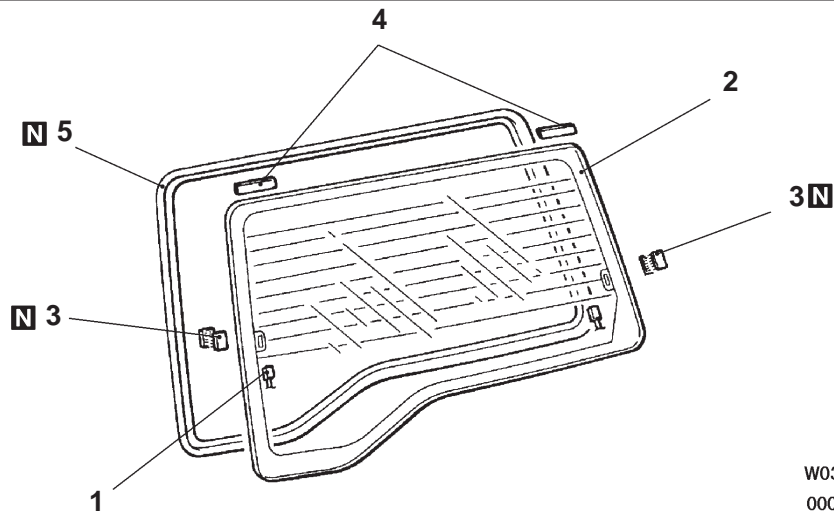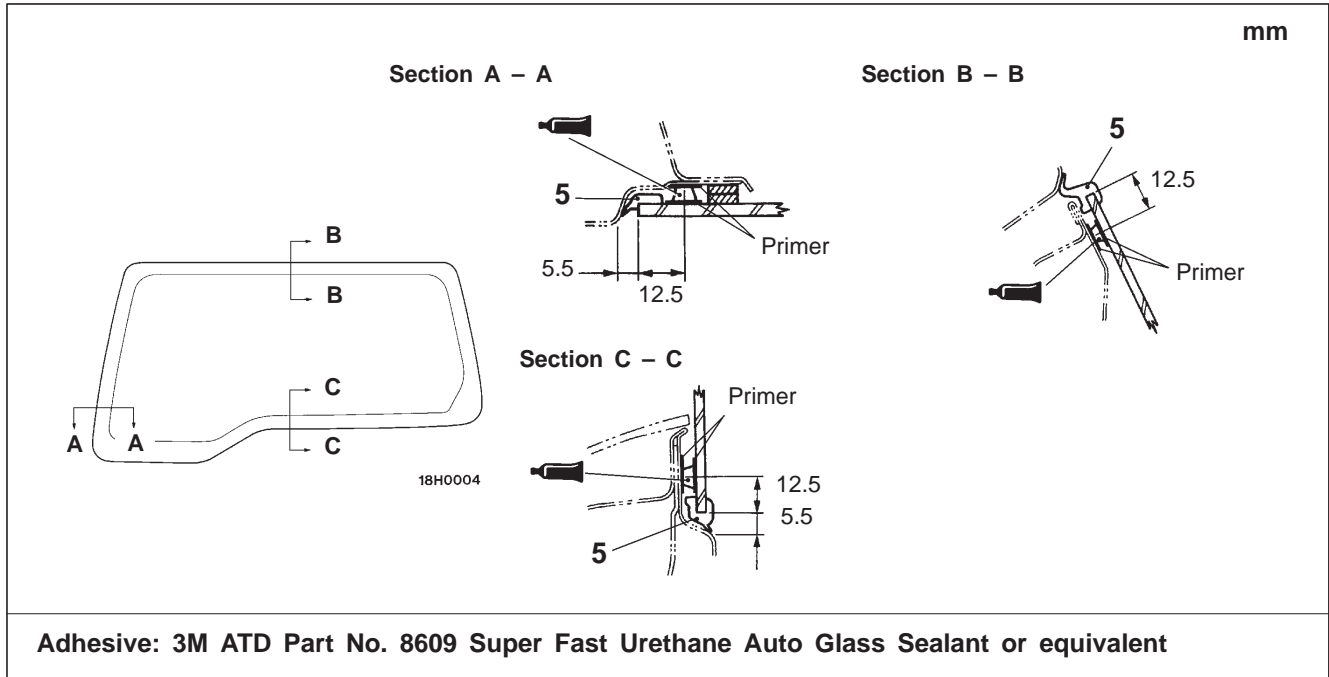

Removal steps

1. Harness connector
2. Back door glass
3. Dual lock fastener




4. Glass stopper
5. Window dam

REMOVAL SERVICE POINT**◀A▶ BACK DOOR GLASS REMOVAL**

Remove the back door glass in the same manner as for the windshield. (Refer to P42-11.)

INSTALLATION SERVICE POINT**▶A◀ WINDOW DAM/DUAL LOCK FASTENER/GLASS STOPPER/BACK DOOR GLASS INSTALLATION**

1. Use a isopropyl alcohol to decrease the glass and body surfaces where the window dam, dual lock fasteners and glass stoppers are installed.
2. Install the window dam.

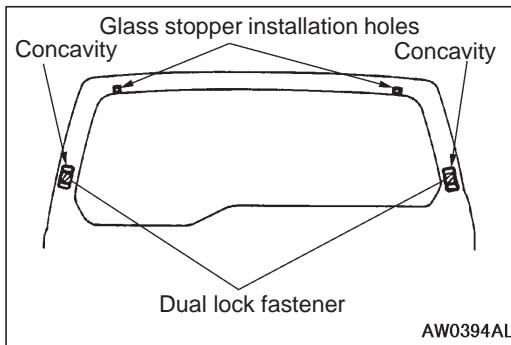

3. Install the dual lock fasteners to the concavities on the body panel and the glass stoppers to the hole on the body panel respectively.
4. Install the dual lock fasteners to the windshield in the positions corresponding to the ones on the body panel where the dual lock fasteners have been installed.
5. Apply the primer and adhesive.
6. Install the glass in the same manner as for the windshield. (Refer to P.42-12.)

DOOR




SERVICE SPECIFICATIONS

Items		Standard value
Door outside handle play mm		3.7 or more
Power window operating current A		5.3 ± 2 (power supply $14.5 \text{ V} \pm 0.3 \text{ V}$ at 23°C)
Door inside handle play mm		5.3 or more
Glass pad and glass holder installation position mm	Between glass holder and glass rear end (A)	55.0
	Between glass holders (B)	419.0 – 421.0
	Between glass holder and glass front end (C)	55.0

SEALANT


Items	Specified sealant	Remark
Waterproof film	3M ATD Part No. 8625 or equivalent	Ribbon sealer

SPECIAL TOOLS

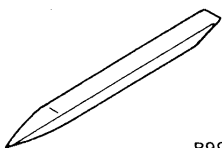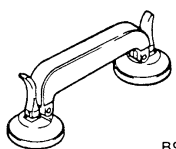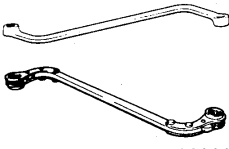Tool	Number	Name	Use
 B990784	MB990784	Ornament remover	Door trim removal
 B990480	MB990480	Window glass holder	Power window regulator and motor assembly removal
 00003936	MB990900 or MB991164	Door hinge adjusting wrench	Adjustment of door fit

TROUBLESHOOTING

The power window and central door locking is controlled by the Smart Wiring System (SWS). For troubleshooting, refer to GROUP 54B – Troubleshooting.

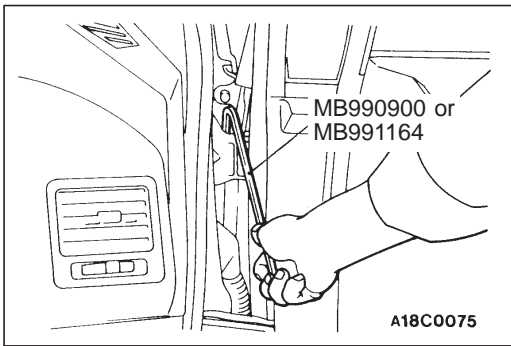


ON-VEHICLE SERVICE

DOOR FIT ADJUSTMENT


1. If clearance between the door and body is uneven, affix protective tape to the fender around the hinge and to the edge of the door. Then use the special tool to loosen the door hinge mounting bolts on the body, and adjust the clearance around the door so that it becomes even.
2. If the door and body are not flush with each other, use the special tool to loosen the door hinge mounting bolts on the door. Then align the door.

Caution

Do not load more than 98 Nm on the special tool.

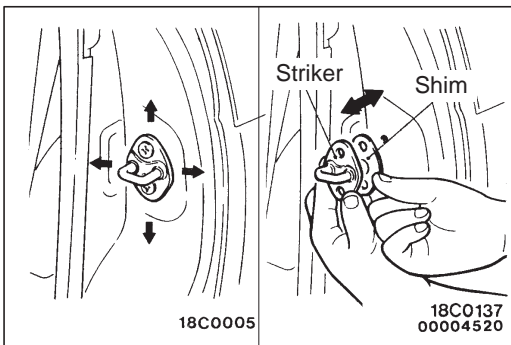


3. If the door opening and closing is heavy, adjust the meshing of the striker and the door latch (forward and backward) by adding shims to the striker and by moving the striker up and down or to the left and right.

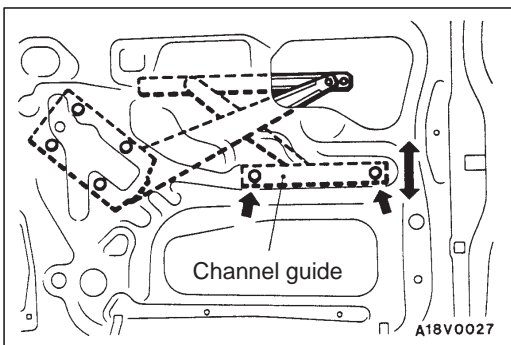

DOOR WINDOW GLASS ADJUSTMENT

Check that the door glass moves securely along the door glass runchannel when the window glass is fully raised and fully lowered. If the glass does not move correctly, adjust as follows:

1. Remove the door trim and the waterproof film. (Refer to P.42-23.)
2. Close the door window glass. Loosen the channel guide mounting bolts, and then adjust the inclination of glass.

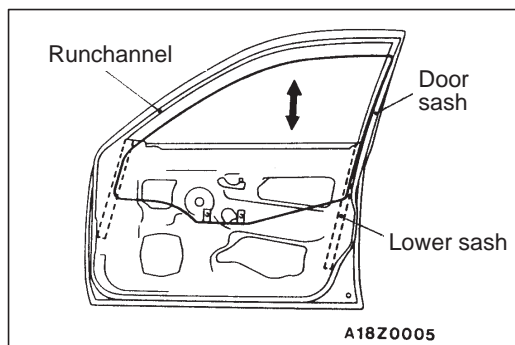

DEFECTIVE POWER WINDOW ADJUSTMENT AND REPLACEMENT

If the window glass wrongly, automatically lowers while being raised, adjust or replace as follows:

1. Remove the door trim and the waterproof film. (Refer to P.42-23.)
2. Remove the window regulator assembly from the door window glass, and then raise and lower the door window glass by hand to check the operation force.

NOTE


Insert soft stuff like cushion to prevent damage to the glass if it falls down.

3. If the door window glass does not move up and down smoothly, do as follows:
 - Check the installation condition of the runchannel.
 - Straighten twist in the door sash.
 - Check the installation condition of the lower sash or the center sash.

NOTE


The lower sash cannot normally be adjusted, but it may be possible to adjust the sash span slightly within the range allowed by manufacturing tolerances by pushing the lower sash outwards while re-installing it.

4. If repair or adjustment is impossible, replace the door assembly.

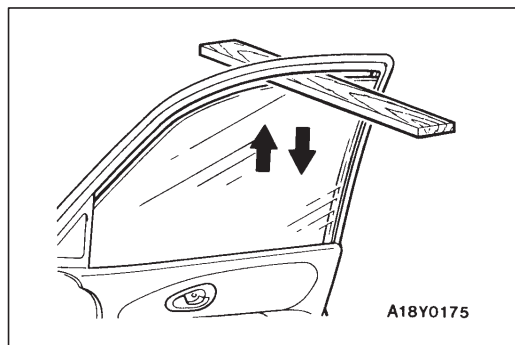


POWER WINDOW SAFETY MECHANISM CHECK

1. Place a wooden board about 10 mm thick as shown. Then, raise the window glass.
2. Check that the window lowers by about 150 mm when the window clamps the board. If this doesn't happen, do troubleshooting. (Refer to GROUP 54B.)

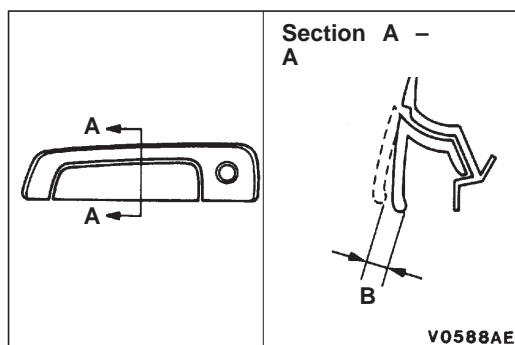

DOOR OUTSIDE HANDLE PLAY CHECK

1. Measure the door outside handle play.
Standard value (B): 3.7 mm or more
2. If the play is not within the standard value, check the door outside handle or the door latch assembly. Replace, if necessary.

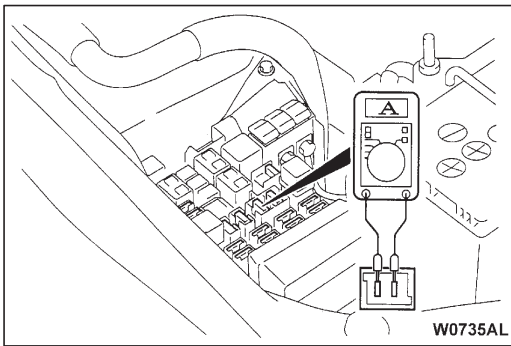

POWER WINDOW OPERATION CURRENT CHECK

1. Remove the power window fuse and connect a circuit tester as shown.
2. Measure the operation current. When the power window switch is turned to UP, much current flows at the beginning and end of the operation. So, measure the operation current in between these points.


Standard value:

5.3 ± 2 A (power supply voltage 14.5 ± 0.3 V at 23°C)

3. If the operation current is not within the standard value, do troubleshooting. (Refer to GROUP 54B.)

CIRCUIT BREAKER (INCORPORATED IN POWER WINDOW MOTOR) CHECK

1. Turn the power window switch to UP to close the window glass. Keep the switch at the fully-closed position for another 10 seconds.
2. Release the power window switch and immediately turn it to DOWN. Under this condition if the window glass starts to lower within 60 seconds, the circuit breaker can be judged good.

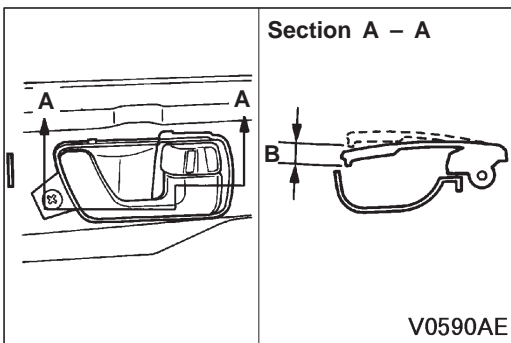



DOOR INSIDE HANDLE PLAY CHECK AND ADJUSTMENT

1. Measure the door inside handle play.
Standard value (B): 5.3 mm or more
2. If the play is not within the standard value, remove the door trim. (Refer to P.42-23.)
3. Adjust the door inside handle play with the clip connecting the inside handle and the rod.

DOOR ASSEMBLY

REMOVAL AND INSTALLATION

Post-installation Operation
 Door Fit Adjustment (Refer to P.42-19.)

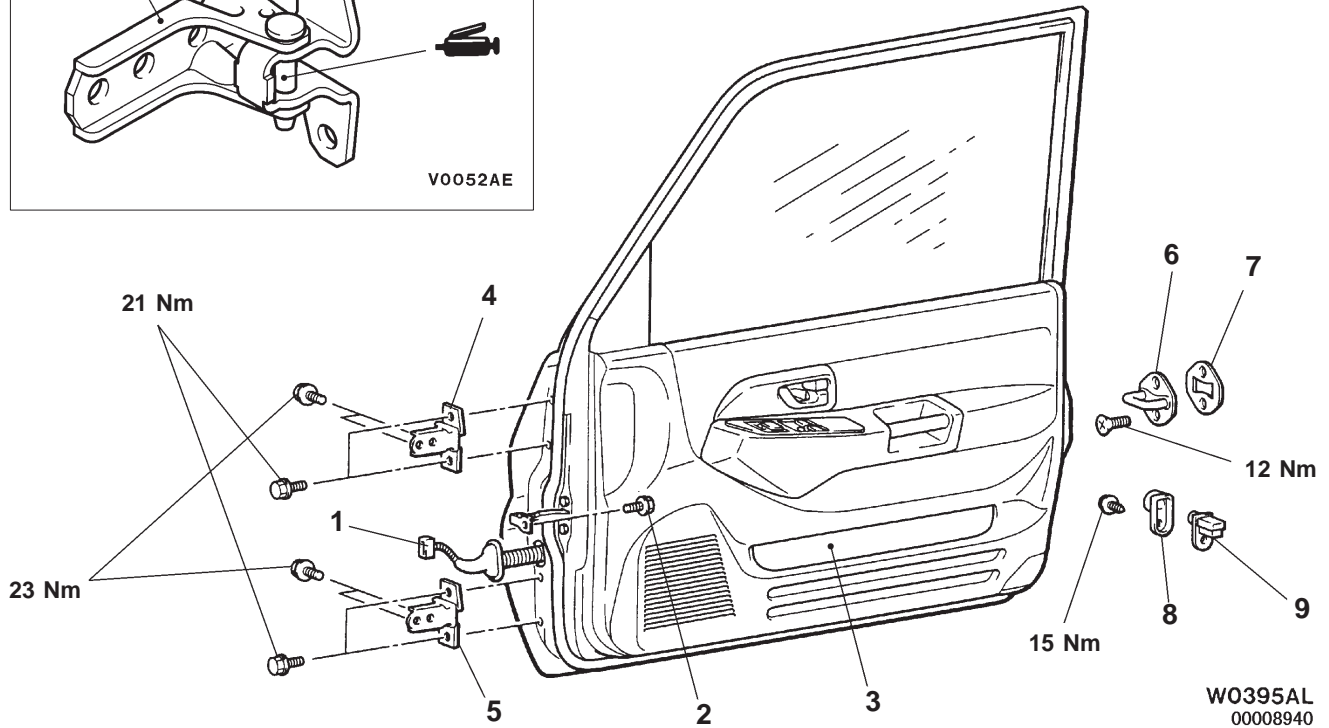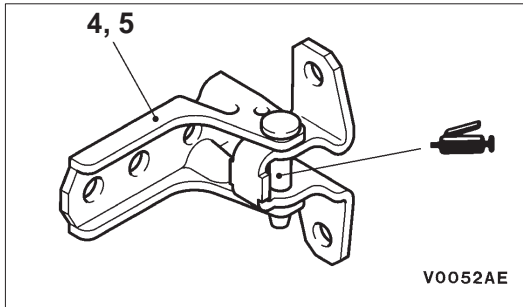

Door assembly removal steps


1. Harness connector
2. Door check connecting bolt
3. Door assembly
4. Door upper hinge
5. Door lower hinge

Striker removal steps

6. Striker
7. Striker shim

Door switch removal steps

8. Door switch cap
9. Door switch

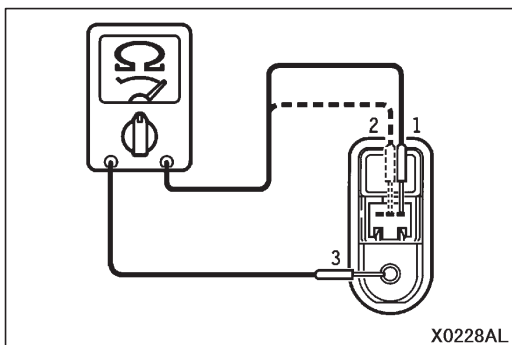


INSPECTION

DOOR SWITCH CONTINUITY CHECK

Driver's side


Switch position	Terminal number		
	1	2	3 (Earth)
Released (ON)	○	○	○
Depressed (OFF)			

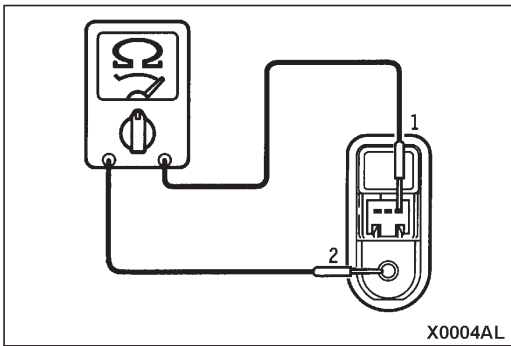

Passenger's side

Switch position	Terminal number	
	1	2 (Earth)
Released (ON)	○	○
Depressed (OFF)		

**DOOR TRIM AND WATERPROOF FILM
REMOVAL AND INSTALLATION**

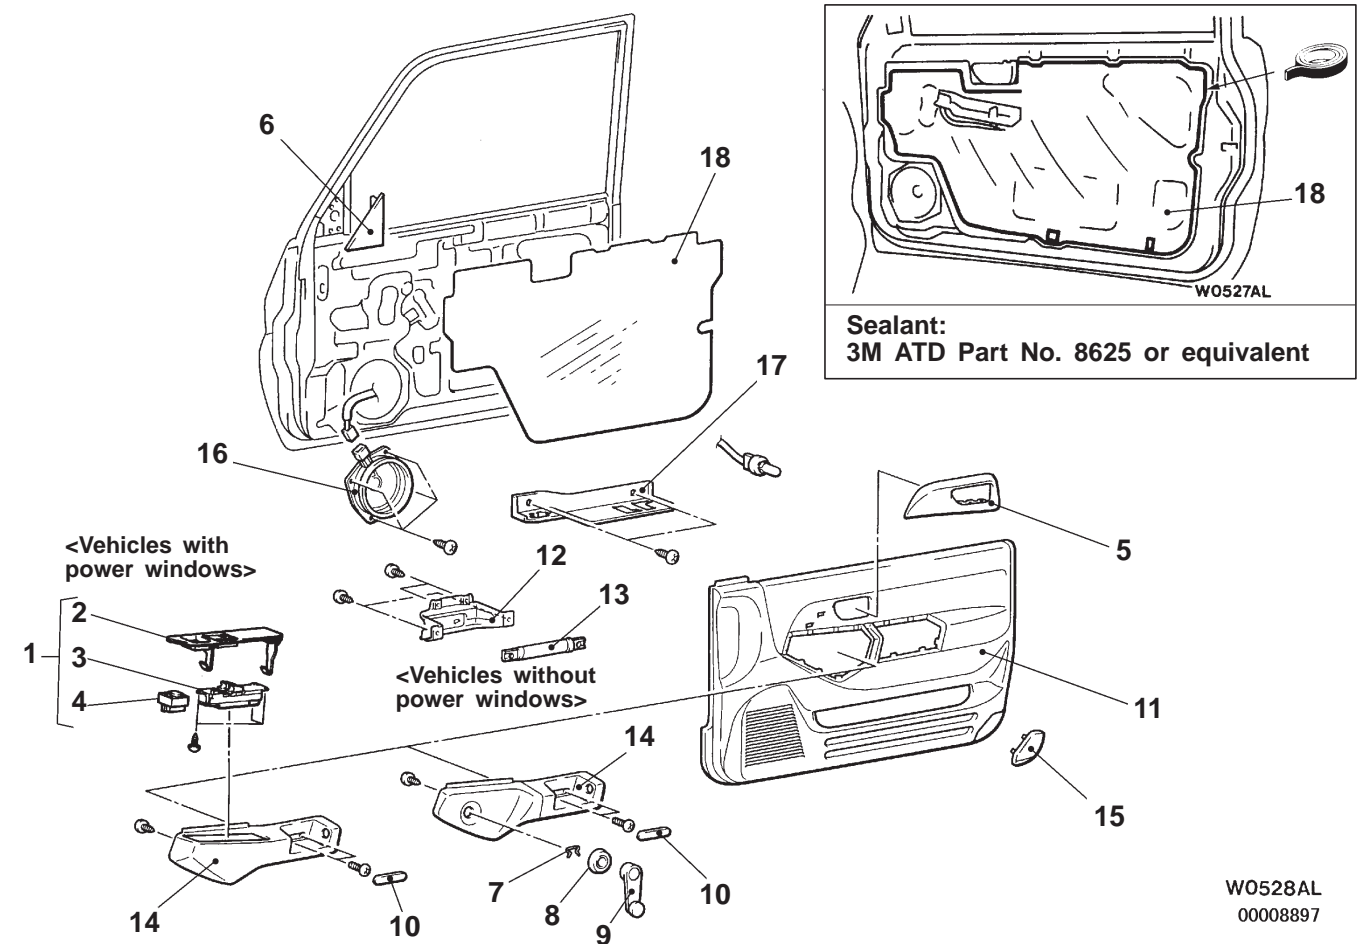


Sealant:
3M ATD Part No. 8625 or equivalent

W0528AL
00008897


Removal steps

- ◀A▶ 1. Power window and remote-controlled mirror switch assembly
- 2. Power window switch panel assembly
- 3. Power window switch
- 4. Remote-controlled mirror switch
- ▶B▶ 5. Door inside handle cover
- ▶B▶ 6. Delta cover, inner
- ▶B▶ 7. Clip
- ▶B▶ 8. Escutcheon
- ▶B▶ 9. Regulator handle
- 10. Cap
- 11. Door trim
- 12. Grip bracket
- 13. Door grip
- 14. Front arm restraint cover
- 15. Door lamp lense
- 16. Speaker
- ▶A▶ 17. Power window switch bracket
- ▶A▶ 18. Waterproof film

CLIP AND CLAW POSITIONS

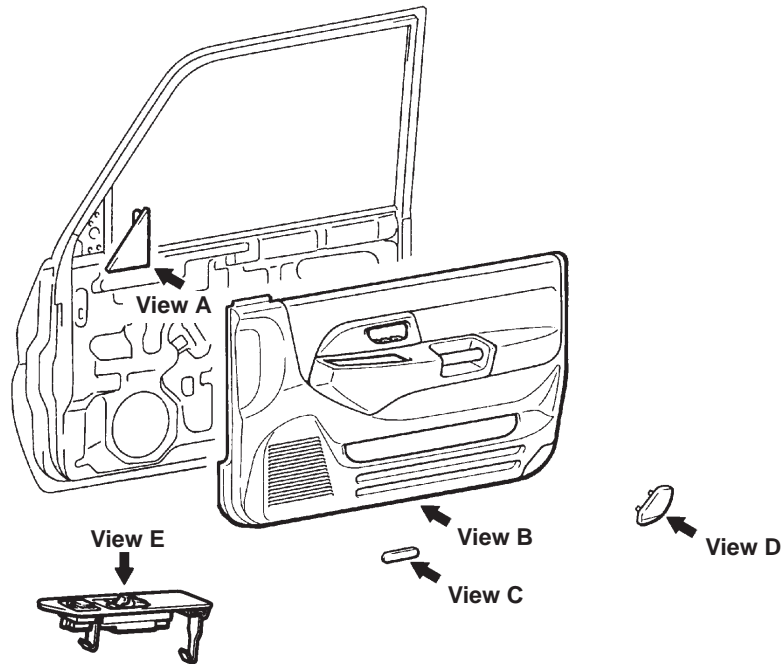






W0529AL
00008898

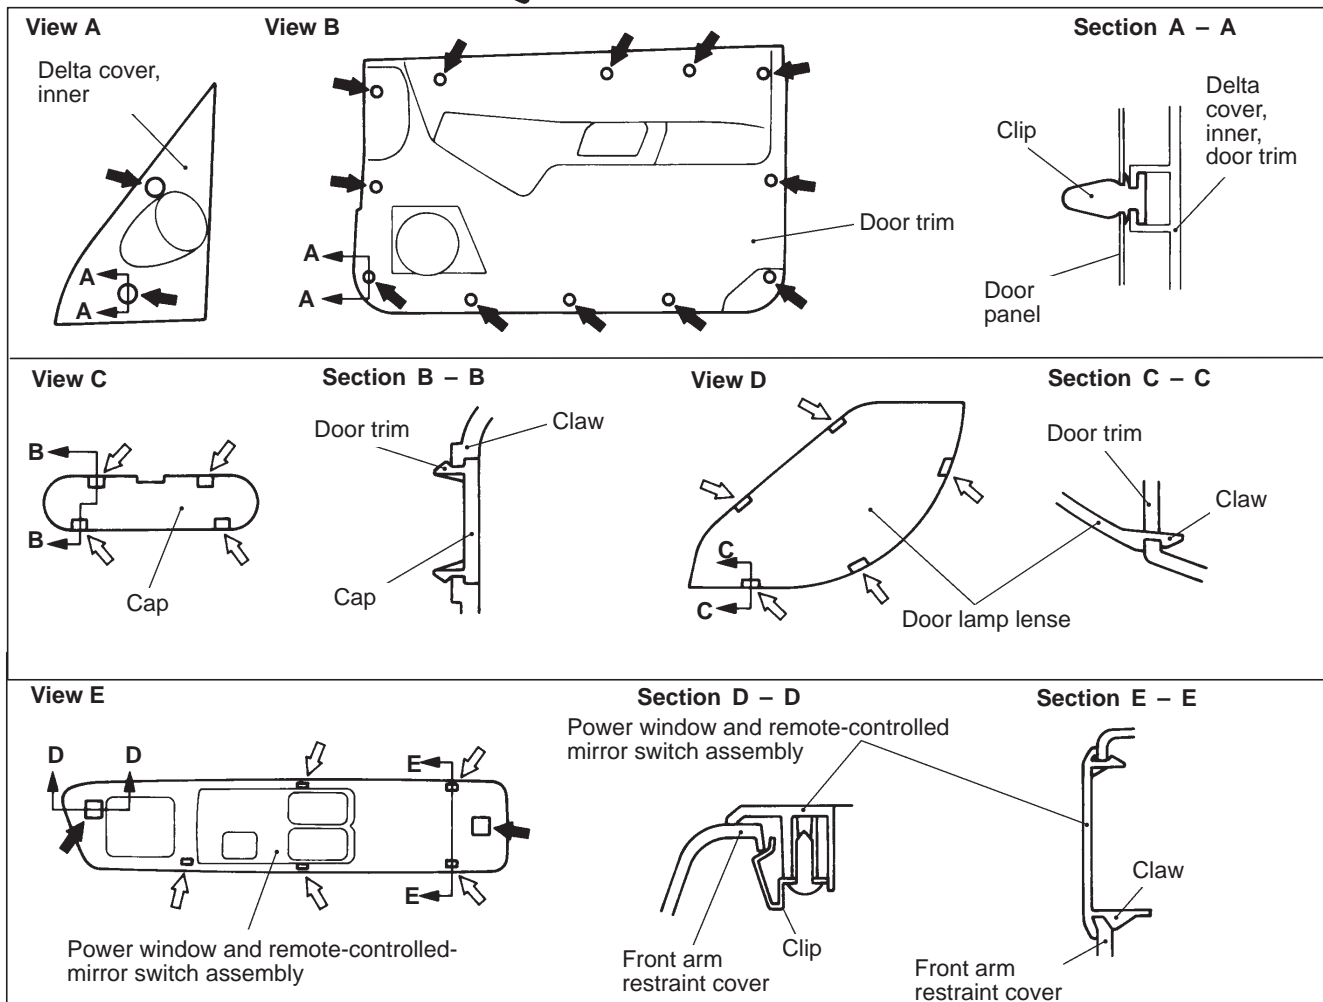

NOTE

- ➡ : Clips positions
- ↔ : Claws positions

W0530AL

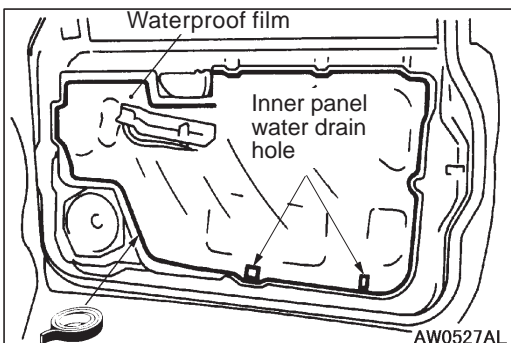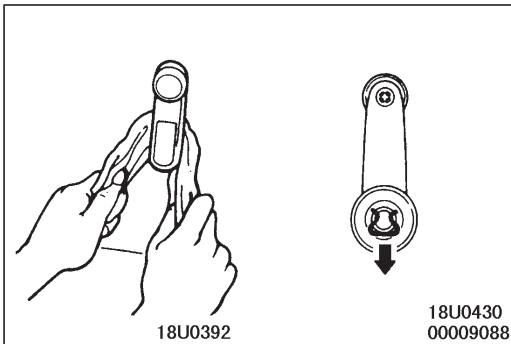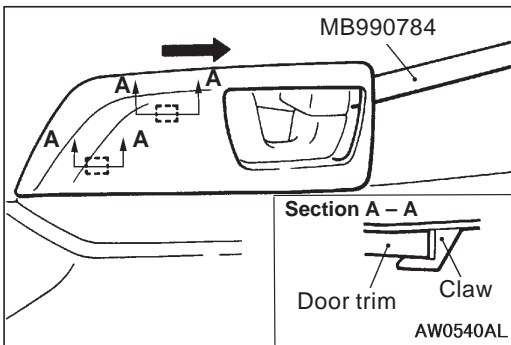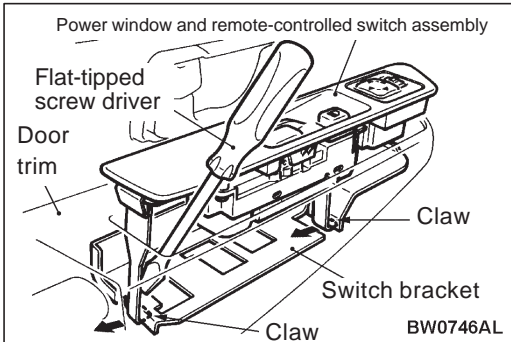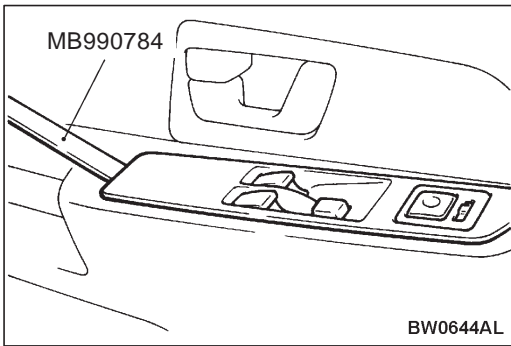

REMOVAL SERVICE POINTS

◀A▶ POWER WINDOW AND REMOTE-CONTROLLED MIRROR SWITCH ASSEMBLY/POWER WINDOW SWITCH PANEL ASSEMBLY REMOVAL

1. Use the special tool to pry out the power window and remote-controlled mirror switch assembly, first at the front and then at the rear. (Refer to P.42-24, CLAW AND CLIP POSITIONS.)
2. Use a flat-tipped screwdriver to disengage the lower claws of the power window and remote-controlled mirror switch assembly as shown in the illustration, and then remove the power window and remote-controlled mirror switch assembly.

◀B▶ DOOR INSIDE HANDLE COVER REMOVAL

Use the special tool to pry out the rear part of door inside handle cover, and then slide the door inside handle cover in the direction of arrow shown to remove it.

◀C▶ CLIP REMOVAL

Use a cloth to remove the clip as shown in the illustration.

INSTALLATION SERVICE POINTS


▶A◀ WATERPROOF FILM INSTALLATION

Apply the specified sealant to the shown positions of waterproof film, and then attach the waterproof film.

Specified sealant: 3M ATD Part No. 8625 or equivalent

Caution

Be sure to apply the sealant below the inner panel water drain holes so as not to plug them.

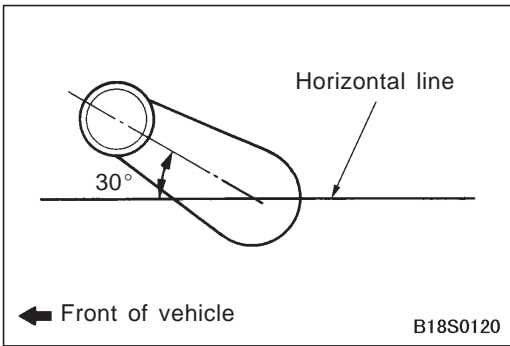

►B◀ REGULATOR HANDLE/ESCUTCHEON/CLIP INSTALLATION

1. Install the clip and escutcheon to the regulator handle.
2. Close the front door window glass fully, and then install the regulator handle as shown in the illustration.



DOOR GLASS AND REGULATOR REMOVAL AND INSTALLATION

Pre-removal Operation

- Door Mirror Removal (Refer to GROUP 51.)
- Door Trim and Waterproof Film Removal (Refer to P.42-23.)

Post-installation Operation

- Door Window Glass Adjustment (Refer to P.42-19.)
- Door Trim and Waterproof Film Installation (Refer to P.42-23.)
- Door Mirror Installation (Refer to GROUP 51.)

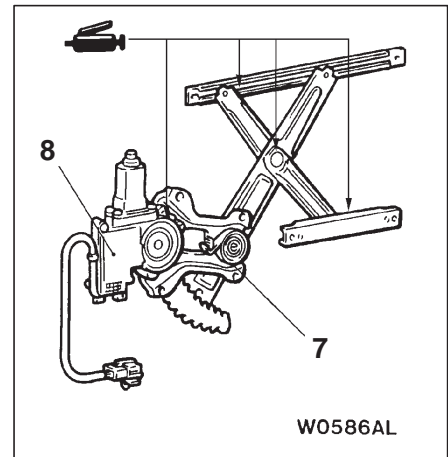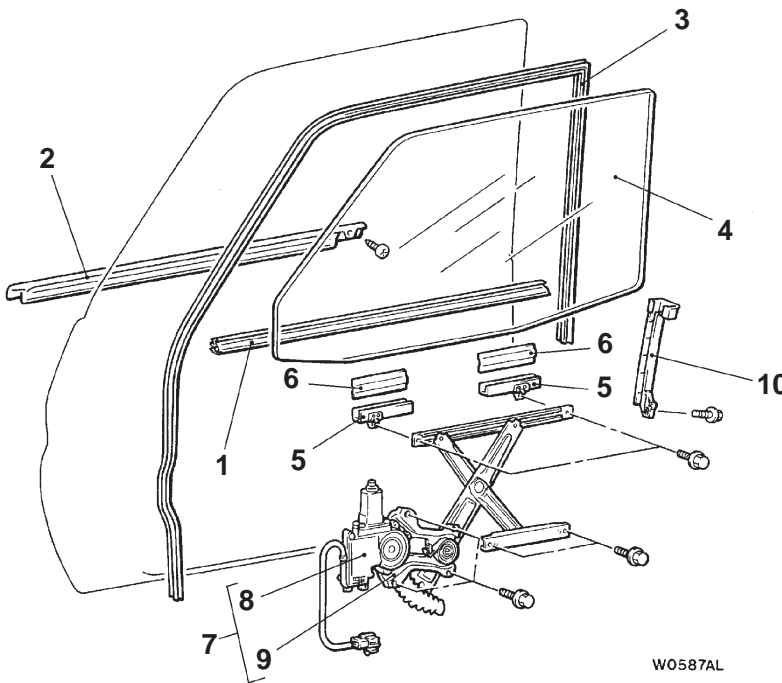


►D◀ Door window glass removal steps

- limit switch set-up
- 1. Door window inner weather strip
- 2. Door belt line moulding assembly
- 3. Door window glass runchannel
- C◀ 4. Door window glass
- C◀ 5. Glass holder
- C◀ 6. Door glass pad

◀A►

Power window regulator and motor assembly removal steps

- 7. Power window regulator and motor assembly
- B◀ 8. Power window motor assembly
- B◀ 9. Power window regulator assembly
- A◀ 10. Rear lower sash

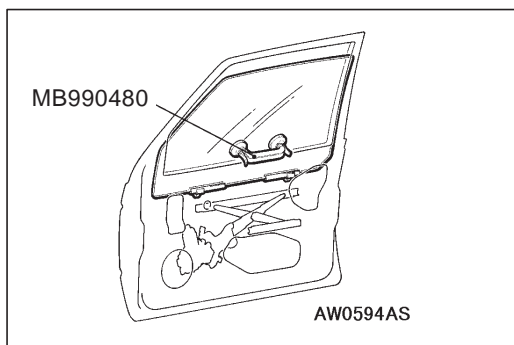

REMOVAL SERVICE POINT

◀A▶ POWER WINDOW REGULATOR AND MOTOR ASSEMBLY REMOVAL

1. Remove the door window glass assembly installation bolts.
2. Lift up the door window glass assembly, and then install the special tool to the window glass as shown in the illustration to prevent the window glass falling.

Caution


If a film, etc. is attached to the door window glass, install the special tool to the outside of window glass in order to prevent the film peeling.

3. Remove the power window regulator and motor assembly.

INSTALLATION SERVICE POINTS

▶A◀ REAR LOWER SASH INSTALLATION

Be sure to insert the rear lower sash to the window rear sash (at door) securely.

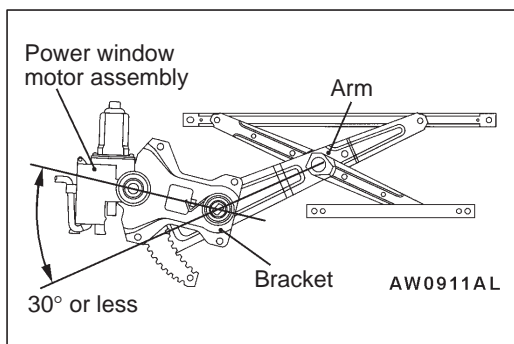


▶B◀ POWER WINDOW MOTOR ASSEMBLY/POWER WINDOW REGULATOR ASSEMBLY INSTALLATION

Adjust the power window motor assembly and power window regulator assembly positions as follows:

1. Connect the power window motor assembly connector and the power window switch connector to the wiring harness of body side.
2. Turn on the power window switch to operate the power window motor for 3 seconds in the direction which the window glass closes.
3. Disconnect the power window motor assembly connector and the power window switch connector from the wiring harness of body side.
4. Assemble the power window motor assembly and the power window regulator so that the arm and bracket are positioned as shown in the illustration, and then install the power window motor assembly.

Caution

When installing the power window regulator, do not set it in the window glass fully-closed position. If installing the power window regulator in that condition, the window glass safety mechanism will not function correctly.

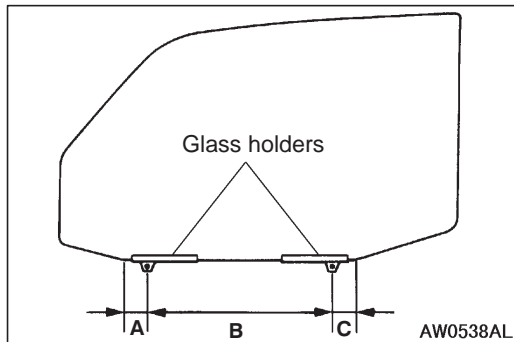

►C◄ DOOR WINDOW GLASS/GLASS HOLDER/DOOR GLASS PAD INSTALLATION

1. Install the door glass pads and glass holders to the window glass in the positions shown.

Standard value (A): 55.0 mm

Standard value (B): 419.0 – 421.0 mm

Standard value (C): 55.0 mm

2. Install the glass to the window regulator assembly.

Caution

Do not activate the window regulator assemble before installing the glass as the resetting in the limit switch is cancelled.

►D◄ LIMIT SWITCH SETTING

1. Fully close the window glass.

NOTE

The limit switch learning operation is complete once the window glass is fully closed.


2. Check that the limit switch operates normally. (Refer to P.42-20.)

INSPECTION

POWER WINDOW MAIN SWITCH CONTINUITY CHECK


NOTE

Since the power window main switch uses the SWS system, check the continuity with the input signal check method. Refer to GROUP 54B – Troubleshooting.

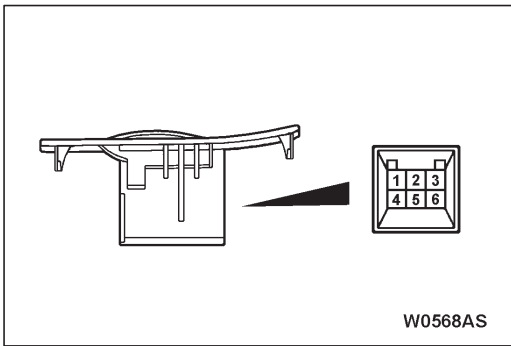

POWER WINDOW SUB SWITCH CONTINUITY CHECK

Switch position	Terminal No.		
	1	4	6
UP		○ — ○	○ — ○
DOWN	○ — ○	○ — ○	

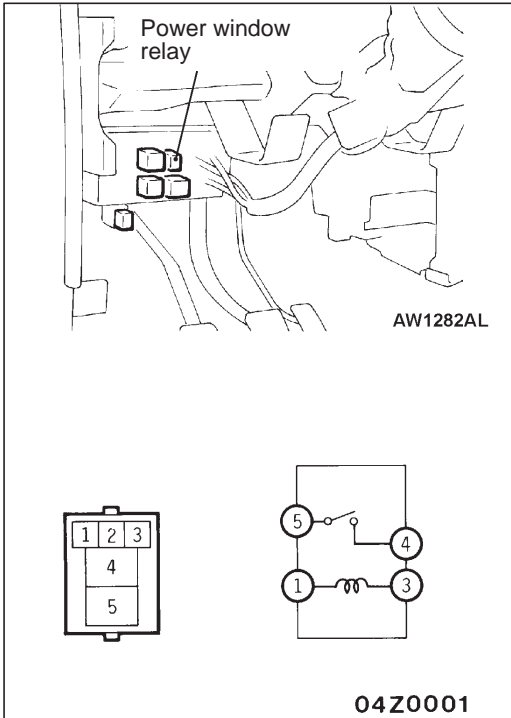

POWER WINDOW RELAY CONTINUITY CHECK

Battery voltage	Terminal No.			
	1	3	4	5
Not applied	○ — ○	○ — ○		
Applied	⊕ — ⊖	⊖ — ⊕	○ — ○	○ — ○

DOOR HANDLE AND LATCH


REMOVAL AND INSTALLATION

Pre-removal Operation

Door Trim Removal (Refer to P.42-23.)

Post-installation Operation

- Door Inside Handle Play Check (Refer to P.42-21.)
- Door Outside Handle Play Check (Refer to P.42-20.)
- Door Trim Installation (Refer to P.42-23.)

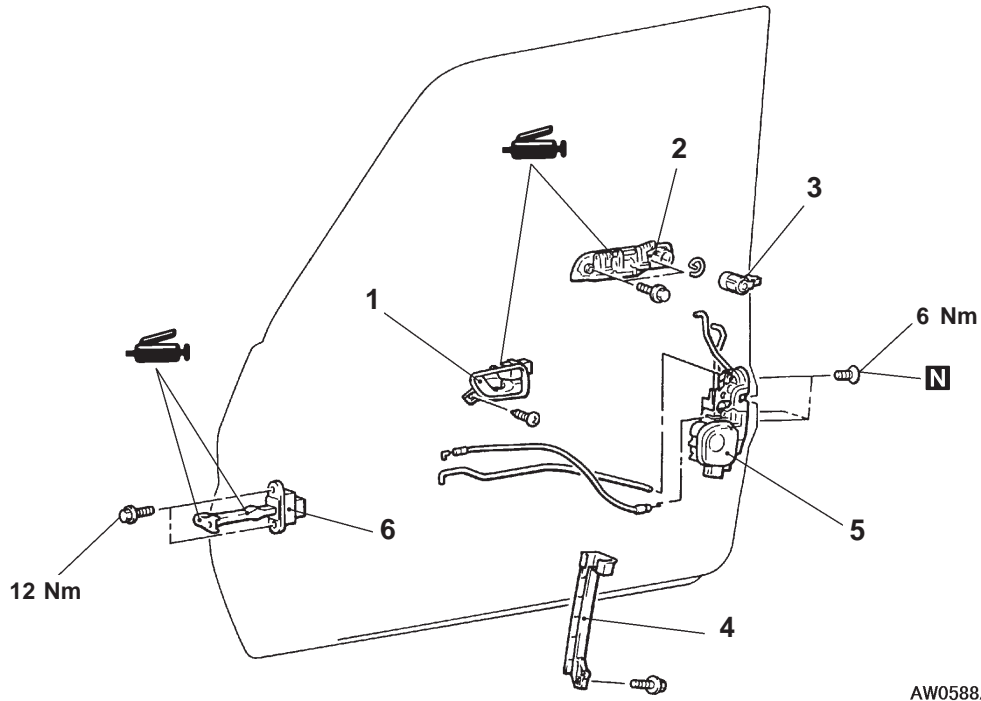


Door handle and door latch assembly removal steps

- ▶C◀ 1. Door inside handle
 - Waterproof film (Refer to P.42-23.)
- ▶B◀ 2. Door outside handle
- ▶B◀ 3. Door lock key cylinder
- ▶B◀ 4. Rear lower sash
- ▶B◀ 5. Door latch assembly

Door check removal steps

- ▶A◀ ● Waterproof film (Refer to P.42-23.)
- ▶A◀ 6. Door check

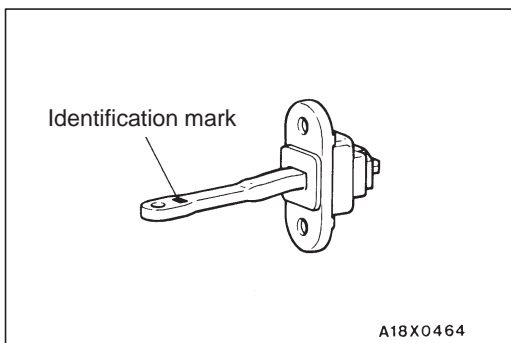

INSTALLATION SERVICE POINTS


▶A◀ DOOR CHECK INSTALLATION

Install with the following identification marks upward.

Items	Identification mark
Left door	21L
Right door	21R


►B◄ REAR LOWER SASH INSTALLATION

Be sure to install the rear lower sash to the window rear sash (at door) securely.

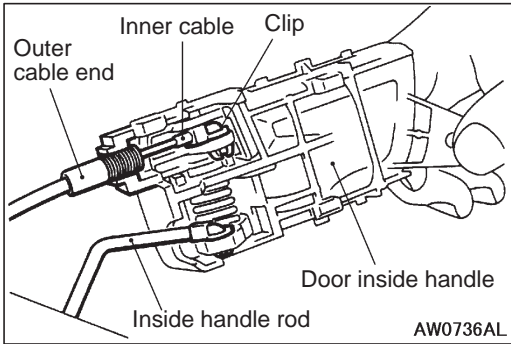

►C◄ DOOR INSIDE HANDLE INSTALLATION

1. Install the inside lock cable to the door inside handle as follows:
 - (1) Install the inner cable end in the inside lock cable to the clip in the door inside handle.
 - (2) Turn the inside lock knob to the door lock position.
 - (3) Install the outer cable end to the door inside handle securely.
 - (4) Install the clip to the inner cable.
2. Install the inside handle rod to the door inside handle.
3. Install the door inside handle to the door.

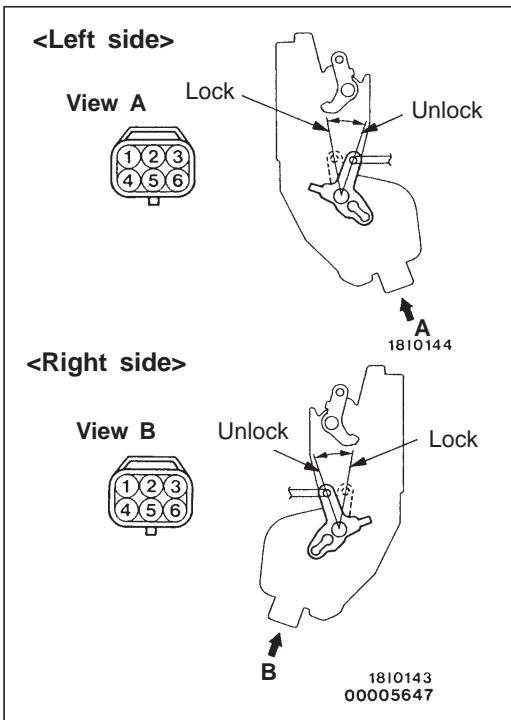

INSPECTION


DOOR LOCK ACTUATOR CHECK

<Left side>

Rod position	Terminal No.		Rod operation
	4	6	
LOCK	⊖	⊕	LOCK to UNLOCK
UNLOCK	⊕	⊖	UNLOCK to LOCK

<Right side>

Rod position	Terminal No.					Rod operation
	1	2	3	4	6	
LOCK				⊖	⊕	LOCK to UNLOCK
UNLOCK				⊕	⊖	UNLOCK to LOCK
LOCK	○		○			
UNLOCK		○	○			

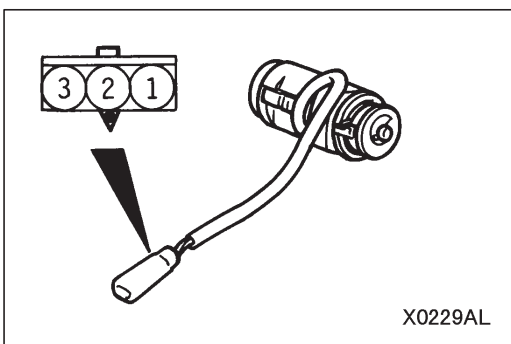



DOOR LOCK KEY CYLINDER SWITCH CONTINUITY CHECK <Vehicles with central door locking system>

Passenger's side only

Switch position	Terminal No.		
	1	2	3
LOCK	○	○	
Neutral (OFF)			
UNLOCK		○	○

WINDOW GLASS RUNCHANNEL AND DOOR OPENING WEATHERSTRIP

REMOVAL AND INSTALLATION

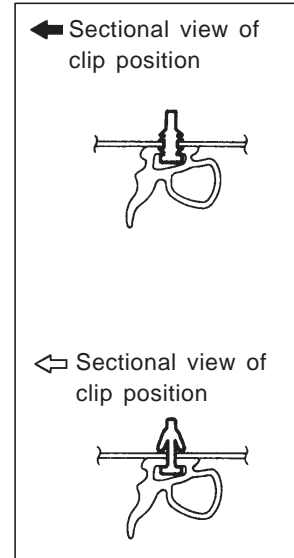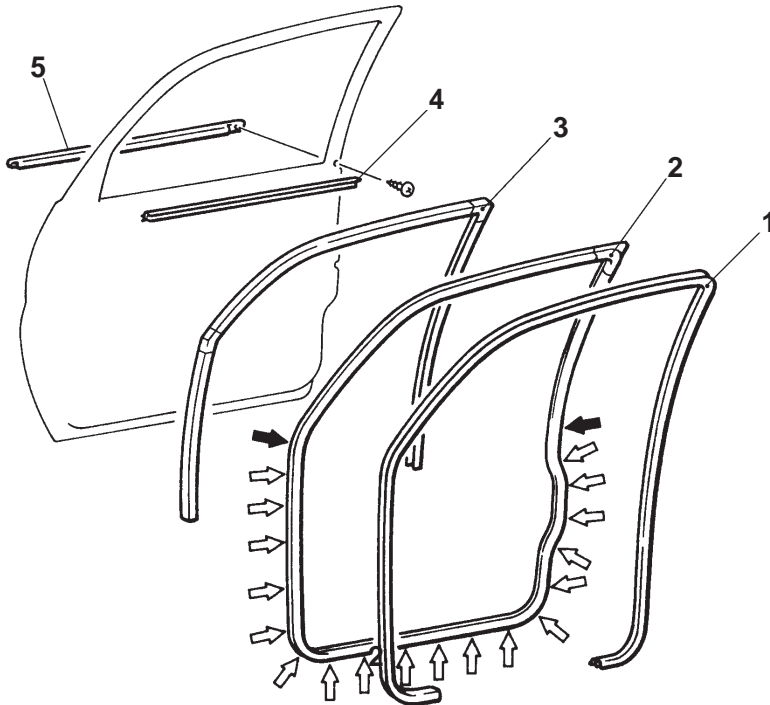

AW0594AL

Door inner opening weatherstrip removal steps

- Scuff plate (Refer to GROUP 52A.)
 - Cowl side trim (Refer to GROUP 52A.)
 - Center pillar lower trim (Refer to GROUP 52A.)
1. Door inner opening weatherstrip

Door outer opening weatherstrip removal


2. Door outer opening weatherstrip

Door window glass runchannel removal steps

3. Door window glass runchannel
4. Door window glass lower runchannel

Door beltline moulding removal steps

- Outside rear view mirror (Refer to GROUP 51.)
- 5. Door beltline moulding

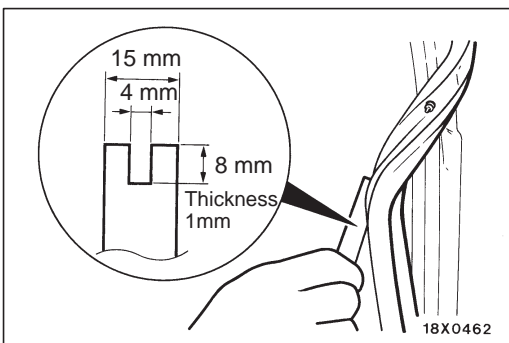

REMOVAL SERVICE POINT

◀A▶ DOOR OUTER OPENING WEATHERSTRIP REMOVAL

Make a tool as shown and remove the door opening weatherstrip.

BACK DOOR


SERVICE SPECIFICATION

Item	Standard value
Back door handle play mm	2.0 – 8.0

SEALANT


Item	Specified sealant	Remark
Waterproof film	3M ATD Part No. 8625 or equivalent	Ribbon sealer

SPECIAL TOOL

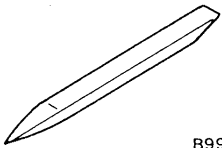Tool	Number	Name	Use
 B990784	MB990784	Ornament remover	Back door trim removal

TROUBLESHOOTING


The central door locking (back door) is controlled by the Smart Wiring System (SWS). For troubleshooting, refer to GROUP 54B – Troubleshooting.

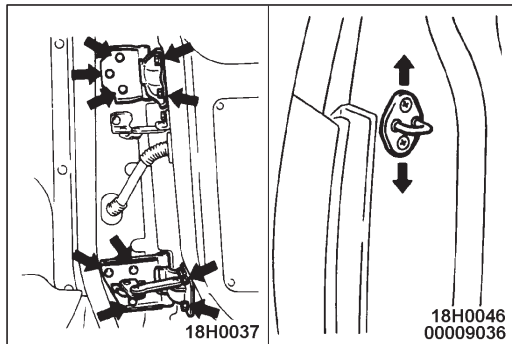

ON-VEHICLE SERVICE

BACK DOOR FIT ADJUSTMENT

1. If the striker and latch mesh badly, move the striker forward and backward or right and left to adjust.
2. If uneven clearance is present between back door and body, reposition the hinge and striker and/or change the thickness of shim (change the number of shim) to adjust the clearance.

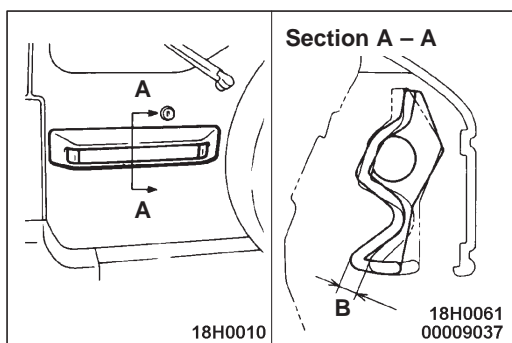

BACK DOOR HANDLE PLAY CHECK

1. Measure the back door handle play.
Standard value (B): 2.0 – 8.0 mm
2. If the back door handle play is not within the standard value, check the back door handle and door latch assembly. Replace if necessary.

BACK DOOR ASSEMBLY


REMOVAL AND INSTALLATION

Pre-removal Operation


- High-mounted Stop Lamp Removal (Refer to GROUP 54A.)
- Spare Tyre Carrier Removal (Refer to GROUP 51.)

Post-installation Operation

- High-mounted Stop Lamp Installation (Refer to GROUP 54A.)
- Spare Tyre Carrier Installation (Refer to GROUP 51.)
- Back Door Fit Adjustment (Refer to P.42-33.)

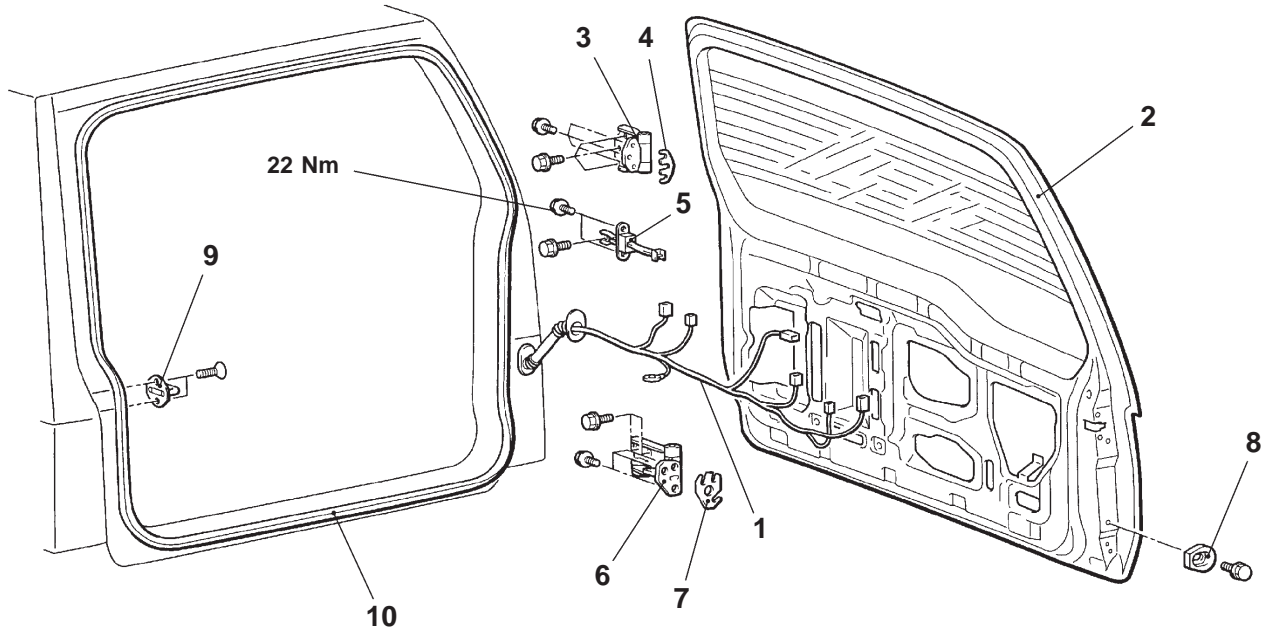

W0531AL
00008941

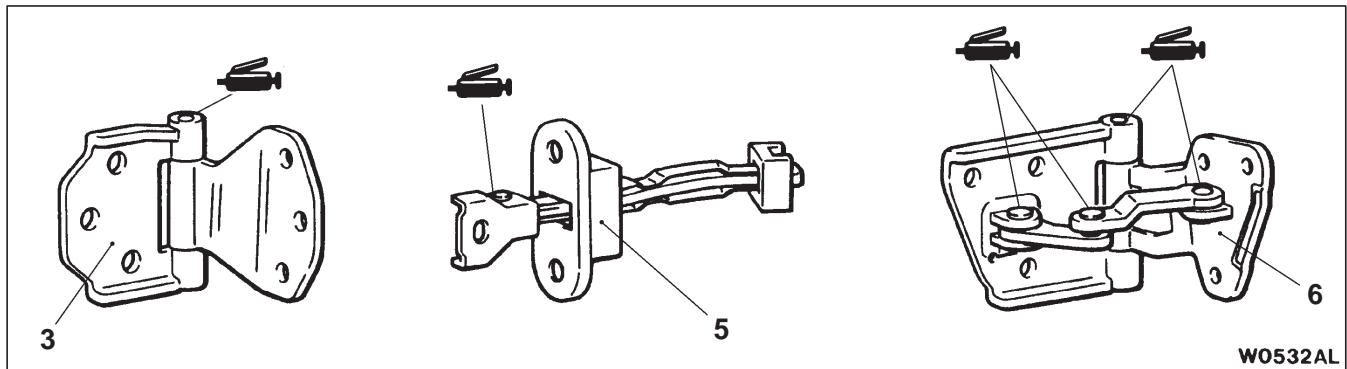

W0532AL

Removal steps


- Back door trim and waterproof film (Refer to P.42-36.)
- 1. Harness connector
- 2. Back door assembly
- 3. Back door upper hinge
- 4. Shim

- 5. Door check
- 6. Back door lower hinge
- 7. Shim
- 8. Damper mail
- 9. Striker
- 10. Back door opening weatherstrip




INSTALLATION SERVICE POINT**►A◄ BACK DOOR OPENING WEATHERSTRIP
INSTALLATION**

Align the marking section on the back door opening weatherstrip with the centre of the body.

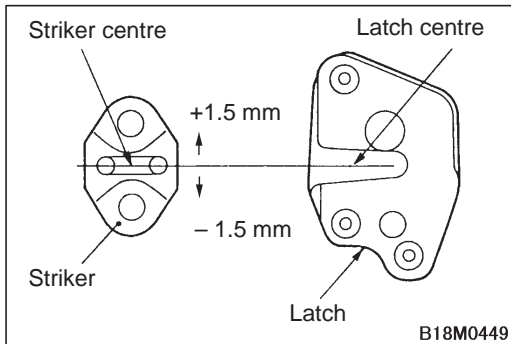**►B◄ STRIKER INSTALLATION**

Install the striker so that the striker centre does not deviate more than ± 1.5 mm from the latch centre.

BACK DOOR TRIM AND WATERPROOF FILM REMOVAL AND INSTALLATION

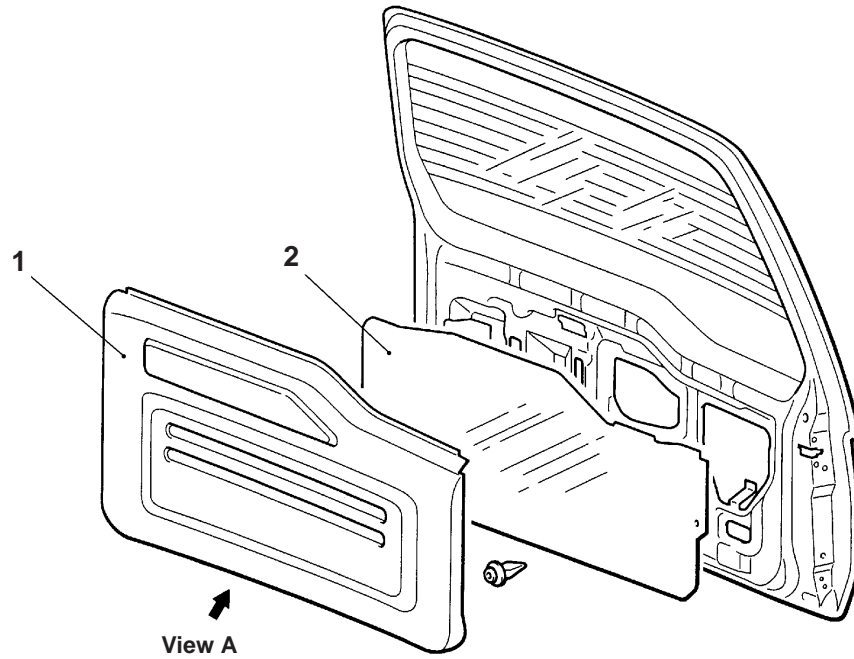

View A




W0533AL
00008942

<p>View A</p> <p>← : Clip positions</p> <p>1</p> <p>W0534AL</p>	<p>Section A – A</p> <p>Clip</p> <p>1</p> <p>Door panel</p> <p>V0630AE</p>	<p>1</p> <p>W0535AL</p> <p>Sealant: 3M ATD Part No. 8625 or equivalent</p>
--	---	---

- Removal steps**
1. Back door trim
 2. Waterproof film

BACK DOOR HANDLE AND LATCH REMOVAL AND INSTALLATION

Post-installation Operation
Back Door Handle Play Check (Refer to P.42-33.)

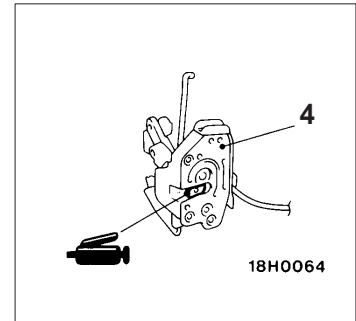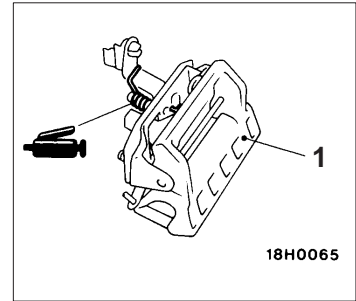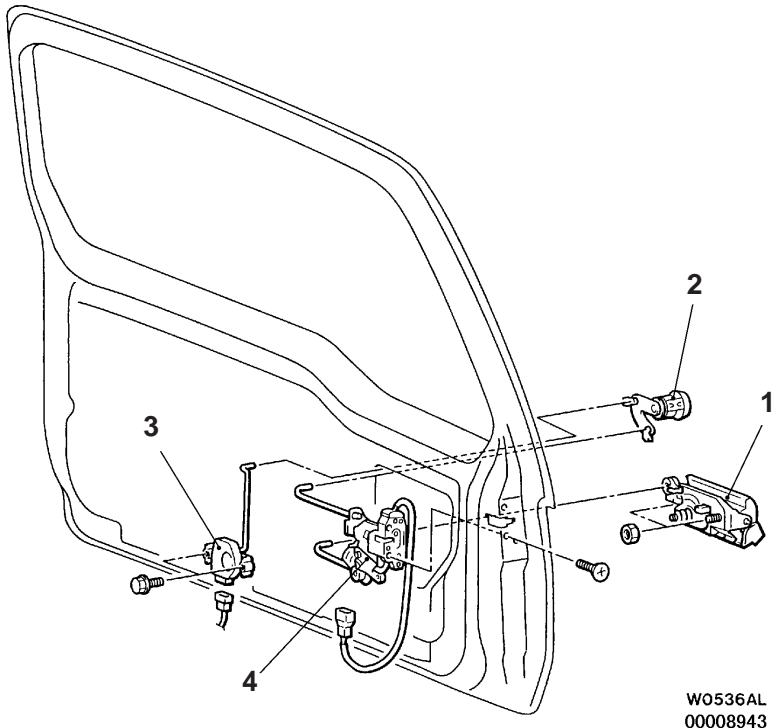


Back door handle and lock key cylinder removal steps

- Back door trim and waterproof film (Refer to P.42-36.)
- 1. Back door handle
- 2. Back door lock key cylinder

Back door latch removal steps


- Back door trim and waterproof film (Refer to P.42-36.)
- 3. Back door lock actuator
- 4. Back door latch assembly

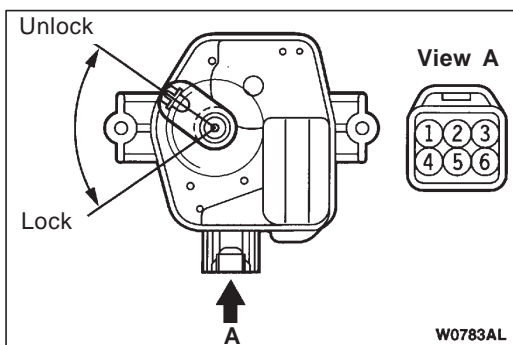

INSPECTION


BACK DOOR LOCK ACTUATOR CHECK

Rod position	Terminal No.		Rod operation
	4	6	
LOCK	⊕	⊖	LOCK to UNLOCK
UNLOCK	⊖	⊕	UNLOCK to LOCK

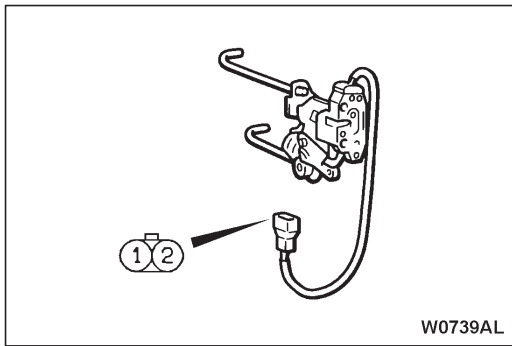

BACK DOOR LATCH CONTINUITY CHECK

Switch position	Terminal No.	
	4	6
Back door open		
Back door closed	○	○

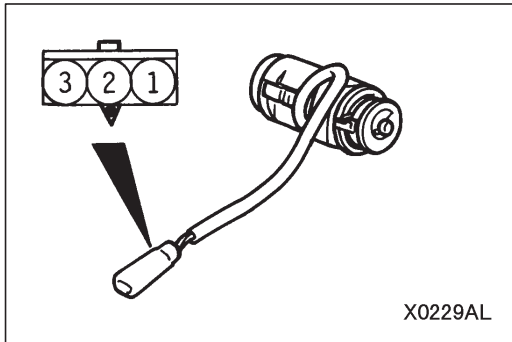


DOOR LOCK KEY CYLINDER SWITCH CONTINUITY CHECK <Vehicles with central door locking system>

Switch position	Terminal No.		
	1	2	3
LOCK	○	○	
Neutral (OFF)			
UNLOCK		○	○

KEYLESS ENTRY SYSTEM

TROUBLESHOOTING

The keyless entry system is controlled by the Smart Wiring System (SWS). For troubleshooting, refer to GROUP 54B – Troubleshooting.

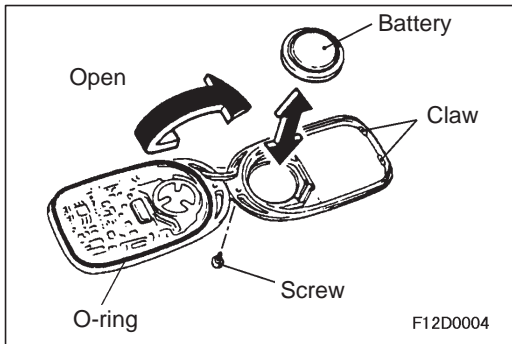

ON-VEHICLE SERVICE

HOW TO REPLACE A BATTERY OF THE TRANSMITTER

1. Remove the set screw to remove the battery from the transmitter.
2. Install a battery with its (+) side face-down.

**Battery required for replacement:
Coin type battery CR2032**

3. Insert the claw first, and with care not to displace the O-ring, assemble the transmitter.
4. Check to see if the keyless entry system operates.

NOTE

- (1) Do not let water or dust stick to the inside of the transmitter when it is open. Also, do not touch the precision electronic device.
- (2) If the O-ring is displaced during the assembly of the transmitter, water or dust penetrates in it causing trouble.

ENCRYPTED CODE REGISTRATION METHOD

Each individual encrypted code is registered inside the transmitter, and so it is necessary to register these codes with the EEPROM inside the ETACS-ECU in the following cases.

- When either the transmitter or ETACS-ECU is replaced;
- If a second transmitter is to be used;
- If it appears that a problem is occurring because of faulty registration of a code.

A maximum of four different codes can be stored in the memory area of the EEPROM (four different transmitters can be used). When the code for the first transmitter is registered, the previously-registered codes for four transmitters are cleared. Therefore, if you are using more than two transmitters or are adding a second transmitter, the codes for all the transmitters must be registered at the same time.


1. Check that the doors lock normally when the ignition key is inserted into the door key cylinder and turned.
2. Insert the ignition key in the ignition switch.
3. Connect the MUT-II to the diagnosis connector.

NOTE

This sets the system in encrypted code registration standby mode. If MUT-II is not used, connect terminal No.1 of the diagnosis connector to earth.

Caution

Always turn the ignition switch to LOCK (OFF) position before connecting and disconnecting the MUT-II or earth.

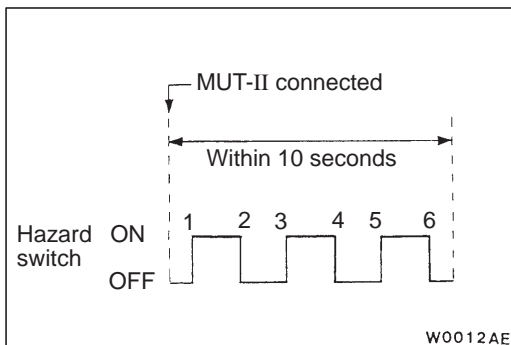

4. Within 10 seconds after connecting the MUT-II or earth, press the hazard switch six times.

NOTE

- (1) The doors will lock and unlock once after pressing the hazard switch six times, and the system will switch to registration mode.
- (2) The hazard switch alternates between ON and OFF each time pressing the hazard switch (Refer to illustration).

5. Press the lock switch or unlock switch of the transmitter switch, and then press it two times within 10 seconds of the first press. This will register the code.
6. After registration is completed, the doors will be automatically locked and unlocked once.
7. If you are using more than two transmitters or have added a second transmitter, the same registration procedure should be carried out for the remaining transmitters, and it should be carried out within one minute after registration of the code for the first transmitter has been completed. The registration procedure are all the same for all transmitters.

8. Registration mode will be terminated under the following conditions.
 - When the encrypted codes for four transmitters have been registered;
 - When one minute has passed after registration mode started;
 - When the MUT-II is disconnected (earth is released);
 - When the ignition key is removed;
9. After registration mode has been completed, carry out the followings to make sure that the keyless entry system operates.
 - Pull the ignition key out.
 - Close all of the doors.

HAZARD LAMP ANSWERBACK ADJUSTMENT

The following functions can be adjusted by operating input switches. The adjustments will be stored in the ECU memory even after a battery cable is disconnected:

- Switching of keyless entry answerback function (From activation to desactivation, or viceversa)
 - Initialization of all the ETACS functions (From desactivation to activation)
1. Entry conditions to the adjustment mode
The ETACS-ECU sounds a buzzer once when all of the following conditions are satisfied, and then enters the adjustment mode:
 - Hazard warning lamp switch: OFF
 - Diagnosis control: ON (Connect the MUT-II or earth the diagnosis connector No.1 terminal.)
 - Key reminder switch: OFF
 - Ignition switch: LOCK (OFF)
 - Driver's door switch: OFF (Close the driver's door.)
 - If all of the conditions above are satisfied, the windshield washer switch will be turned on for more than 10 seconds.
 2. Exit conditions from the adjustment mode
The ETACS-ECU cancels the adjustment mode when any of the following conditions is satisfied:
 - Diagnosis control: ON (Disconnect the MUT-II or disconnect the diagnosis connector No.1 terminal from the earth.)
 - Key reminder switch: ON (Pull out the ignition key.)
 - Ignition switch: Other than LOCK (OFF)
 - Driver's door switch: ON (Open the driver's door.)
 - After the ETACS-ECU has entered the adjustment mode, no adjustment is made within 3 minutes (If any adjustment is made within 3 minutes, the ETACS-ECU monitors a adjustment operation for other 3 minutes.)
 - Other warning buzzer(s) sounds


3. Adjustment of functions

Function	Adjustment procedure
Keyless entry answerback function	<p>When the transmitter lock switch is turned on twice continuously within 2 seconds, the lock answerback function toggles on and off.</p> <ul style="list-style-type: none"> ● If the function toggles on, the buzzer sounds once (default condition). ● If the function toggles off, the buzzer sounds twice, <p>When the transmitter unlock switch is turned on twice continuously within 2 seconds, the unlock answerback function toggles on and off.</p> <ul style="list-style-type: none"> ● If the function toggles on, the buzzer sounds once (default condition). ● If the function toggles off, the buzzer sounds twice,
Initialization of all the ETACS functions (From desactivation to activation)	<p>When the windshield washer switch remains on for more than 20 seconds, the buzzer sounds twice and then all of the following functions will be initialized.</p> <ul style="list-style-type: none"> ● Automatic lighting sensor sensitivity ● Automatic headlamp switch-off function ● Vehicle-speed dependent wiper ● Outside mirror automatic rest function <p>The buzzer will sound in 10 seconds (indicating that the ETACS-ECU enters the adjustment mode), but the washer switch must remain off for 20 seconds in order to initialize all the functions.</p> <p>If the windshield washer switch remains on for more than 20 seconds without entering the adjustment mode, the system enters the adjustment mode in 10 seconds, but does not initialize all of the functions.</p>

KEYLESS ENTRY SYSTEM

REMOVAL AND INSTALLATION

Pre-removal and Post-installation Operation
 Side Cover Removal and Installation
 (See GROUP 52A – Instrument Panel.)

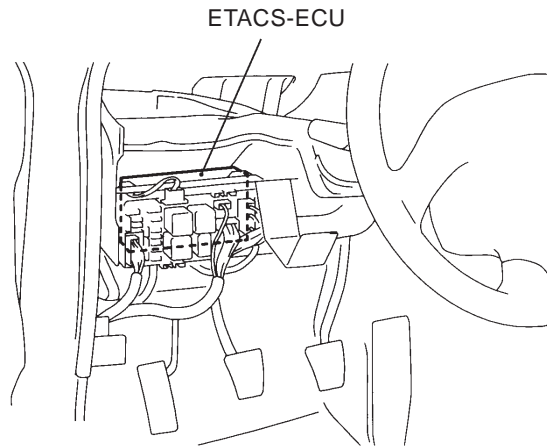

AW1283AL

SUNROOF

SERVICE SPECIFICATION

Items	Standard value
Roof lid glass operating current A (at 20°C)	7 or less

TROUBLESHOOTING


INSPECTION CHART FOR TROUBLE SYMPTOMS

Trouble symptom	Inspection procedure	Reference page
The sunroof does not operate when the ignition switch is turned to ON.	1	42-43
The motor does not reverse its direction when a load of 140 N or more is applied while the sunroof is closing.	2	42-44
The timer does not operate during 30 seconds after the ignition switch is turned to LOCK (OFF) position.	3	42-44
Opening or closing of the sunroof is possible immediately after turning the ignition switch to LOCK (OFF) position, but the timer function does not operate continuously for another 30 seconds if the driver's side door is opened within 30 seconds.	4	42-44

INSPECTION PROCEDURE FOR TROUBLE SYMPTOMS

INSPECTION PROCEDURE 1

The sunroof does not operate when the ignition switch is turned to ON.	Probable cause
The cause may be a malfunction of a sunroof switch, sunroof-ECU power supply circuit or earth circuit.	<ul style="list-style-type: none"> ● Malfunction of sunroof switch ● Malfunction of sunroof-ECU ● Malfunction of wiring harness or connector

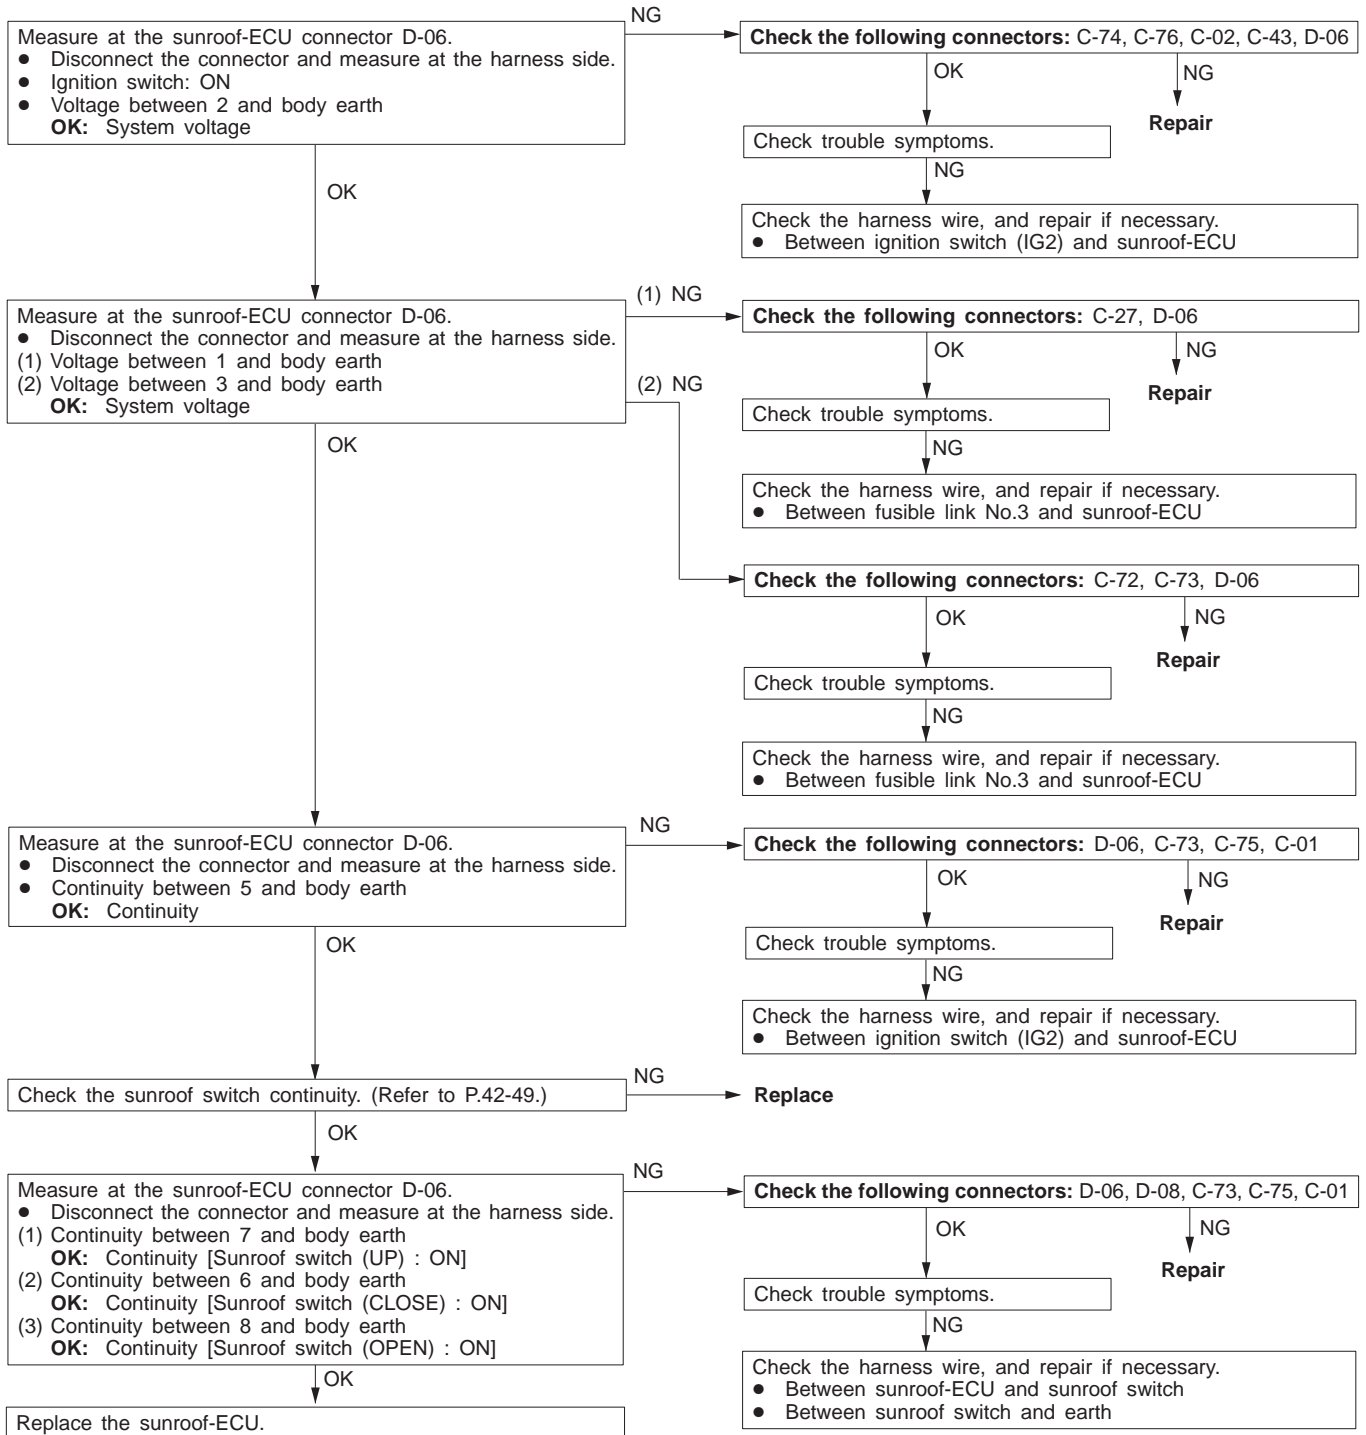


INSPECTION PROCEDURE 2

<p>The motor does not reverse its direction when a load of 140 N or more is applied while the sunroof is closing.</p>	<p>Probable cause</p>
<p>The sunroof-ECU monitors the load conditions from the amount of current flowing to the motor. If more than the constant amount of current is flowing, the direction of motor operation is reversed to prevent jamming. If the motor does not reverse direction even when an excessive load is being applied, the cause may be a malfunction of the sunroof-ECU.</p>	<ul style="list-style-type: none"> • Malfunction of sunroof-ECU

Replace the sunroof-ECU.


INSPECTION PROCEDURE 3

<p>The timer does not operate during 30 seconds after the ignition switch is turned to LOCK (OFF) position.</p>	<p>Probable cause</p>
<p>The sunroof-ECU has a timer function which operates during 30 seconds after the ignition switch is turned to LOCK (OFF) position. If the timer does not operate, the cause may be a malfunction of the sunroof-ECU or of the wiring harness or connector.</p>	<ul style="list-style-type: none"> • Malfunction of wiring harness or connector • Malfunction of sunroof-ECU

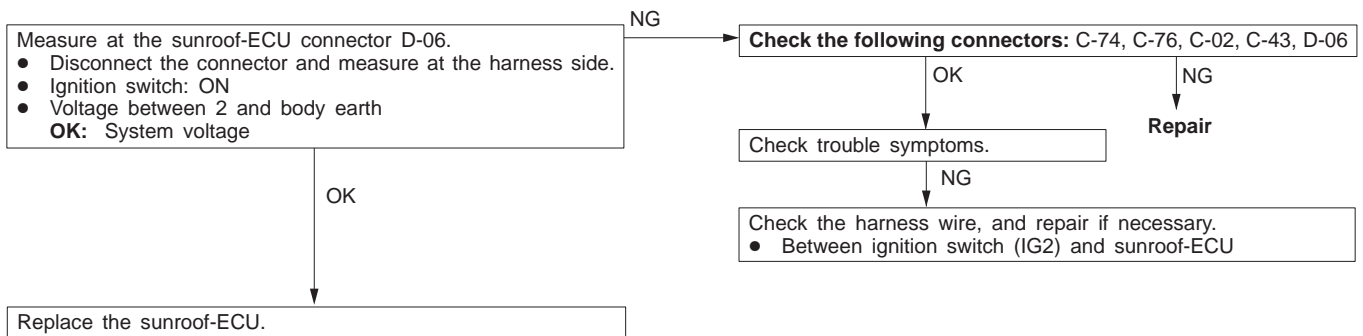


INSPECTION PROCEDURE 4

<p>Opening or closing of the sunroof is possible immediately after turning the ignition switch to LOCK (OFF) position, but the timer function does not operate continuously for another 30 seconds if the driver's side door is opened within 30 seconds.</p>	<p>Probable cause</p>
<p>The operation period for the sunroof timer is extended when an on signal is output from the driver's-side door switch. Because of this, if the timer operation period is not extended, the cause may be a malfunction of the door switch input circuit.</p>	<ul style="list-style-type: none"> • Malfunction of wiring harness or connector • Malfunction of driver's door switch • Malfunction of sunroof-ECU

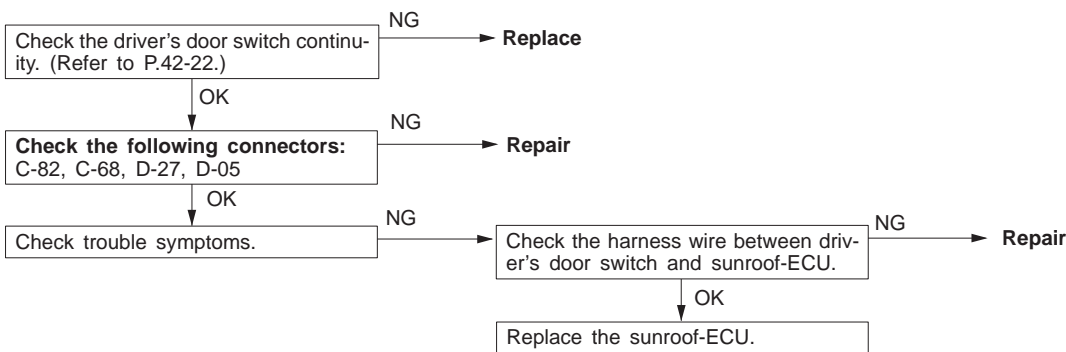

SUNROOF-ECU TERMINAL VOLTAGE CHART



V1334AE



Terminal No.	Check Item	Check Condition		Normal Condition
1	ECU power supply	Always		System voltage
2	Sensor power supply	Ignition switch: ON		System voltage
5	Earth	Always		0 V
6	Sunroof switch (CLOSE, DOWN input)	Sunroof switch (close position or down position)	ON	0 V
			OFF	System voltage
7	Sunroof switch (UP input)	Sunroof switch (up position)	ON	0 V
			OFF	System voltage
8	Sunroof switch (OPEN input)	Sunroof switch (open position)	ON	0 V
			OFF	System voltage
9	Driver's door switch	Driver's door	Open	Continuity
			Close	No continuity

ON-VEHICLE SERVICE

WATER TEST

Check if there are any leaks in the sunroof by the following procedure.

1. Fully close the roof lid glass.
2. Adjust the water pressure so that water comes out of the hose to a height of approximately 50 cm when the hose is held vertically facing upwards.
3. Hold the end of the hose approximately 30 cm above the roof and let the water run onto the weatherstrip for 5 minutes or more.
4. While doing this, check if any water leaks through into the passenger compartment from around the roof lid glass.

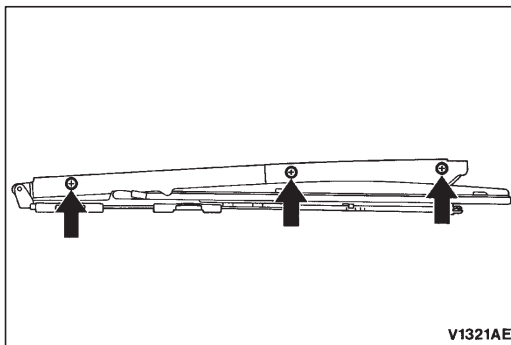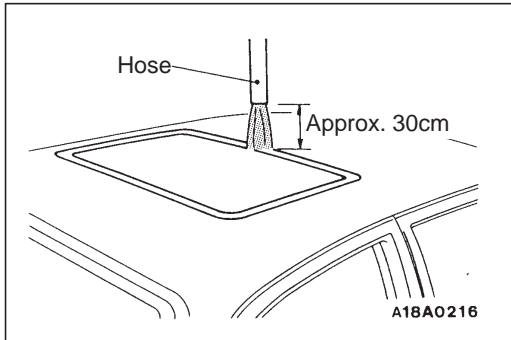

SUNROOF FIT ADJUSTMENT


1. Fully close the roof lid glass.
2. Fully open the sunshade.
3. Loosen the roof lid glass assembly mounting screws, and then slide the roof lid glass assembly along the slot in the mechanish assembly to adjust the height of the roof lid glass.
4. After adjustment, check to be sure that the sunroof operates smoothly.

SUNROOF

REMOVAL AND INSTALLATION

Post-installation Operation

- Sunroof Water Test (Refer to P.42-46.)
- Sunroof Fit Adjustment (Refer to P.42-46.)

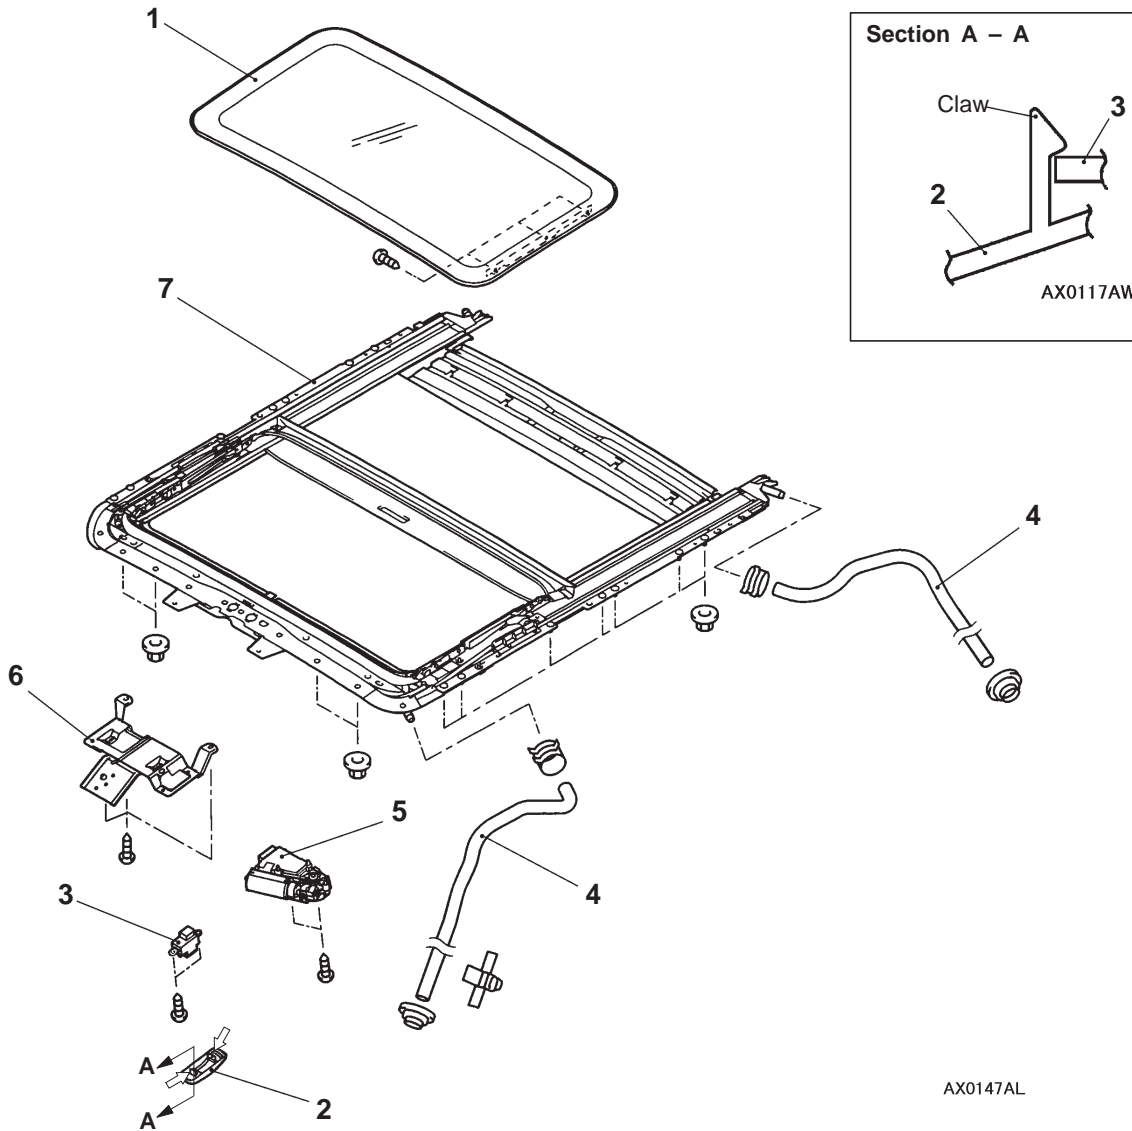

NOTE

↔ : Claw positions

1. Roof lid glass assembly

Sunroof switch removal steps

2. Sunroof switch cover
3. Sunroof switch

Drain hose removal steps

- Headlining (Refer to GROUP 52A.)
- Splash shield (Rear drain hose)
- Cowl side trim and instrument lower panel (Refer to GROUP 52A.)
- Engine-ECU, throttle servo relay and throttle controller (Driver's-side drain hose)


◀A▶ ▶A▶ 4. Drain hose

Sunroof motor assembly removal steps

- Headlining (Refer to GROUP 52A.)
- ◀B▶ ▶B▶ 5. Sunroof motor assembly

Sunroof assembly removal steps

- Headlining (Refer to GROUP 52A.)
- ◀A▶ ▶A▶ 4. Drain hose
6. Room lamp bracket
7. Sunroof assembly

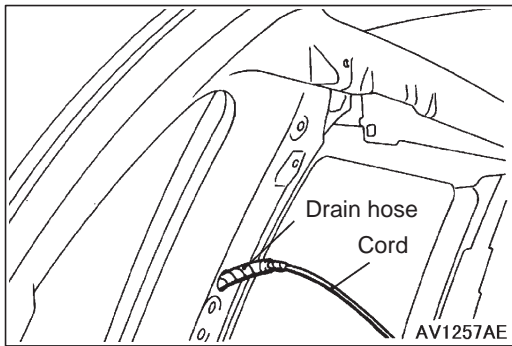

REMOVAL SERVICE POINTS

◀A▶ DRAIN HOSE REMOVAL

Tie a cord to the end of the drain hose, and wind tape around it so that there is no unevenness. Then pull the drain hose out from the passenger compartment.


◀B▶ SUNROOF MOTOR ASSEMBLY REMOVAL

Caution

Always close the roof lid glass fully before removing the sunroof motor. If the fully-closed positions of the roof lid glass and the sunroof motor are not the same, the sunroof will not operate properly.

NOTE


If there is a problem with the sunroof motor so that the roof lid glass cannot close fully, use an Allen key to turn the gear section of the sunroof motor to fully close the roof lid glass.

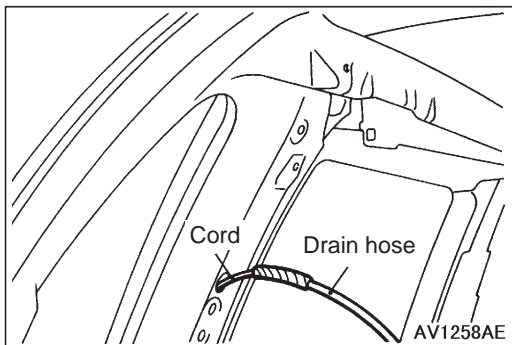

INSTALLATION SERVICE POINTS

▶A▶ DRAIN HOSE INSTALLATION

1. Tie the cord that was used during removal to the end of the drain hose, and wind tape around it so that there is no unevenness.
2. Pull the cord to pull through the drain hose
3. Install the grommet, and then position the drain hose so that it protrudes from the grommet as shown in the illustration.

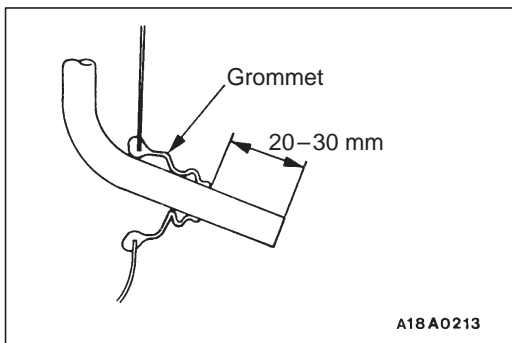


►B◄ **SUNROOF MOTOR ASSEMBLY INSTALLATION**

If the fully-closed position of the sunroof motor assembly is incorrect, set the sunroof motor to the fully-closed position by the following procedure, and then install the sunroof motor.

1. Set the sunroof to full tilt-up position by using the close switch. The roof lid glass moves full tilt position only step by step with about 30 mm steps.
2. Hold the close switch for about 3 seconds at full tilt position. Do not release the switch at hard stop position before initialization is completed.
3. Set the sunroof to full close position by using the close switch.
4. Set the sunroof to full open position by using the open switch. Do not stop the sunroof while it is moving.
5. Set the sunroof to full close position by using the close switch. Do not stop the sunroof while it is moving.

NOTE

Sunroof-ECU will initialize when the sunroof motor stops.

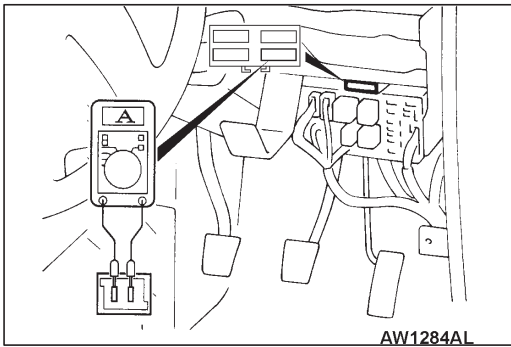


INSPECTION

ROOF LID GLASS OPERATION CURRENT CHECK

1. Remove the sunroof fuse and connect a circuit analyser as shown in the illustration.
2. Press the sunroof switch to operate the sunroof, and then measure the operation current while the roof lid glass is moving (except when the sunroof starts to operate, when it is fully open, when it is fully closed and when it is fully tilted up).

Standard value: 7 A or less (at 20°C)




3. If the operation current is not within the standard value, check the following points.
 - Installation condition, warping or jamming of sunroof assembly
 - Sticking of drive cable
 - Tilt of roof lid glass

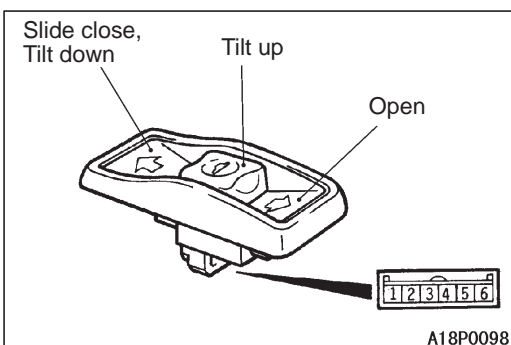

SUNROOF SWITCH CONTINUITY CHECK

Switch position	Terminal No.			
	3	4	5	6
Open		○—○		
Off				
Tilt up	○—○			
Slide close, Tilt down		○—○		○

DISASSEMBLY AND REASSEMBLY

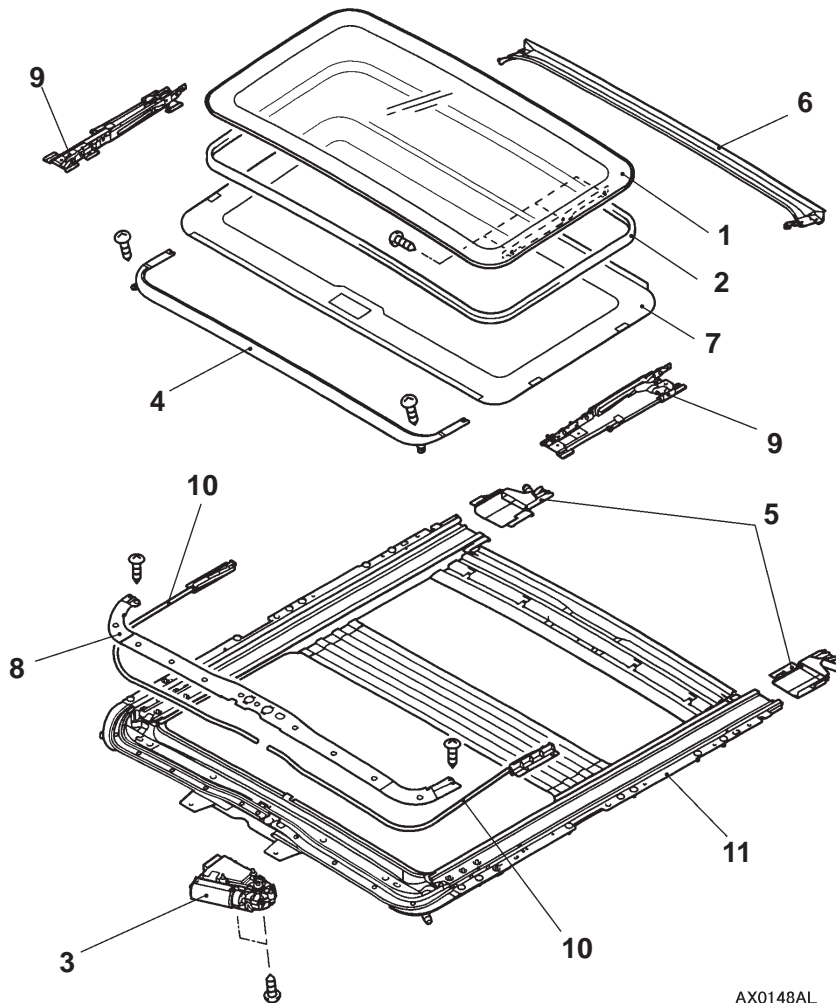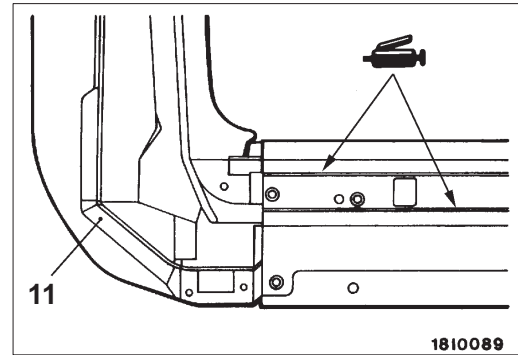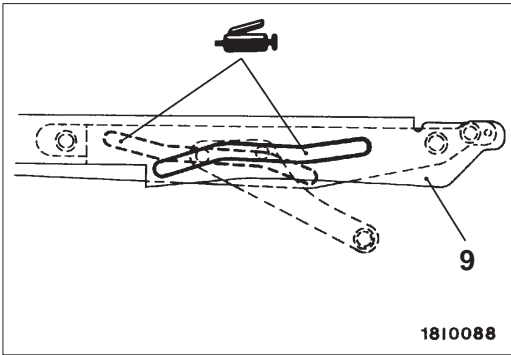


Disassembly steps

- | | |
|------------------------------|-------------------------|
| 1. Roof lid glass assembly | 7. Sunshade assembly |
| 2. Weatherstrip | 8. Drive unit cover |
| 3. Sunroof motor assembly | 9. Mechanish assembly |
| 4. Roof wind deflector panel | 10. Drive unit assembly |
| 5. Rail end | 11. Frame assembly |
| 6. Roof drip channel | |

BODY

CONTENTS

GENERAL	2	FRONT DOOR TRIM AND WATERPROOF FILM	8
OUTLINE OF CHANGES	2	REAR DOOR TRIM AND WATERPROOF FILM	9
WINDOW GLASS	2	FRONT DOOR GLASS AND REGULATOR	12
ADHESIVE	2	REAR DOOR GLASS AND REGULATOR	13
SPECIAL TOOL	2	REAR DOOR HANDLE AND LATCH	16
QUARTER WINDOW GLASS	3	WINDOW GLASS RUNCHANNEL AND DOOR OPENING WEATHERSTRIP	18
DOOR	6	SUNROOF	20
SERVICE SPECIFICATIONS	6	TROUBLESHOOTING	20
SEALANT	6	SUNROOF	21
SPECIAL TOOL	6		
TROUBLESHOOTING	7		
REAR DOOR ASSEMBLY	7		



GENERAL

OUTLINE OF CHANGES

Due to the introduction of 5-door models, the following service procedures have been added. The other items are the same as before.


- Quarter window glass removal and installation
- Rear door assembly removal and installation
- Front door trim removal and installation
- Rear door trim and waterproof film removal and installation
- Front door glass and regulator installation service points
- Rear door glass and regulator removal and installation
- Rear door handle and latch removal and installation
- Sunroof removal and installation

WINDOW GLASS

ADHESIVE

Items	Specified adhesive
Quarter window glass	3M ATD Part No. 8609 Super Fast Urethane Auto Glass Sealant or equivalent

SPECIAL TOOLS


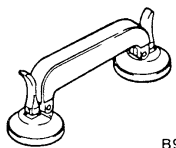
Tool	Number	Name	Use
 B990480	MB990480	Quarter window glass	Removal and installation of quarter window glass

QUARTER WINDOW GLASS

REMOVAL AND INSTALLATION





Pre-removal and Post-installation Operation

- Quarter Trim, Lower (R.H.) Removal and Installation (Refer to GROUP 52A.)
- Headlining Removal and Installation (Refer to GROUP52A.)

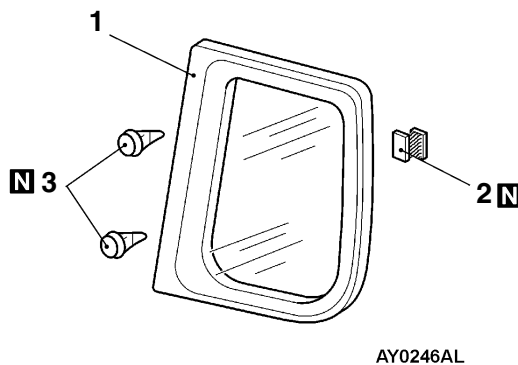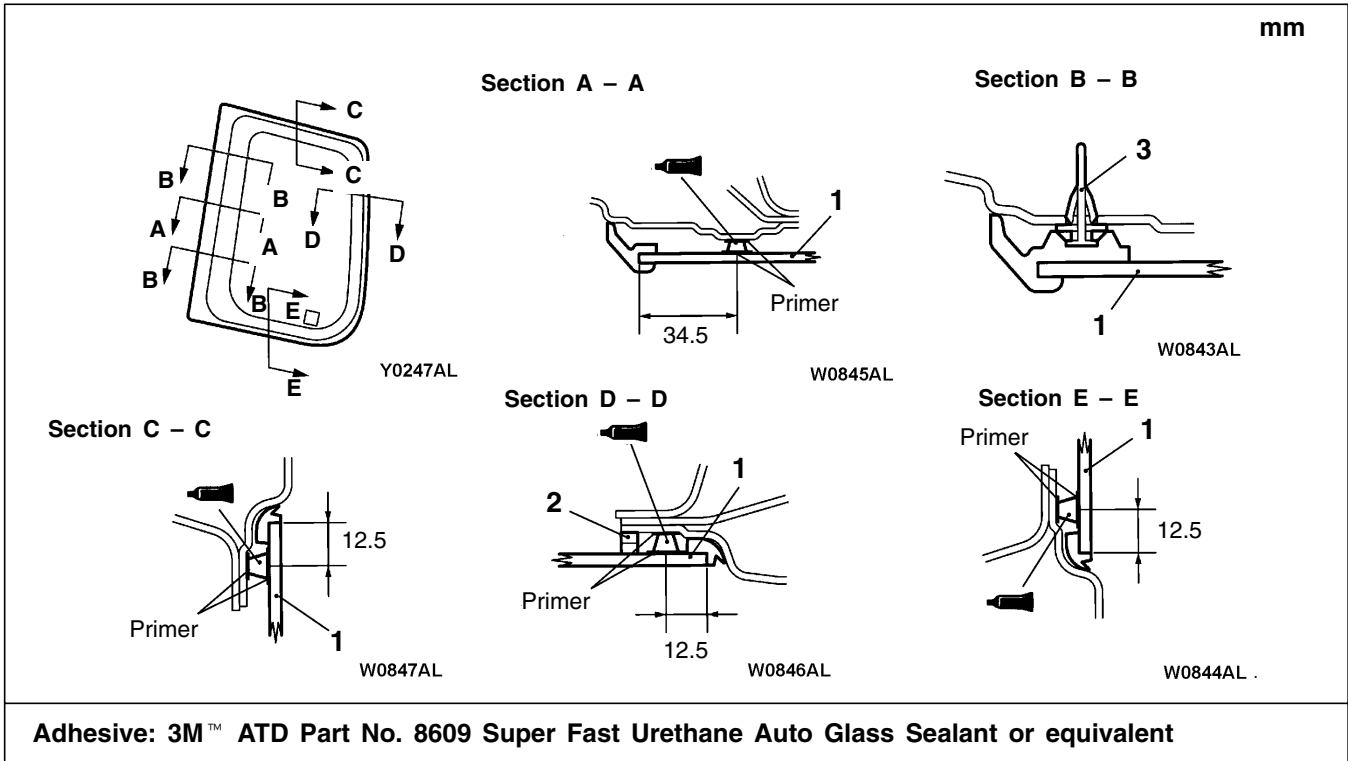

Removal steps


- ◀A▶
- ▶A◀ 1. Quarter window glass
 - ▶A◀ 2. Dual lock fastener
 - ▶A◀ 3. Clip

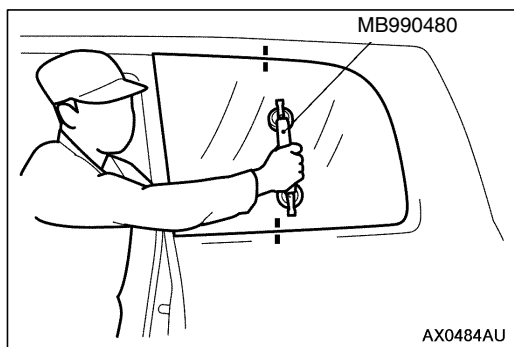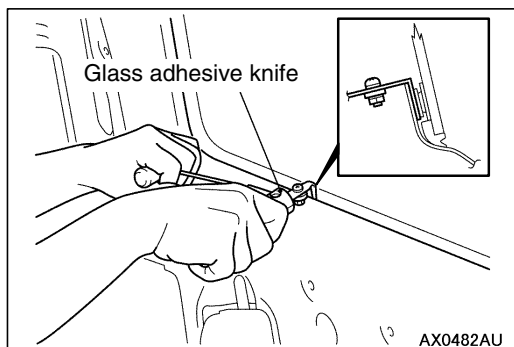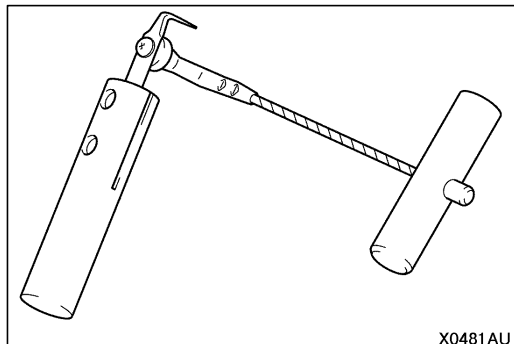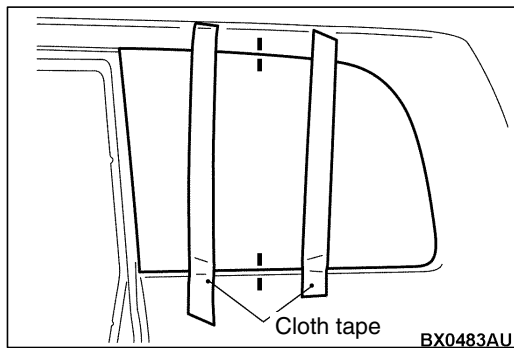

REMOVAL SERVICE POINT

◀A▶ QUARTER WINDOW GLASS REMOVAL

1. Apply cloth tape to protect quarter window glass.
2. Make mating marks on the quarter window glass and body.
3. Use glass adhesive knife to cut away adhesive. Keep glass adhesive knife at right angles with body flange (from inside the vehicle), and put the blade at body flange. Then cut away adhesive along the body flange.
4. Use special tool MB990480 to remove the quarter window glass.

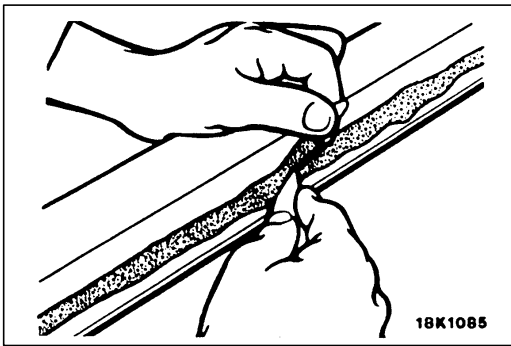

5. Use a knife to cut away the remaining adhesive so that the thickness is within 2 mm around the entire circumference of the body flange.
6. Finish the flange surfaces so that they are smooth.

Caution

- (1) Use care not to remove more adhesive than necessary, or the adhesive could weaken.
- (2) Be careful also not to damage the paintwork on the body surface with the knife. If the paintwork is damaged, repair the damaged area with repair paint or anti-rust agent.

7. When reusing quarter window glass, remove the remaining adhesive on the quarter window glass completely. Then, decrease the windshield with isopropyl alcohol.
8. Decrease the body flange in the same way.


Caution

Before the next job, leave the decreased parts for 3 minutes or more to dry. Also, do not touch any cleaned surface.

INSTALLATION SERVICE POINT

**▶A◀ CLIP/DUAL LOCK FASTENER/
QUARTER WINDOW GLASS INSTALLATION**

1. Carry out the following procedure to re-install quarter window glass.
 - (1) Fit the clip into the body.

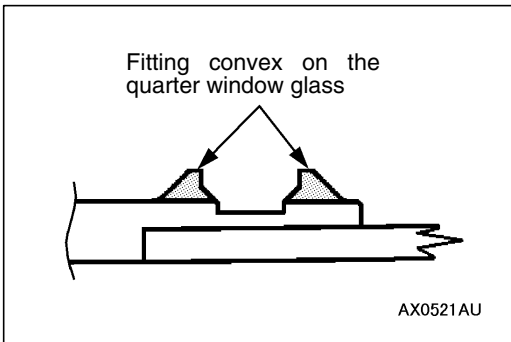


- (2) Cut away the clip fitting convex on the quarter window glass.

NOTE

If you fail to cut away the convexes, the glass may be fitted improperly.

2. Use a unleaded gasoline to degrease the glass and the vehicle body, which the dual-lock fasteners are adhered to.

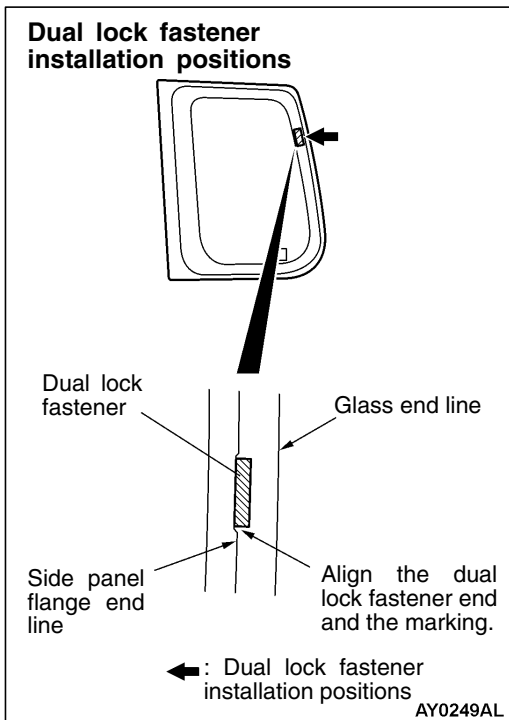

3. Install the dual lock fasteners to the body flange in the specified positions.
4. Install the dual lock fasteners to the windshield in the positions corresponding to the ones on the body flange where the dual lock fasteners have been installed.
5. Apply the primer and adhesive.
6. Install the glass in the same manner as for the windshield.

DOOR


SERVICE SPECIFICATIONS

Items		Standard value	
Glass pad and glass holder installation position mm	Between glass holder and glass rear end	Front	50.0
		Rear	–
	Between glass holders	Front	419.0 – 421.0
		Rear	–
	Between glass holder and glass front end	Front	45.0
		Rear	53.0

SEALANT

Items	Specified sealant	Remark
Waterproof film	3M™ ATD Part No. 8625 or equivalent	Ribbon sealer

SPECIAL TOOL

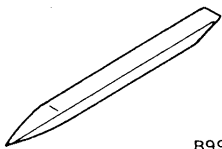Tool	Number	Name	Use
 B990784	MB990784	Ornament remover	Door trim removal



TROUBLESHOOTING

The power window and central door locking is controlled by ETACS-ECU. For troubleshooting, refer to GROUP 54B – Troubleshooting.

REAR DOOR ASSEMBLY

REMOVAL AND INSTALLATION

Post-installation Operation
Door Fit Adjustment

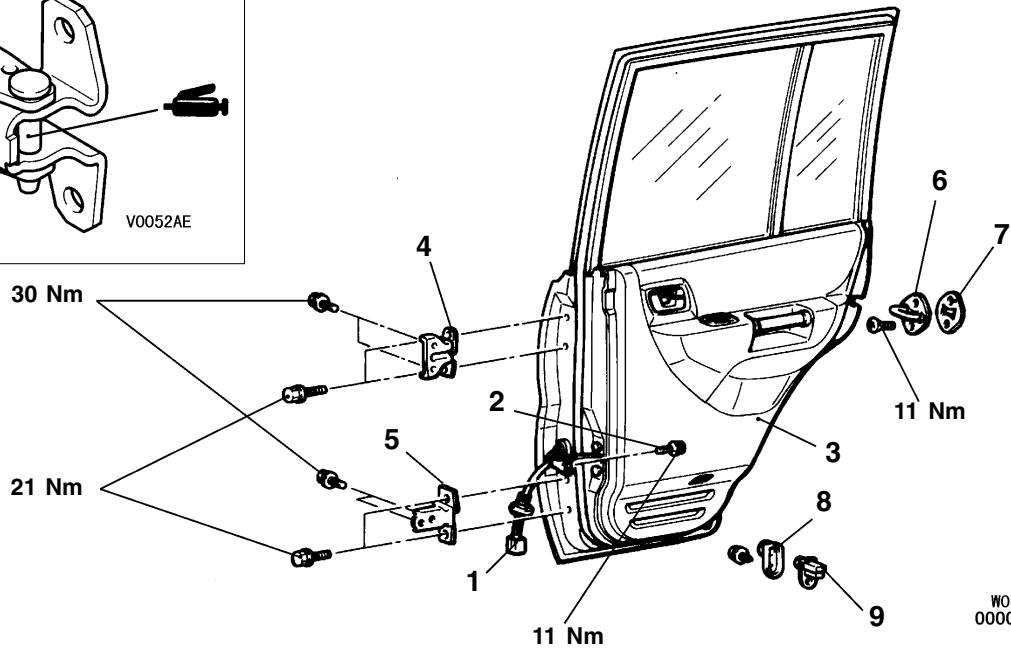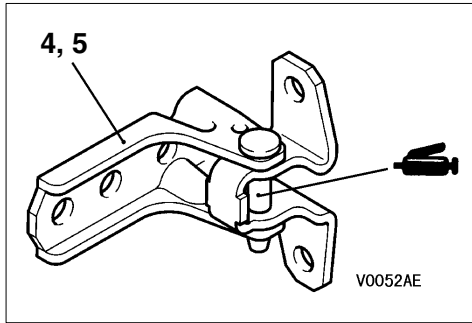

W0849AL
00009371

Door assembly removal steps


1. Harness connector
2. Door check connecting bolt
3. Door assembly
4. Door upper hinge
5. Door lower hinge

Striker removal steps

6. Striker
7. Striker shim

Door switch removal steps

8. Door switch cap
9. Door switch

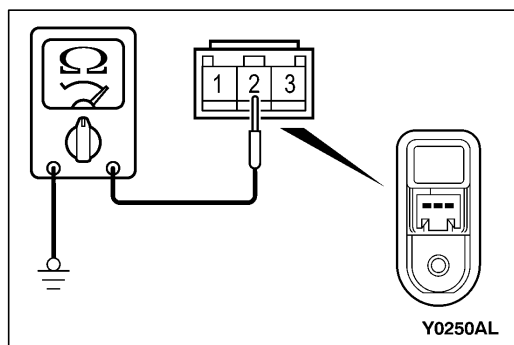


INSPECTION

DOOR SWITCH CONTINUITY CHECK


Switch position	Terminal number	
	2	Earth
Released (ON)	○	○
Depressed (OFF)		

FRONT DOOR TRIM AND WATERPROOF FILM

CLIP AND CLAW POSITIONS

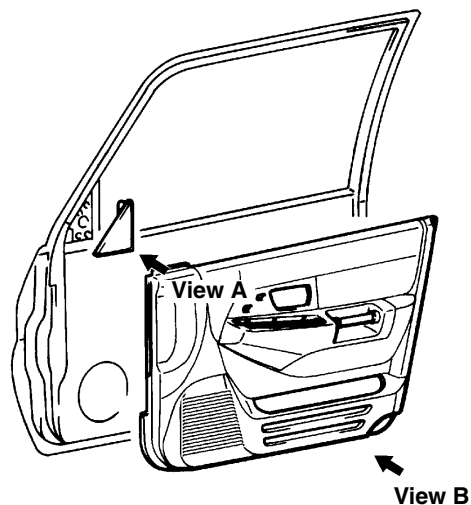





W0855AL
00009375

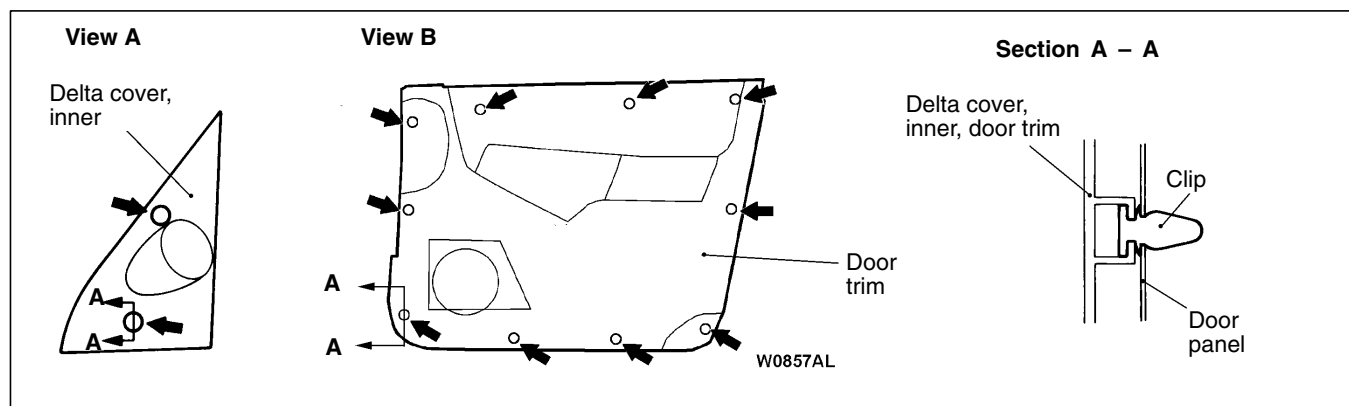

NOTE

- ← Clips
- ⇐ Claws

REAR DOOR TRIM AND WATERPROOF FILM REMOVAL AND INSTALLATION

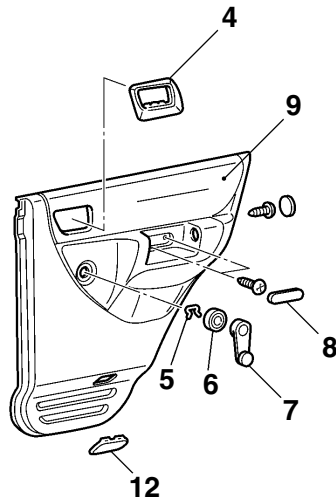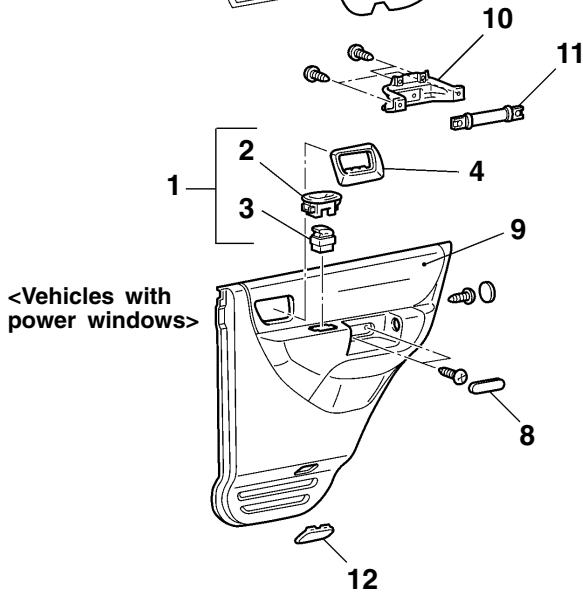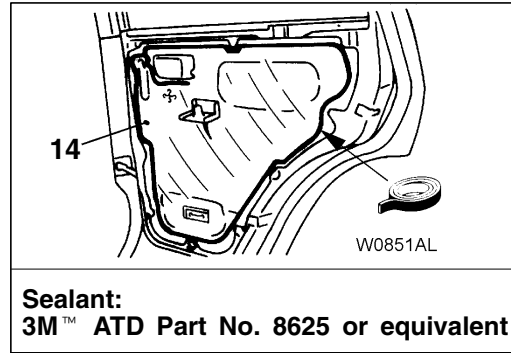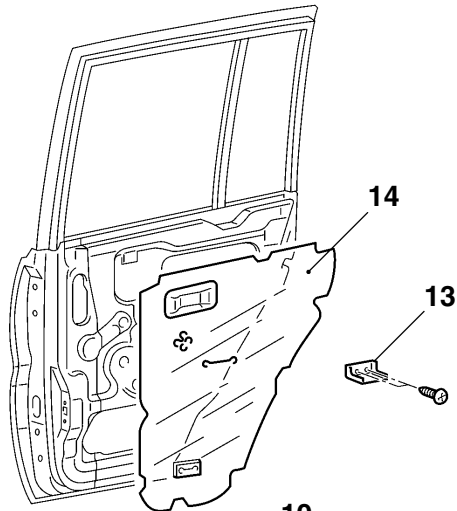


AY0248AL

Removal steps


1. Power window switch panel assembly
2. Power window switch panel
3. Power window switch
4. Door inside handle cover
5. Clip
6. Escutcheon
7. Regulator handle

8. Cap
9. Door trim
10. Grip bracket
11. Door grip
12. Door lamp lense
13. Power window switch bracket
14. Waterproof film



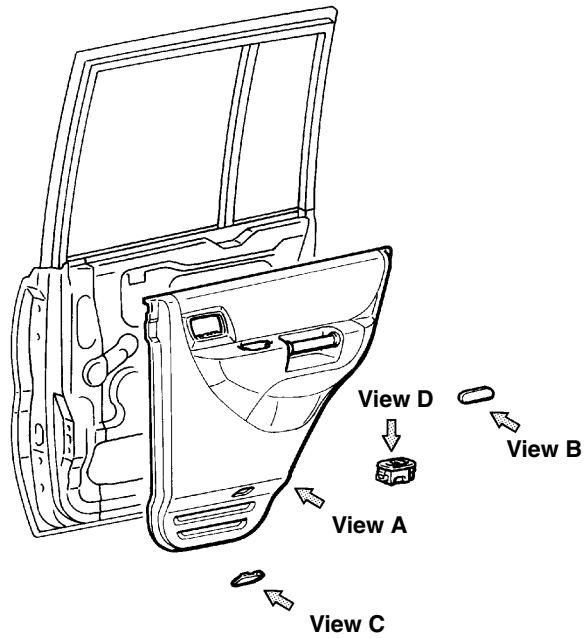


W0856AL

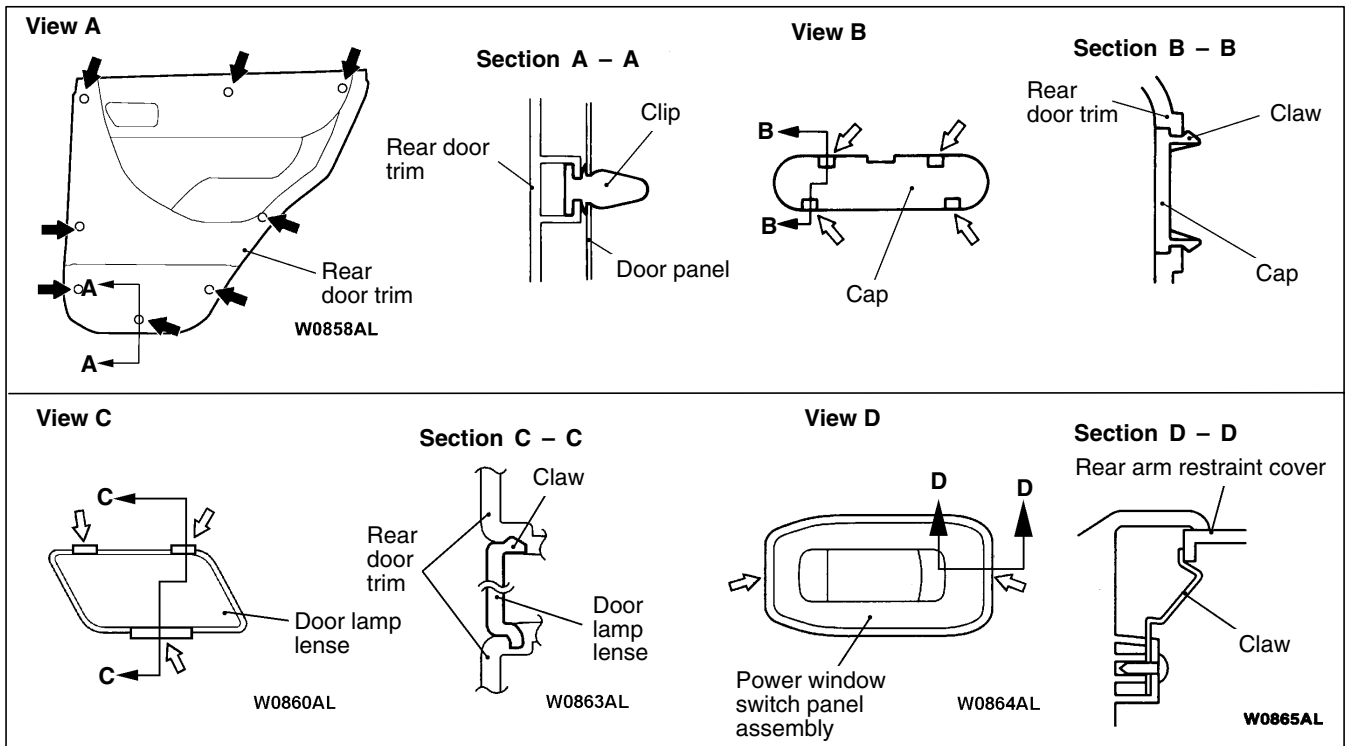

NOTE

- ◄ Clips
- ↪ Claws


X0020AL

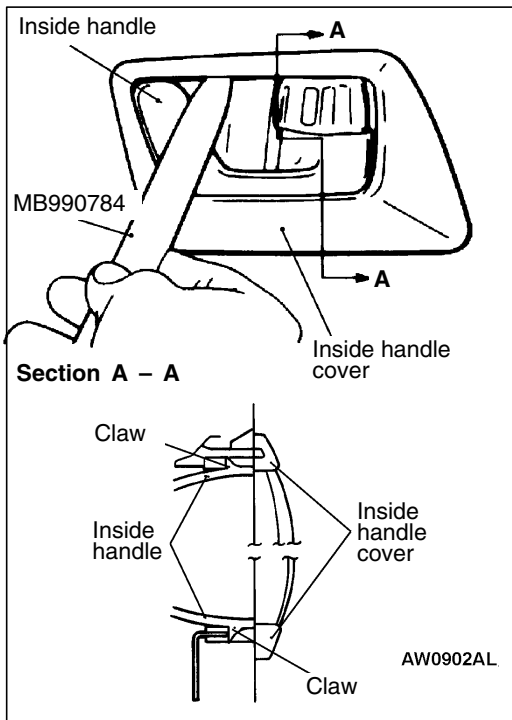

REMOVAL SERVICE POINTS


◀A▶ DOOR INSIDE HANDLE COVER REMOVAL

1. Insert the special tool between the inside handle upper part and the inside handle cover, and then disengage the upper claw of the inside handle.
2. Disengage the lower claw of the inside handle in the same manner as for the upper claw.
3. Remove the door trim.
4. Remove the inside handle cover from the door trim.

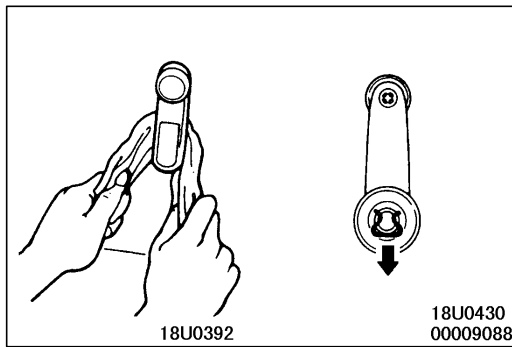

◀B▶ CLIP REMOVAL

Use a cloth to remove the clip as shown in the illustration.

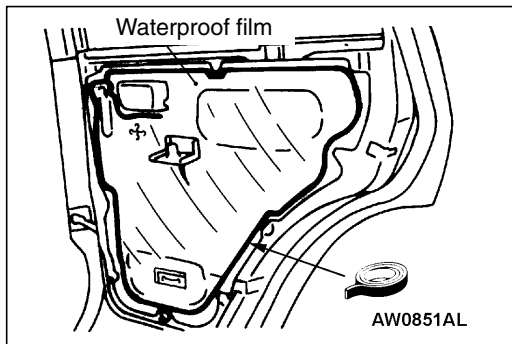

INSTALLATION SERVICE POINTS


▶A◀ WATERPROOF FILM INSTALLATION

Apply the specified sealant to the shown positions of waterproof film, and then attach the waterproof film.

Specified sealant: 3M™ ATD Part No. 8625 or equivalent


Caution

Be sure to apply the sealant below the inner panel water drain holes so as not to plug them.

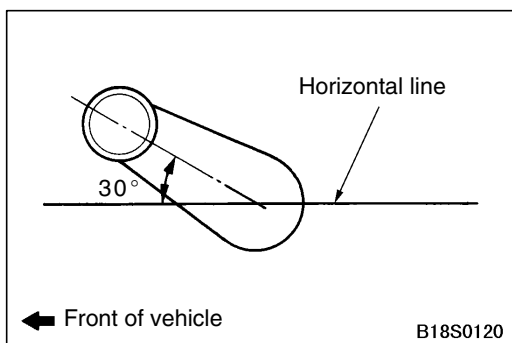

▶B◀ REGULATOR HANDLE/ESCUTCHEON/CLIP INSTALLATION

1. Install the clip and escutcheon to the regulator handle.
2. Close the front door window glass fully, and then install the regulator handle as shown in the illustration.

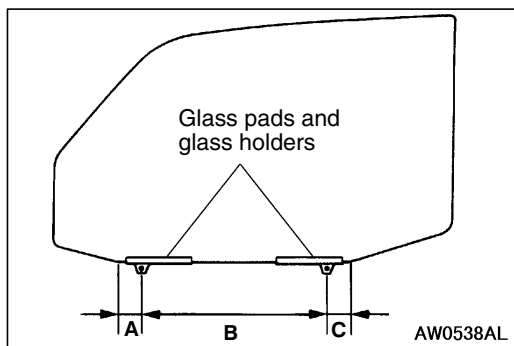

FRONT DOOR GLASS AND REGULATOR

DOOR WINDOW GLASS/GLASS HOLDER/DOOR GLASS PAD INSTALLATION

1. Install the door glass pads and glass holders to the window glass in the positions shown.

Standard value (A): 50.0 mm

Standard value (B): 419.0 – 421.0 mm

Standard value (C): 45.0 mm

2. Install the glass to the window regulator assembly.

Caution

Do not activate the window regulator assemble before installing the glass as the resetting in the limit switch is cancelled.

INSPECTION

POWER WINDOW MAIN SWITCH CONTINUITY CHECK

NOTE

Since the power window main switch uses the SWS system, check the continuity with the input signal check method. Refer to GROUP 54B – Troubleshooting.

REAR DOOR GLASS AND REGULATOR


REMOVAL AND INSTALLATION

Pre-removal Operation


- Door Trim and Waterproof Film Removal (Refer to P.42-9.)

Post-installation Operation

- Door Window Glass Adjustment
- Door Trim and Waterproof Film Installation (Refer to P.42-9.)

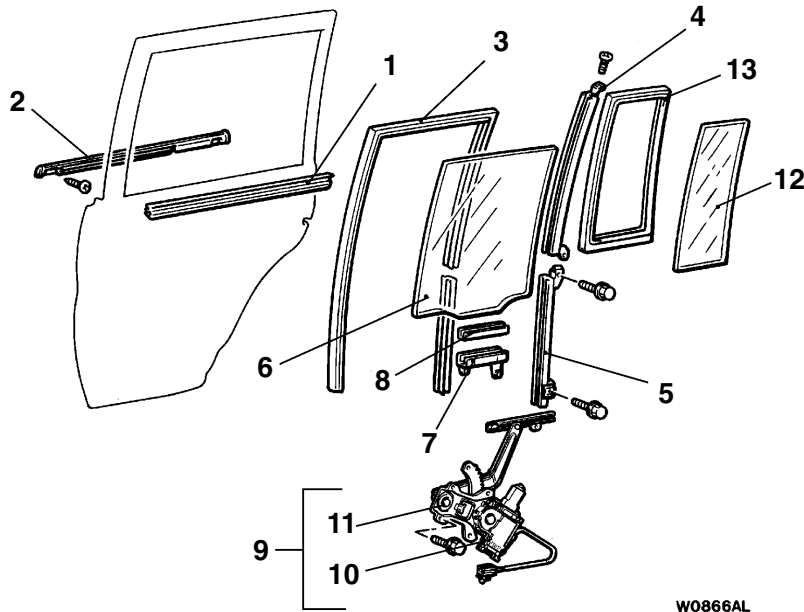

W0866AL

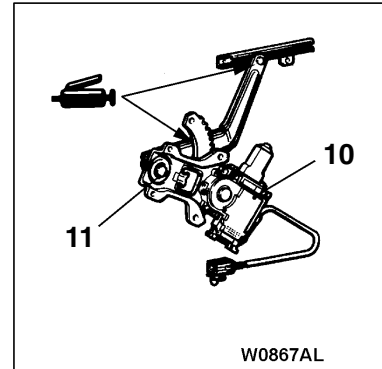

W0867AL

00009377

Door window glass removal steps

1. Door window inner weather strip
2. Door belt line moulding assembly
3. Door window glass runchannel
4. Rear center sash
5. Rear lower sash
6. Rear door window glass
7. Glass holder
8. Door glass pad



Power window regulator and motor assembly removal steps


9. Power window regulator and motor assembly
10. Power window motor assembly
11. Power window regulator assembly
12. Stationary window glass
13. Stationary window glass weather strip




INSTALLATION SERVICE POINTS**▶A◀ POWER WINDOW MOTOR ASSEMBLY/POWER WINDOW REGULATOR ASSEMBLY INSTALLATION**

Adjust the power window motor assembly and power window regulator assembly positions as follows:

1. Connect the power window motor assembly connector and the power window switch connector to the wiring harness of body side.
2. Turn on the power window switch to operate the power window motor for 3 seconds in the direction which the window glass closes.
3. Disconnect the power window motor assembly connector and the power window switch connector from the wiring harness of body side.
4. Assemble the power window motor assembly and the power window regulator so that the arm and bracket are positioned as shown in the illustration, and then install the power window motor assembly.

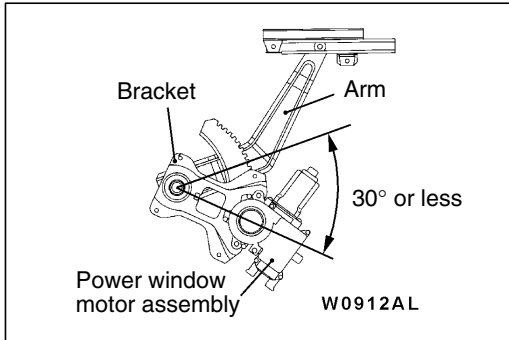**Caution**

When installing the power window regulator, do not set it in the window glass fully-closed position. If installing the power window regulator in that condition, the window glass safety mechanism will not function correctly.

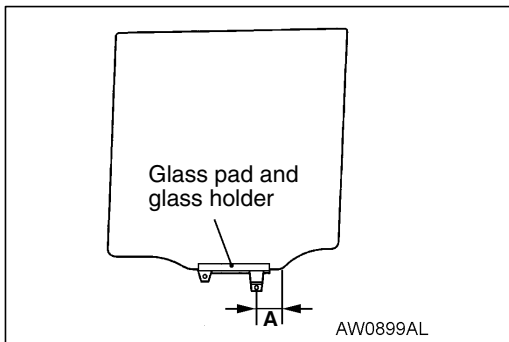**▶B◀ REAR DOOR WINDOW GLASS/GLASS HOLDER/DOOR GLASS PAD INSTALLATION**


1. Install the door glass pad and glass holder to the window glass in the position shown.

Standard value (A): 53.0 mm

2. Install the glass to the window regulator assembly.

Caution


Do not activate the window regulator assembly before installing the glass as the resetting in the limit switch is cancelled.

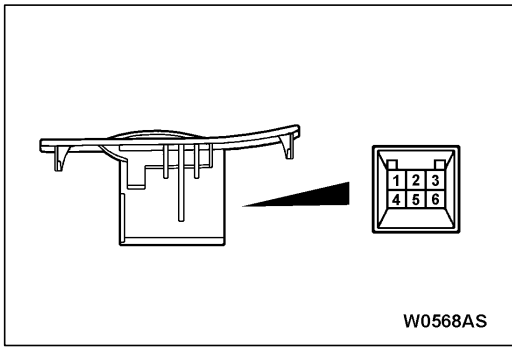

INSPECTION

POWER WINDOW SUB SWITCH CONTINUITY CHECK

Switch position	Terminal No.		
	1	4	6
UP		○—○	○—○
DOWN	○—○	○—○	

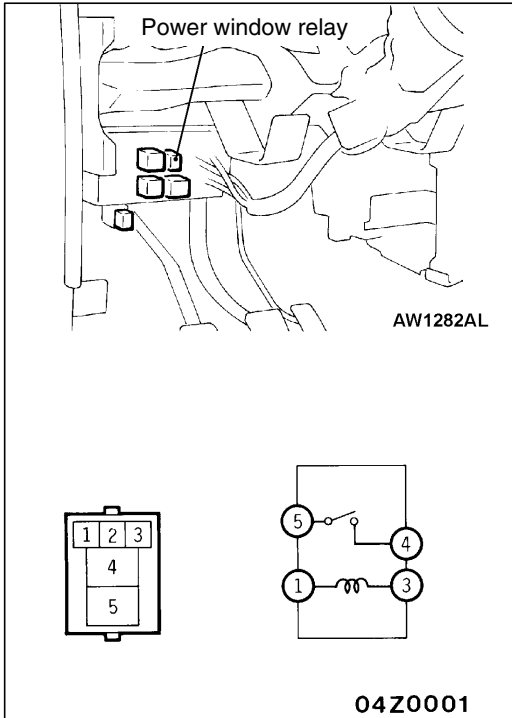

POWER WINDOW RELAY CONTINUITY CHECK

Battery voltage	Terminal No.			
	1	3	4	5
Not applied	○—○	○—○		
Applied	⊕—○	○—⊖	○—○	○—○


REAR DOOR HANDLE AND LATCH

REMOVAL AND INSTALLATION

Pre-removal Operation
 Door Trim Removal (Refer to P.42-9.)

Post-installation Operation

- Door Inside Handle Play Check
- Door Outside Handle Play Check
- Door Trim Installation (Refer to P.42-9.)

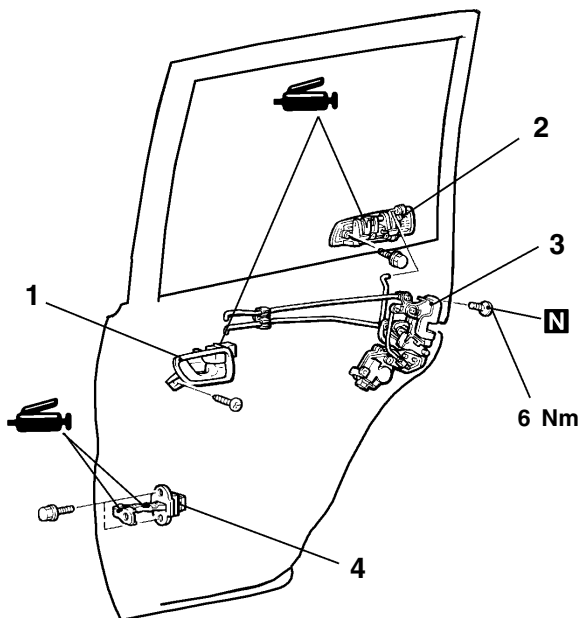


AW0868AL

Door handle and door latch assembly removal steps

- ▶B◀
1. Door inside handle
 - Waterproof film (Refer to P.42-9.)
 2. Door outside handle
 3. Door latch assembly

Door check removal steps

- ▶A◀
- Waterproof film (Refer to P.42-9.)
 - 4. Door check

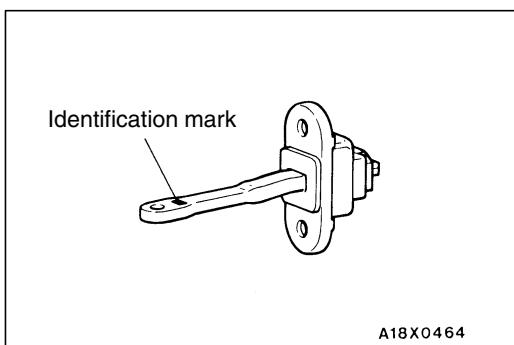


INSTALLATION SERVICE POINTS

▶A◀ **DOOR CHECK INSTALLATION**


Install with the following identification marks upward.

Items	Identification mark
Left door	26L
Right door	26R

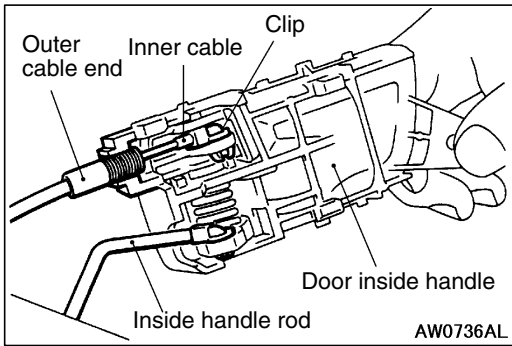

▶B◀ DOOR INSIDE HANDLE INSTALLATION

1. Install the inside lock cable to the door inside handle as follows:
 - (1) Install the inner cable end in the inside lock cable to the clip in the door inside handle.
 - (2) Turn the inside lock knob to the door lock position.
 - (3) Install the outer cable end to the door inside handle securely.
 - (4) Install the clip to the inner cable.
2. Install the inside handle rod to the door inside handle.
3. Install the door inside handle to the door.

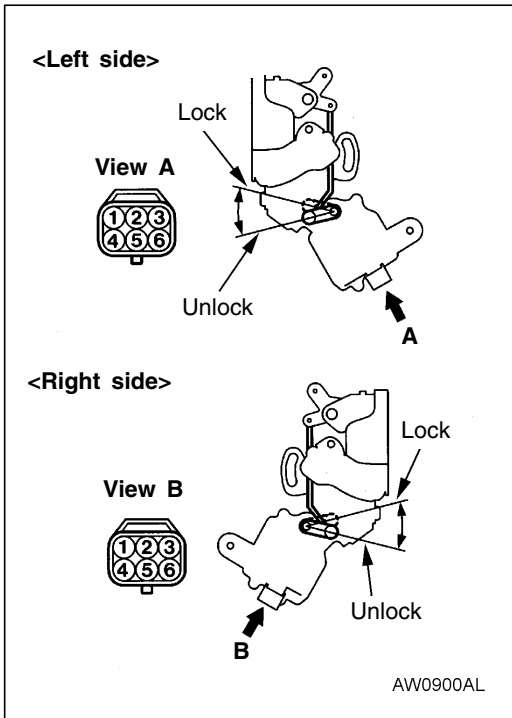

INSPECTION


DOOR LOCK ACTUATOR CHECK

Rod position	Terminal No.		Rod operation
	2	3	
LOCK	⊖	⊕	LOCK to UNLOCK
UNLOCK	⊕	⊖	UNLOCK to LOCK

WINDOW GLASS RUNCHANNEL AND DOOR OPENING WEATHERSTRIP

REMOVAL AND INSTALLATION

<FRONT DOOR>

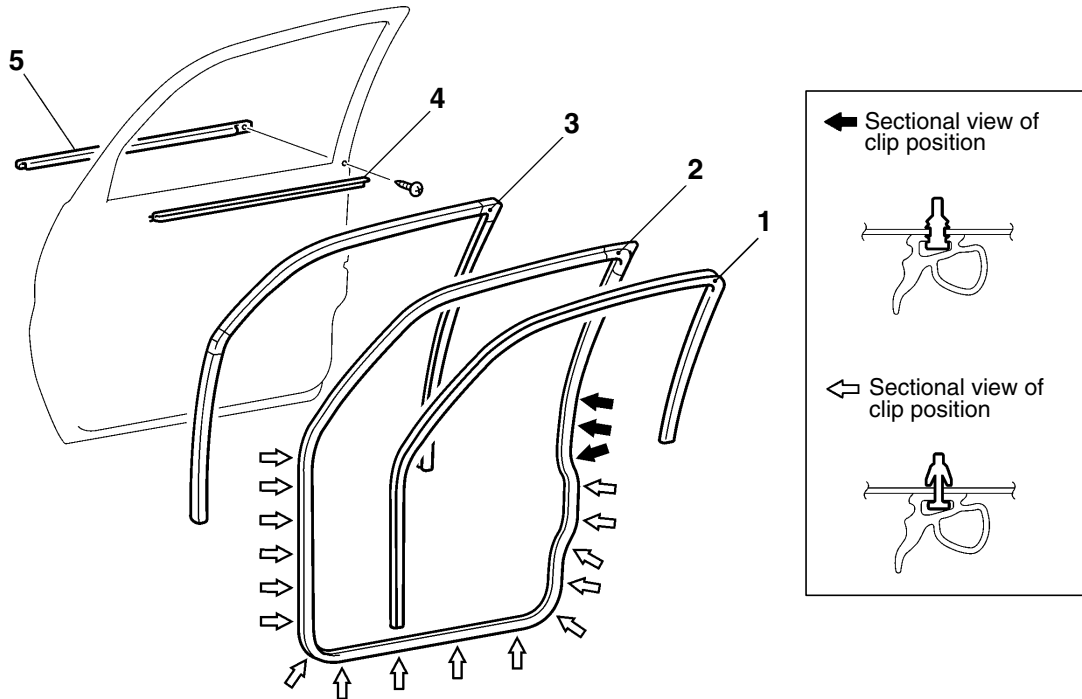

AY0245AL

Door inner opening weatherstrip removal steps

- Scuff plate (Refer to GROUP 52A.)
- Cowl side trim (Refer to GROUP 52A.)
- Center pillar lower trim (Refer to GROUP 52A.)

1. Door inner opening weatherstrip

Door outer opening weatherstrip removal

2. Door outer opening weatherstrip

Door window glass runchannel removal steps



3. Door window glass runchannel
4. Door window glass lower runchannel

Door beltline moulding removal steps

- Outside rear view mirror
- 5. Door beltline moulding



<REAR DOOR>

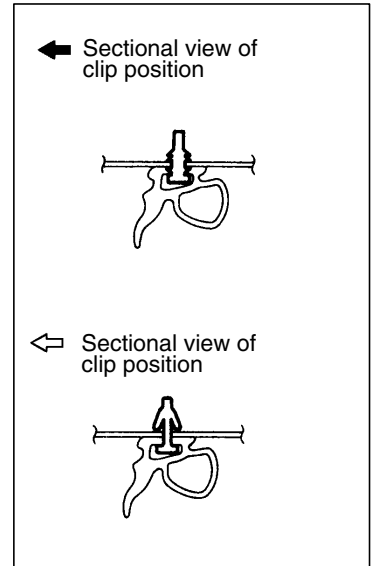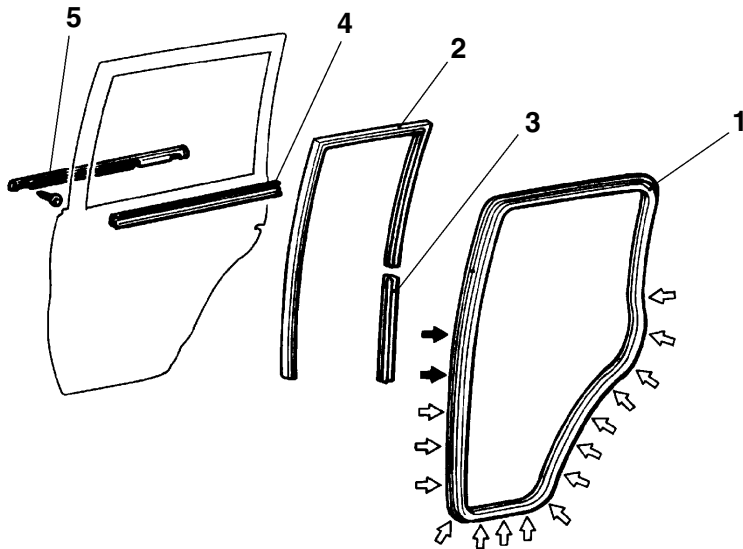

BX0061AL




1. Door outer opening weatherstrip
- Door window glass runchannel removal steps**
2. Door window glass runchannel
 - Door lower sash (Refer to P.42-13.)
 3. Door window glass lower runchannel

Door beltline inner weatherstrip removal steps

- Door trim (Refer to P.42-9.)
- 4. Door beltline inner weatherstrip

Door beltline moulding removal

5. Door beltline moulding

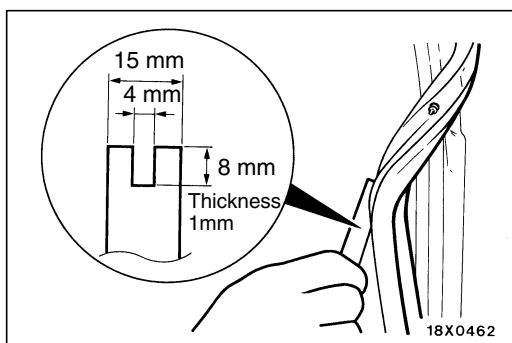

REMOVAL SERVICE POINT


◀A▶ DOOR OUTER OPENING WEATHERSTRIP REMOVAL

Make a tool as shown and remove the door opening weatherstrip.

SUNROOF

TROUBLESHOOTING

The timer does not operate for 30 seconds after the ignition switch is turned to LOCK (OFF) position. (When the ignition switch is turned on, the sunroof operates.)	Probable cause
The sunroof-ECU has a timer function which operates during 30 seconds after the ignition switch is turned to LOCK (OFF) position. If the timer does not operate, the cause may be a malfunction of the ETACS-ECU, sunroof-ECU or of the wiring harness or connector.	<ul style="list-style-type: none"> ● Malfunction of wiring harness or connector ● Malfunction of sunroof-ECU ● Malfunction of the ETACS-ECU

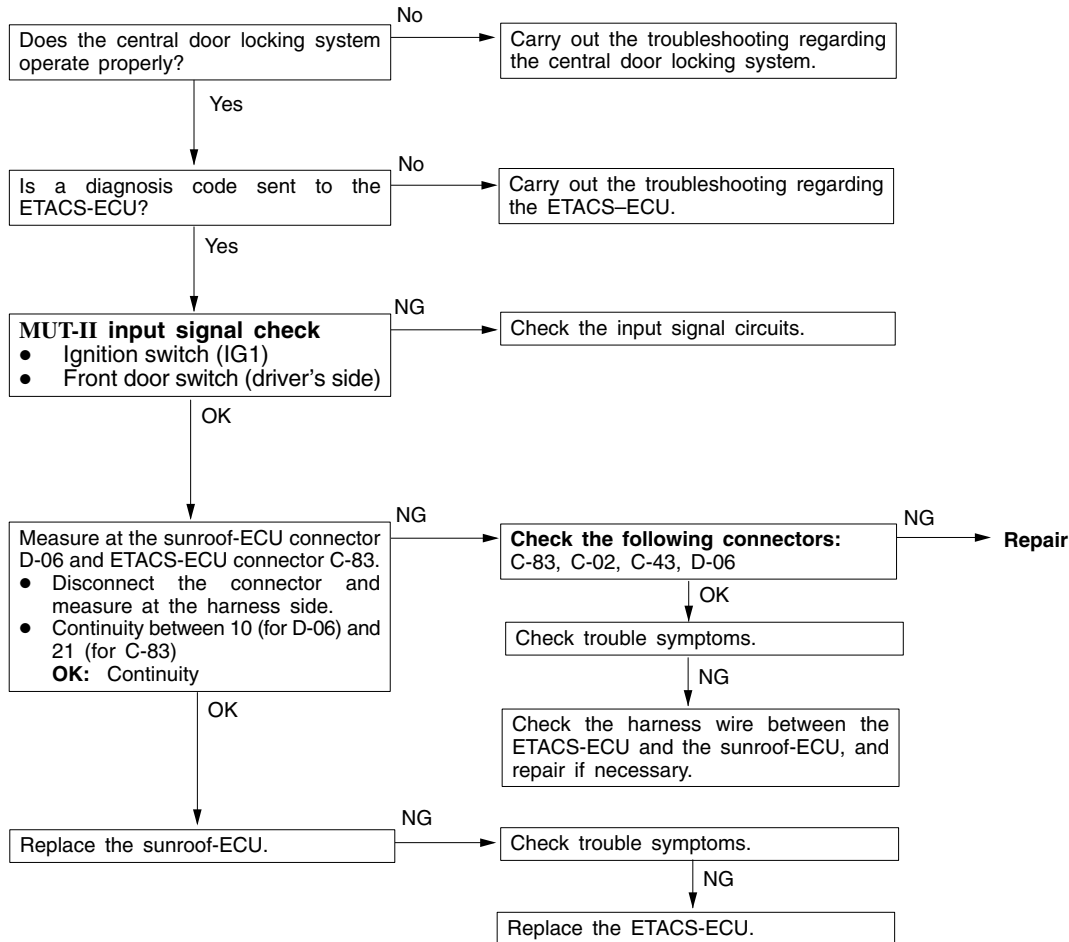


SUNROOF

REMOVAL AND INSTALLATION

Post-installation Operation

- Sunroof Water Test
- Sunroof Fit Adjustment

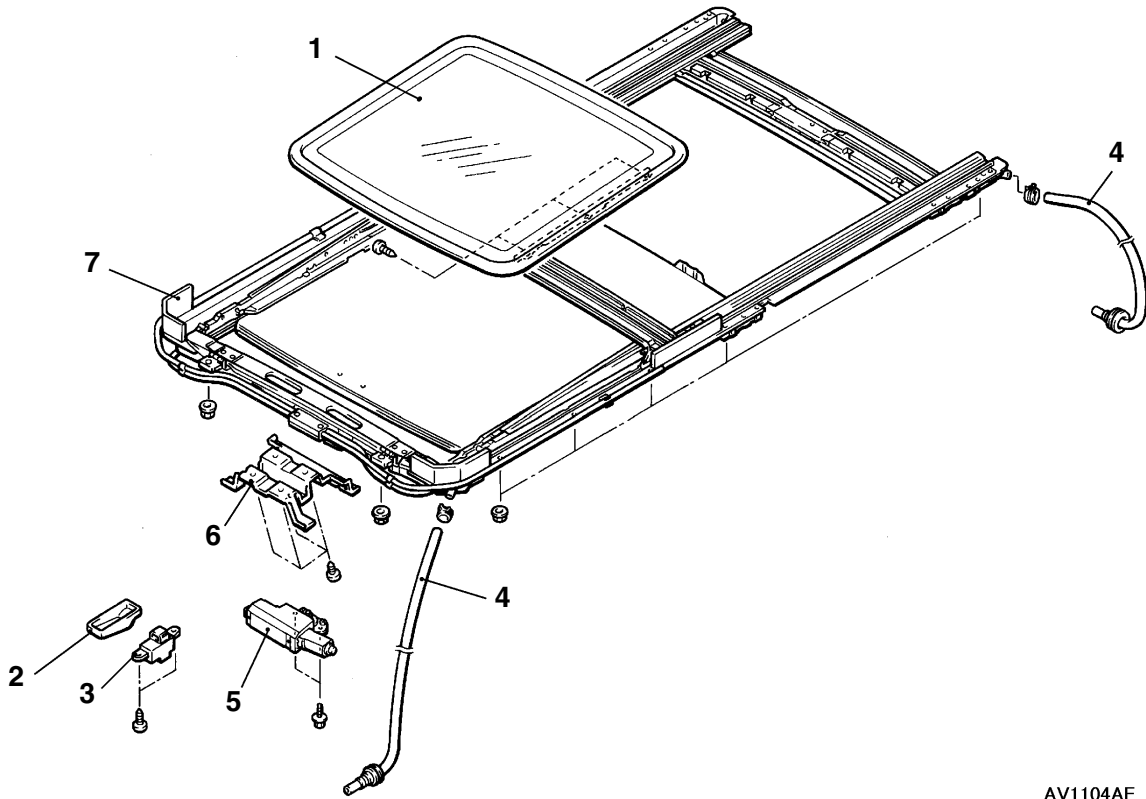

AV1104AE

1. Roof lid glass assembly

Sunroof switch removal steps

2. Sunroof switch cover
3. Sunroof switch

Drain hose removal steps

- Headlining
- Splash shield (Rear drain hose)
- Cowl side trim and instrument lower panel
- Engine-ECU, throttle valve control relay and throttle valve controller (Driver's-side drain hose)



4. Drain hose

Sunroof motor assembly removal steps


- Headlining
- 5. Sunroof motor assembly



Sunroof assembly removal steps

- Headlining
- 4. Drain hose
- 6. Room lamp bracket
- 7. Sunroof assembly



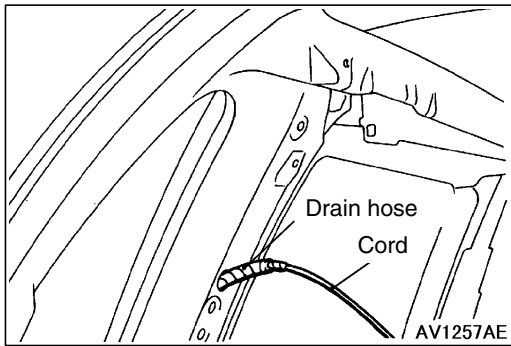

REMOVAL SERVICE POINTS

◀A▶ DRAIN HOSE REMOVAL

Tie a cord to the end of the drain hose, and wind tape around it so that there is no unevenness. Then pull the drain hose out from the passenger compartment.


◀B▶ SUNROOF MOTOR ASSEMBLY REMOVAL

Caution

Always close the roof lid glass fully before removing the sunroof motor. If the fully-closed positions of the roof lid glass and the sunroof motor are not the same, the sunroof will not operate properly.

NOTE


If there is a problem with the sunroof motor so that the roof lid glass cannot close fully, use an Allen key to turn the gear section of the sunroof motor to fully close the roof lid glass.

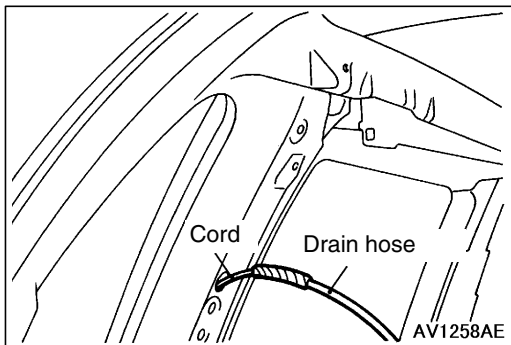

INSTALLATION SERVICE POINTS

▶A▶ DRAIN HOSE INSTALLATION

1. Tie the cord that was used during removal to the end of the drain hose, and wind tape around it so that there is no unevenness.
2. Pull the cord to pull through the drain hose
3. Install the grommet, and then position the drain hose so that it protrudes from the grommet as shown in the illustration.

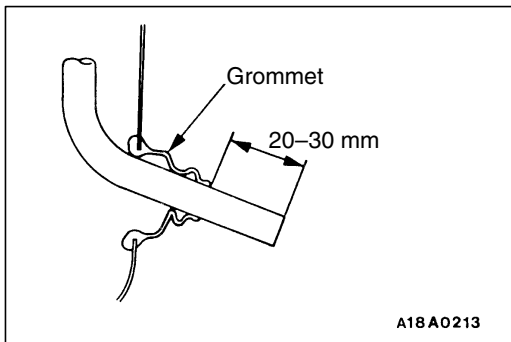

►B◄ SUNROOF MOTOR ASSEMBLY INSTALLATION




If the fully-closed position of the sunroof motor assembly is incorrect, set the sunroof motor to the fully-closed position by the following procedure, and then install the sunroof motor.

1. Remove the sunroof motor assembly with the connector still connected.
2. Set the roof lid glass to the fully-closed position.
3. Continue to push the sunroof close switch until the sunroof motor stops turning. Then install the sunroof motor assembly.

NOTE

Sunroof-ECU will initialize when the sunroof motor stops.

DISASSEMBLY AND REASSEMBLY

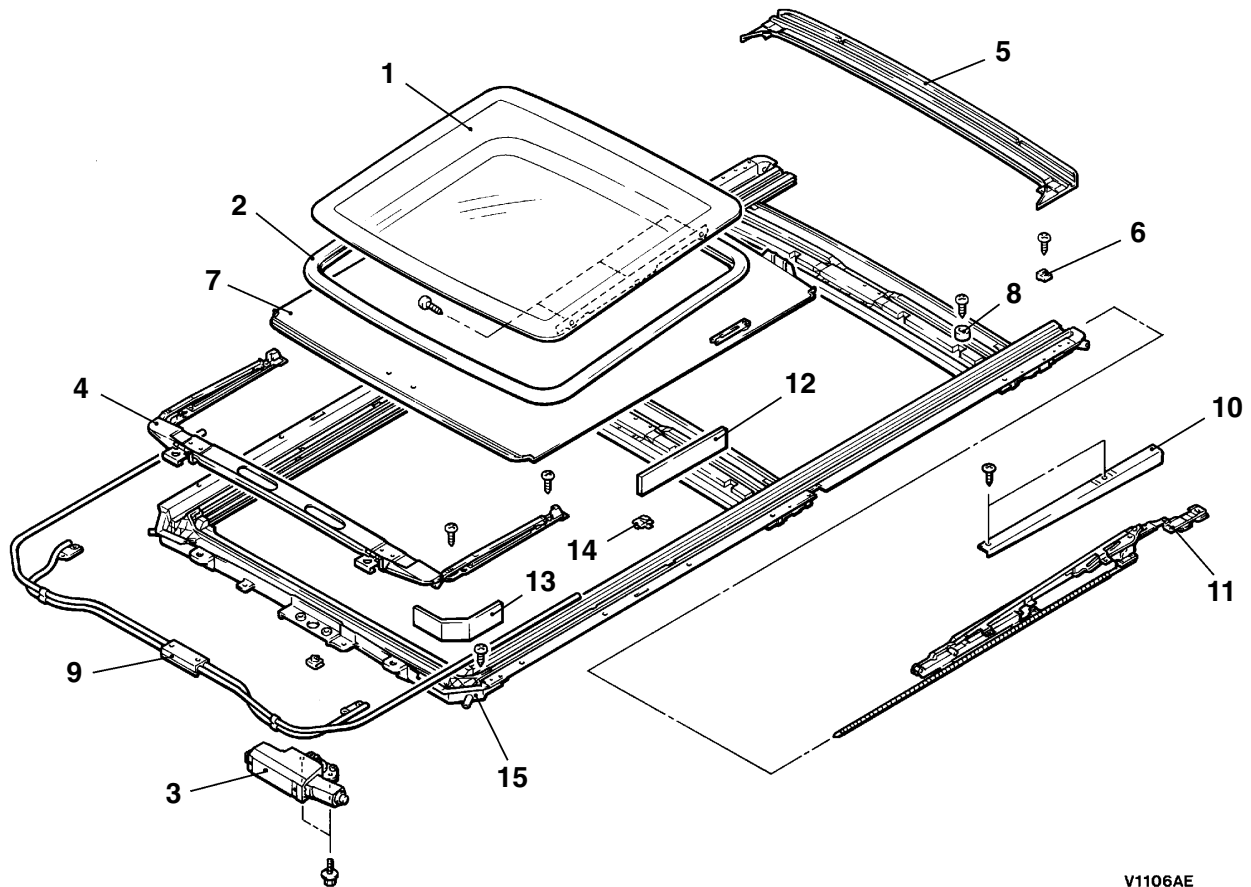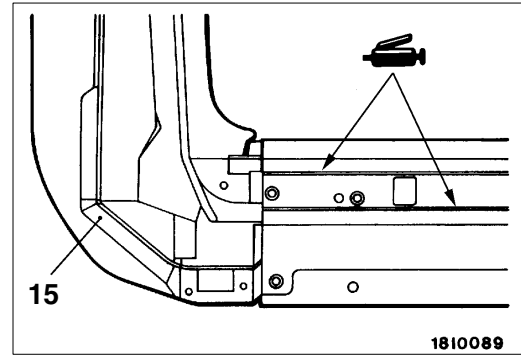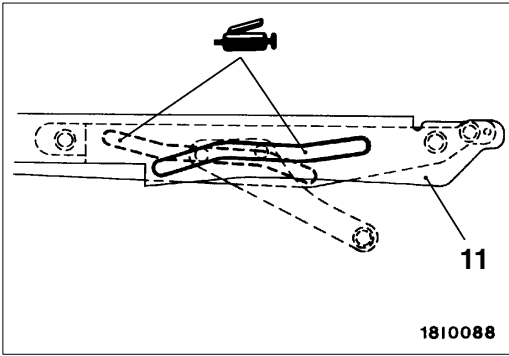

V1106AE
00007623

Disassembly steps

- | | |
|------------------------------|-----------------------------|
| 1. Roof lid glass assembly | 9. Cable guide casing |
| 2. Weatherstrip | 10. Side deflector |
| 3. Sunroof motor | 11. Drive cable assembly |
| 4. Roof wind deflector panel | 12. Seal |
| 5. Roof drip channel | 13. Seal |
| 6. Panel stopper | 14. Clamp |
| 7. Sunshade assembly | 15. Guide rail sub assembly |
| 8. Guide rail stopper | |

BODY

CONTENTS

GENERAL	2	ON-VEHICLE SERVICE	8
OUTLINE OF CHANGES	2	Power Window Safety Mechanism	
DOOR	2	Check	8
TROUBLESHOOTING	2	DOOR TRIM AND WATERPROOF	
		FILM	8
		DOOR GLASS AND REGULATOR	9

GENERAL

OUTLINE OF CHANGES

The following service procedures have been added. The other items are the same as before.

- Troubleshooting
- On-vehicle service
- Door trim and waterproof film inspection
- Door glass and regulator inspection

DOOR

TROUBLESHOOTING

The central door locking is controlled by the Smart Wiring System (SWS). For troubleshooting, refer to GROUP 54B – Troubleshooting.

DIAGNOSIS FUNCTION

INPUT SIGNAL CHECK POINTS <VEHICLES WITH ETACS-ECU>

1. Connect the MUT-II or a voltmeter to the diagnosis connector to check input signal. (Refer to GROUP 00 – How to Use Troubleshooting/Inspection Service Points.)
2. The following input signals can be checked:
 - Door lock actuator
 - LOCK
 - UNLOCK

NOTE

If all the input signals cannot be check by using the MUT-II, the diagnosis circuit may be defective.

INSPECTION CHART FOR TROUBLE SYMPTOMS


POWER WINDOWS

Symptom	Inspection procedure	Reference page
None of power window switches can operate any of windows.	1	42-3
Power window main switch can not operate any of windows. (However, each power window sub-switch can operate window.)	2	42-4
Power window main switch can not operate driver's window. (However, power window main switch can operate window except driver's window.)	3	42-4
Power window main switch can not operate passenger's window. (However, passenger's power window sub-switch can operate passenger's window.)	4	42-5
Power window main switch can not operate rear door windows. (However, rear power window sub-switches can operate rear door windows.)	5	42-5
Passenger's power window sub-switch can not operate passenger's window. (However, power window main switch can operate passenger's window.)	6	42-6
Rear power window sub-switches can not operate rear door windows. (However, power window main switch can operate rear door windows.)	7	42-7

INSPECTION PROCEDURE FOR TROUBLE SYMPTOMS


Inspection Procedure 1

None of power window switches can operate any of windows.	Probable cause
Power window relay, power window relay drive circuit or ETACS-ECU may be defective.	<ul style="list-style-type: none"> ● Malfunction of power window relay ● Malfunction of ETACS-ECU ● Malfunction of junction block ● Malfunction of wiring harness or connector

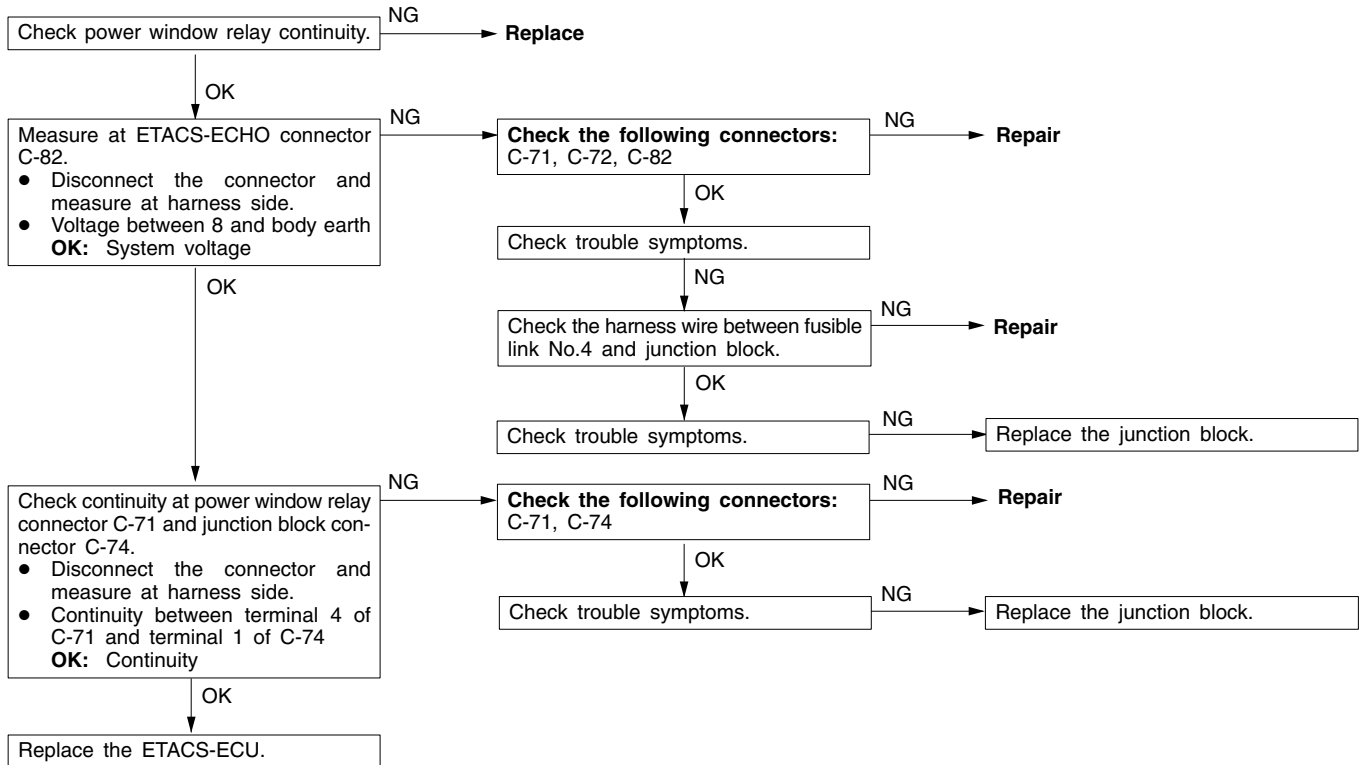


Inspection Procedure 2

Power window main switch can not operate any of windows. (However, each power window sub-switch can operate window.)	Probable cause
Power window main switch or its power supply circuit or earth circuit may be defective.	<ul style="list-style-type: none"> ● Malfunction of power window main switch ● Malfunction of wiring harness or connector

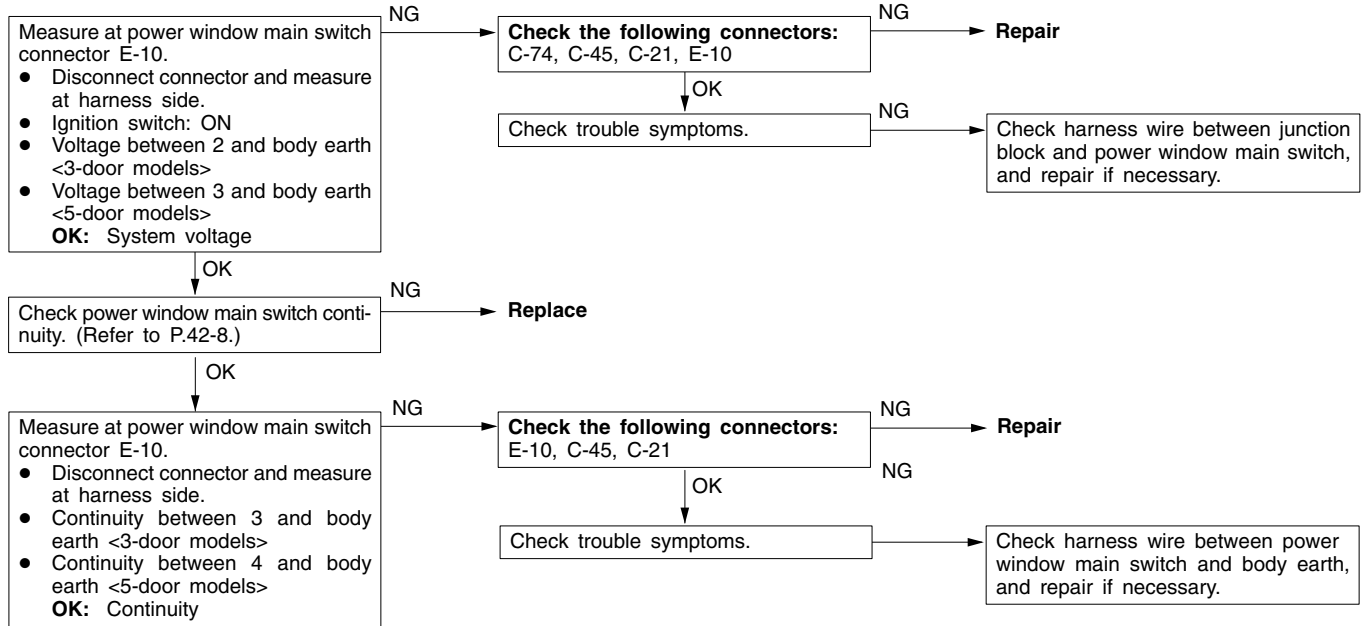


Inspection Procedure 3

Power window main switch can not operate driver's window. (However, power window main switch can operate window except driver's window.)	Probable cause
Power window main switch, power window motor, or harness or connector between power window main switch and power window motor may be defective.	<ul style="list-style-type: none"> ● Malfunction of power window main switch ● Malfunction of power window motor ● Malfunction of wiring harness or connector

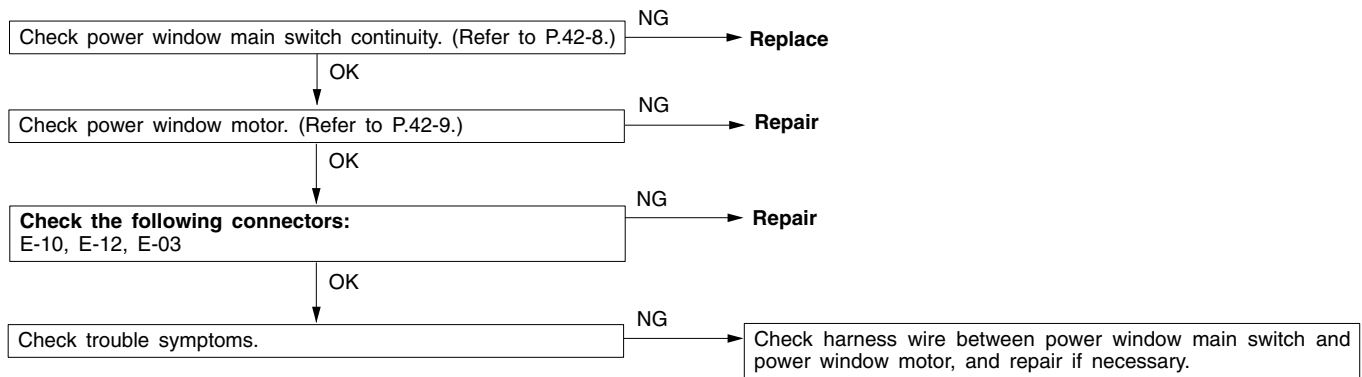


Inspection Procedure 4

<p>Power window main switch can not operate passenger's window. (However, passenger's power window sub-switch can operate passenger's window.)</p>	<p>Probable cause</p>
<p>There may be short circuit or open circuit in communication line from the power window main switch to passenger's power window sub-switch, or passenger's power window sub-switch or power window main switch may be defective.</p>	<ul style="list-style-type: none"> ● Malfunction of power window main switch ● Malfunction of passenger's power window sub-switch ● Malfunction of wiring harness or connector

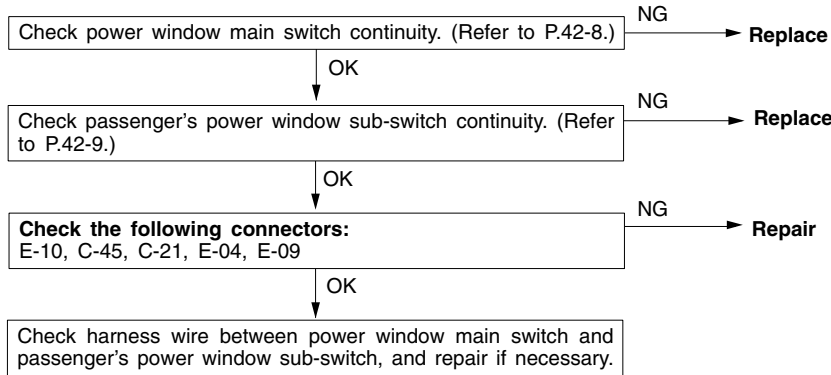


Inspection Procedure 5

<p>Power window main switch can not operate rear door windows. (However, rear power window sub-switches can operate rear door windows.)</p>	<p>Probable cause</p>
<p>There may be short circuit or open circuit in communication line from the power window main switch to rear power window sub-switch, or rear power window sub-switch or power window main switch may be defective.</p>	<ul style="list-style-type: none"> ● Malfunction of power window main switch ● Malfunction of rear power window sub-switch ● Malfunction of wiring harness or connector

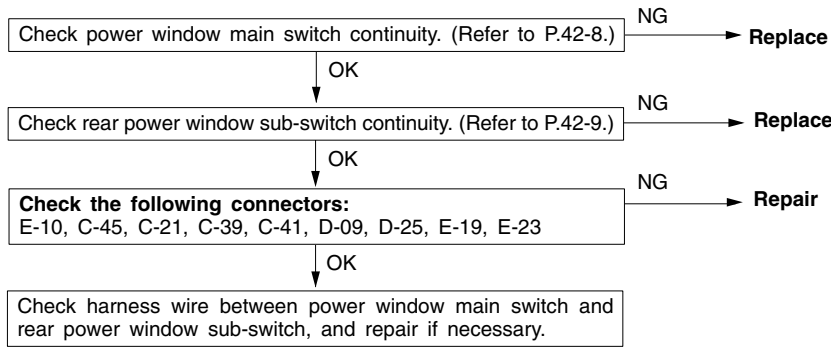


Inspection Procedure 6


Passenger’s power window sub-switch can not operate passenger’s window. (However, power window main switch can operate passenger’s window.)	Probable cause
Power supply circuit or earth circuit of the passenger’s power window sub-switch, passenger’s power window sub-switch or passenger’s power window motor may be defective.	<ul style="list-style-type: none"> ● Malfunction of passenger’s power window sub-switch ● Malfunction of passenger’s power window motor ● Malfunction of wiring harness or connector

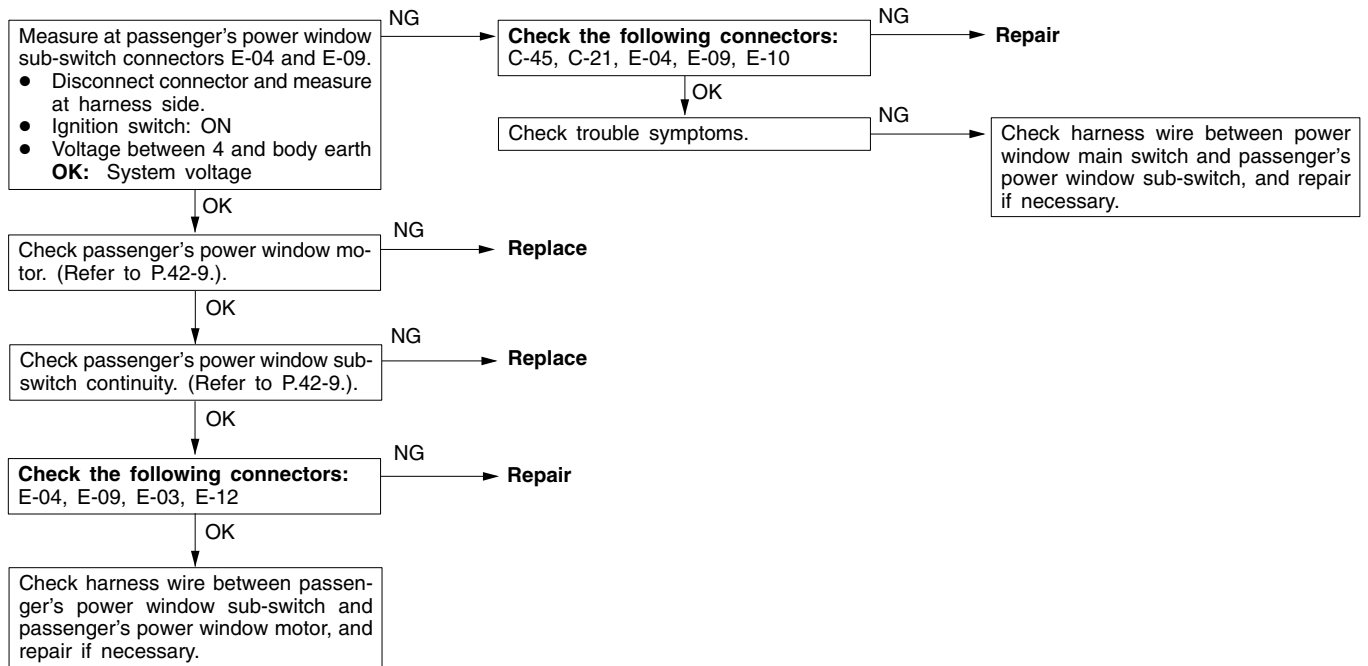

Inspection Procedure 7

Rear power window sub-switches can not operate rear door windows. (However, power window main switch can operate rear door windows.)	Probable cause
Power supply circuit or earth circuit of the rear power window sub-switches, rear power window sub-switches or rear power window motors may be defective.	<ul style="list-style-type: none"> ● Malfunction of rear power window sub-switches ● Malfunction of rear power window motors ● Malfunction of wiring harness or connector

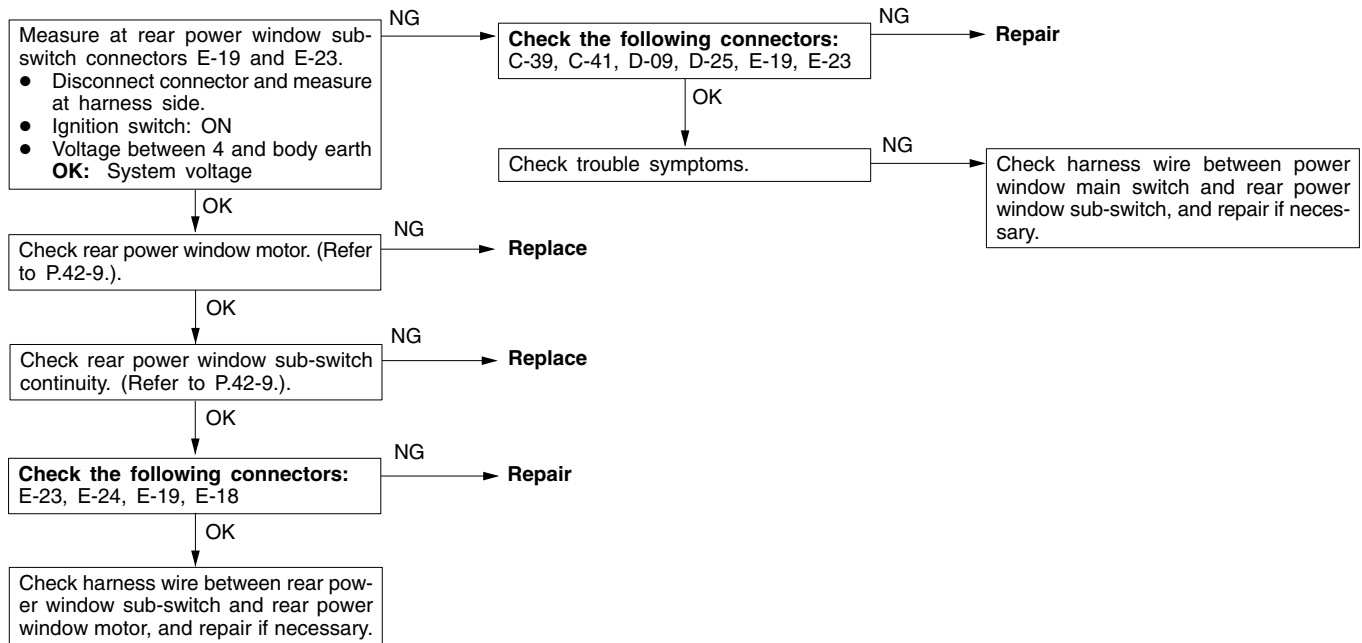

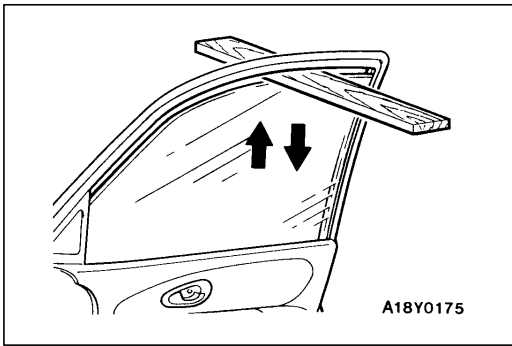

ON-VEHICLE SERVICE

POWER WINDOW SAFETY MECHANISM CHECK <FRONT DRIVER'S SIDE POWER WINDOW>


1. Place a wooden board about 10 mm thick as shown. Then, raise the window glass.
2. Check that the window lowers by about 150 mm when the window clamps the board. If this doesn't happen, do troubleshooting. (Refer to GROUP 54B.)

DOOR TRIM AND WATERPROOF FILM


INSPECTION

POWER WINDOW MAIN SWITCH CONTINUITY CHECK

<3-door models>

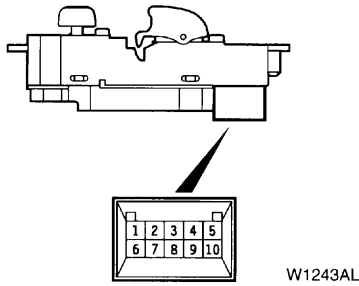

<5-door models>

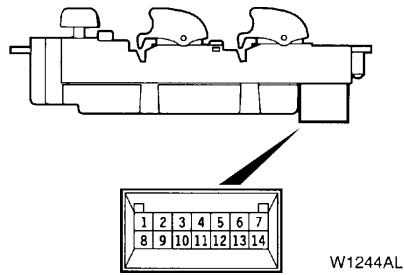


<3-door models>

Switch position		Terminal No.			
		Passenger side			
		3	4	5	9
Unlock	UP	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	OFF	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>
	DOWN	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Lock	UP	<input type="radio"/>			<input type="radio"/>
	OFF	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>
	DOWN	<input type="radio"/>	<input type="radio"/>		

<5-door models>

Switch position		Terminal No.															
		Front door								Rear door							
		Driver side				Passenger side				Driver side				Passenger side			
		3	5	7	8	1	3	5	14	3	5	6	13	2	3	5	9
Un-lock	UP																
	OFF																
	DOWN																
Lock	UP																
	OFF																
	DOWN																

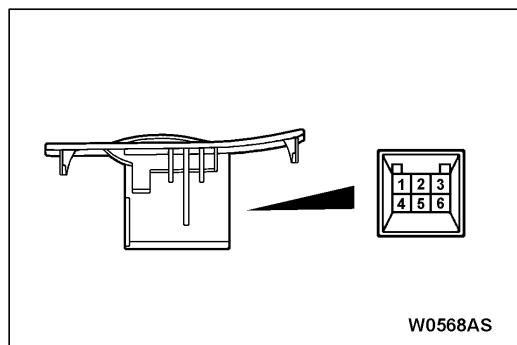

POWER WINDOW SUB SWITCH CONTINUITY CHECK

Switch position	Terminal No.				
	1	2	4	5	6
UP					
OFF					
DOWN					

DOOR GLASS AND REGULATOR

INSPECTION

POWER WINDOW MOTOR CHECK


1. Connect the battery directly to the motor terminals.
2. Check that the motor rotates smoothly.
3. Reconnect the battery to the motor terminals vice versa.
4. Check that the motor rotates in the reverse direction.
5. If malfunction is present, replace the window regulator assembly.

NOTES



SERVICE BULLETIN

QUALITY INFORMATION ANALYSIS
OVERSEAS SERVICE DEPT. MITSUBISHI MOTORS CORPORATION

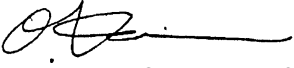SERVICE BULLETIN		No.: ESB-00E51-501	
		Date: 2001-08-28	<Model> <M/Y>
Subject: CORRECTION TO MAINTENANCE PROCEDURE FOR BACK DOOR GLASS		(EC)PAJERO PININ/ MONTERO iO	00-10
Group: EXTERIOR		Draft No.: 00SY091416 (H60, H70)	
CORRECTION	INTERNATIONAL CAR ADMINISTRATION OFFICE	 O. Kai - E.V.P. & G.M. After Sales Service Dept.	

1. Description:

This Service Bulletin informs you that correction has been made to the maintenance procedure for back door glass.

2. Applicable Manuals:

Manual	Pub. No.	Language	Page(s)
'00 PAJERO PININ Workshop Manual Chassis	CKRE00E1	(English)	42-16, 17
	CKRF00E1	(French)	
	CKRG00E1	(German)	
	CKRD00E1	(Dutch)	
	CKRI00E1	(Italian)	
'00 MONTERO iO Workshop Manual Chassis	CKRS00E1	(Spanish)	

BACK DOOR GLASS


REMOVAL AND INSTALLATION

Pre-removal and Post-installation Operation

- High-mounted Stop Lamp Assembly Removal and Installation (Refer to GROUP 52A).
- Back Door Trim Removal and Installation (Refer to P. 42-34).

See next page.

<Incorrect>

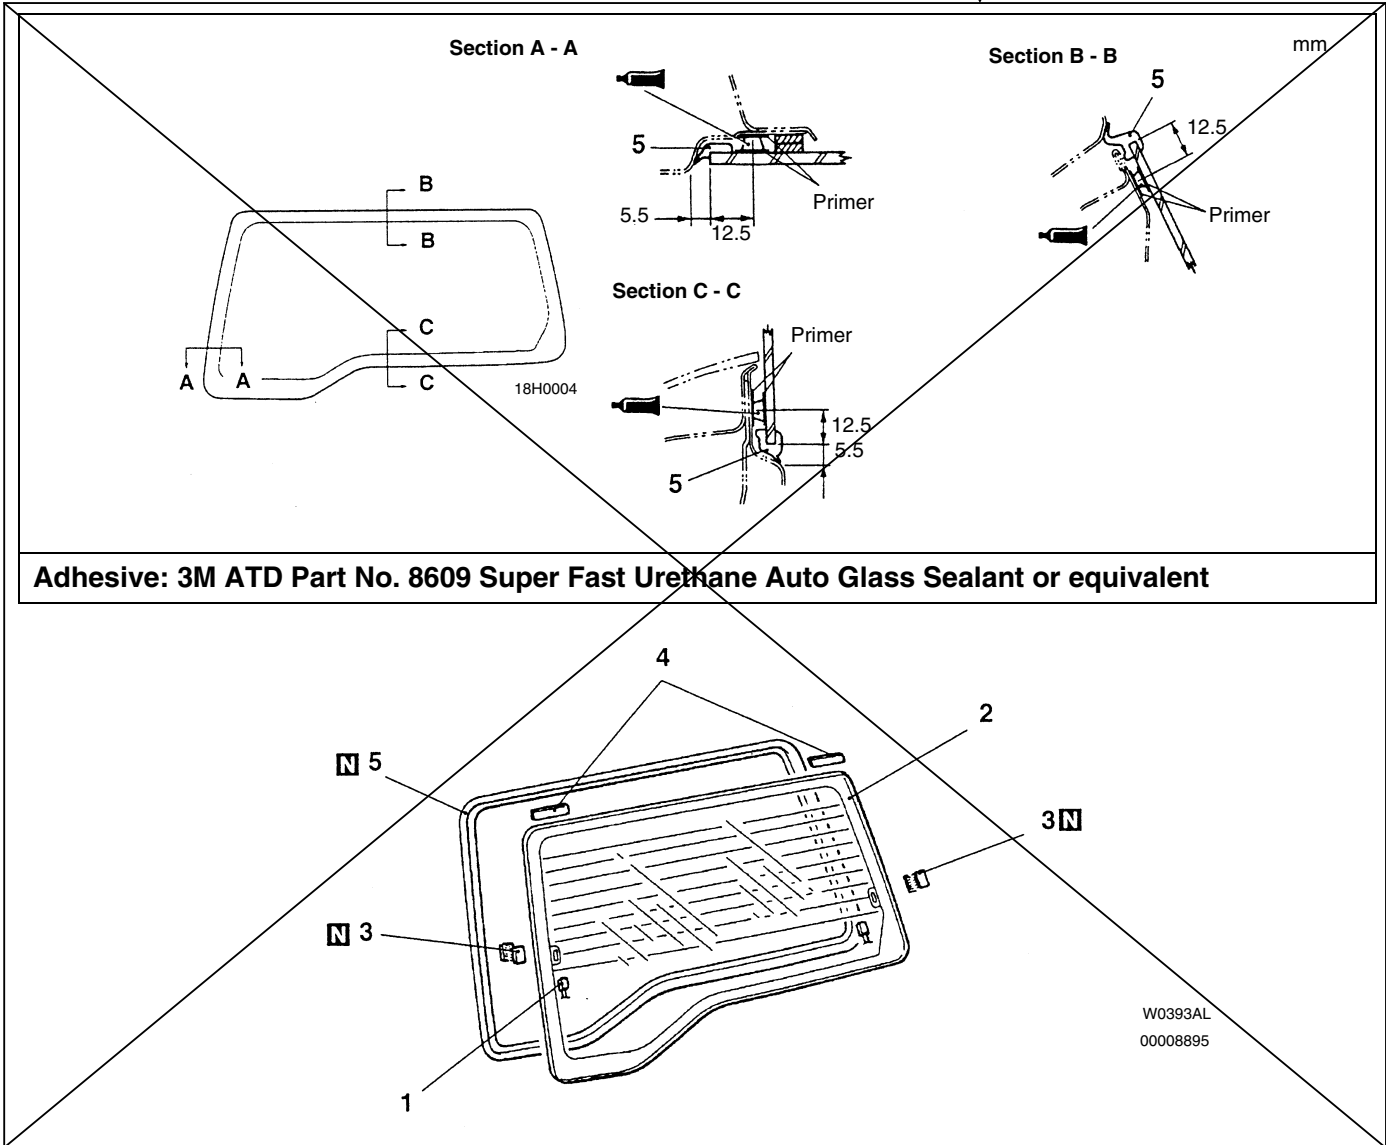


Removal steps


- ◀A▶▶A◀ 1. Harness connector
- ▶A◀ 2. Back door glass
- ▶A◀ 3. Dual lock fastener

- ▶A◀ 4. Glass stopper
- ▶A◀ 5. Window dam

<Deleted>

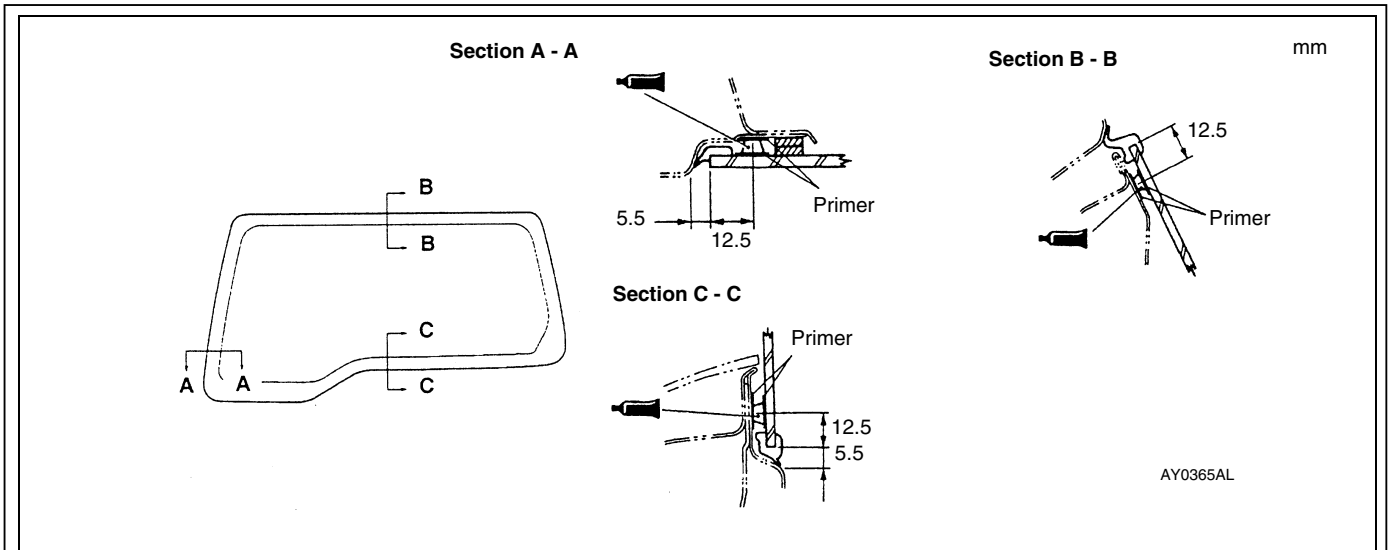

Adhesive: 3M ATD Part No. 8609 Super Fast Urethane Auto Glass Sealant or equivalent

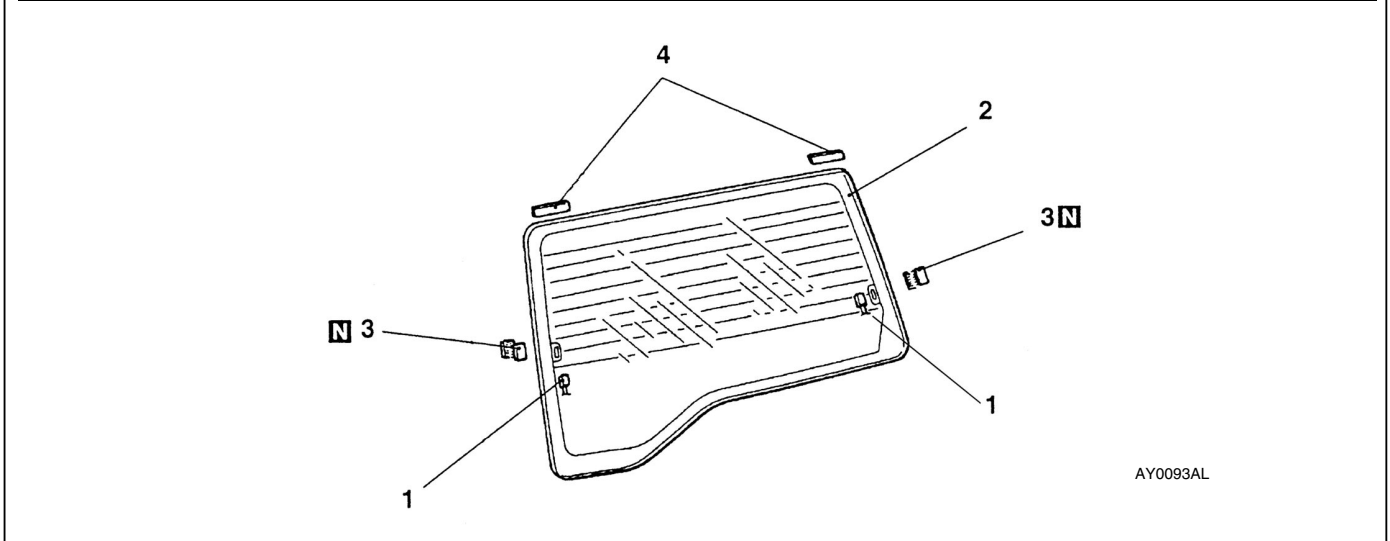

REMOVAL SERVICE POINT


◀A▶ BACK DOOR GLASS REMOVAL

Remove the back door glass in the same manner as for the windshield. (Refer to P 42-11.)

INSTALLATION SERVICE POINT




▶A◀ WINDOW DAM/DUAL LOCK FASTENER/GLASS STOPPER/BACK DOOR GLASS INSTALLATION

1. Use a isopropyl alcohol to decrease the glass and body surfaces where the window dam, dual lock fasteners and glass stoppers are installed.
2. Install the window dam.
3. Install the dual lock fasteners to the concavities on the body panel and the glass stoppers to the hole on the body panel respectively.
4. Install the dual lock fasteners to the windshield in the positions corresponding to the ones on the body panel where the dual lock fasteners have been installed.
5. Apply the primer and adhesive.
6. Install the glass in the same manner as for the windshield. (Refer to P.42 –12.)

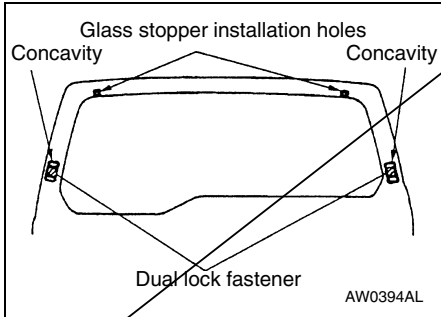

<Incorrect>

See next page.

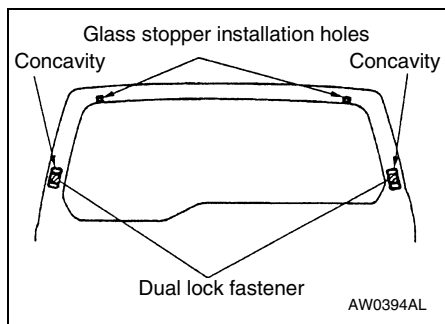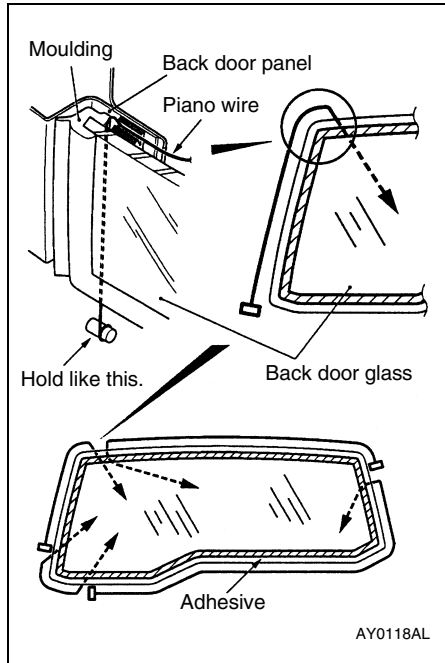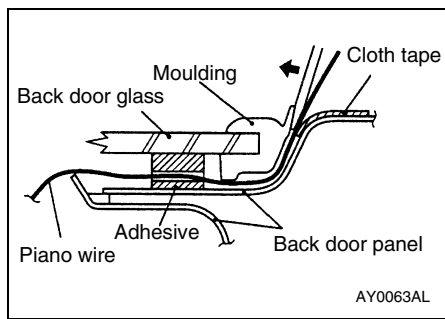

REMOVAL SERVICE POINT

◀A▶ BACK DOOR GLASS REMOVAL

1. Put matchmarks on the back door and the back door glass.
2. For protection of painted surface of the back door, apply cloth tape all around the back door on which the back door glass is fitted.
3. Using a pointed drill, make a hole in the bonded portion of the back door.
4. From inside the vehicle, pass the piano wire through the hole.
5. Put the piano wire along the bonded surface from outside the vehicle, and hold it at its end.
6. Slowly pull the piano wire inside the vehicle in the direction in which the piano wire outside the vehicle is held, and remove the adhesive in the numerical order as shown.
 - (1) From left up to left down direction, pull the piano wire inside the vehicle, and remove the adhesive.
 - (2) From left up to right up direction, pull the piano wire inside the vehicle, and remove the adhesive.
 - (3) From right up to right down to left down direction, pull the piano wire inside the vehicle, and remove the adhesive.
 - (4) Pass the piano wire outside the vehicle through the inside of the vehicle, pull both ends of the piano wire toward the inside of the vehicle, and remove the adhesive.

Caution

When the adhesive is removed, do not alternately pull the piano wires. This may give damage to the moulding.

7. Remove the back door glass from the back door panel.
8. Remove the body to windshield adhesive by the same procedure as for the windshield. (Refer to P.42 –11.)

INSTALLATION SERVICE POINT

▶A◀ GLASS STOPPER/DUAL LOCK FASTENER/BACK DOOR GLASS INSTALLATION

1. Using unleaded gasoline, degrease the glass and body surface on which the dual lock fasteners and the glass stoppers are installed.
2. Install the dual lock fasteners correctly on the specified locations of the body flange (convexities on the body panel).
3. Install the dual lock fasteners and the glass stoppers on the back door glass at the positions that correspond to those of the body flange on which the dual lock fasteners and the glass stoppers are installed.
4. Using the sponge saturated with primer, apply primer evenly to the specified areas around entire surface of the back door glass and the body.
5. Install the back door glass by the same procedures as for the windshield. (Refer to P.42 –12.)